


1996 JET SKI® TS PARTS DIAGRAM

Electrical Equipment

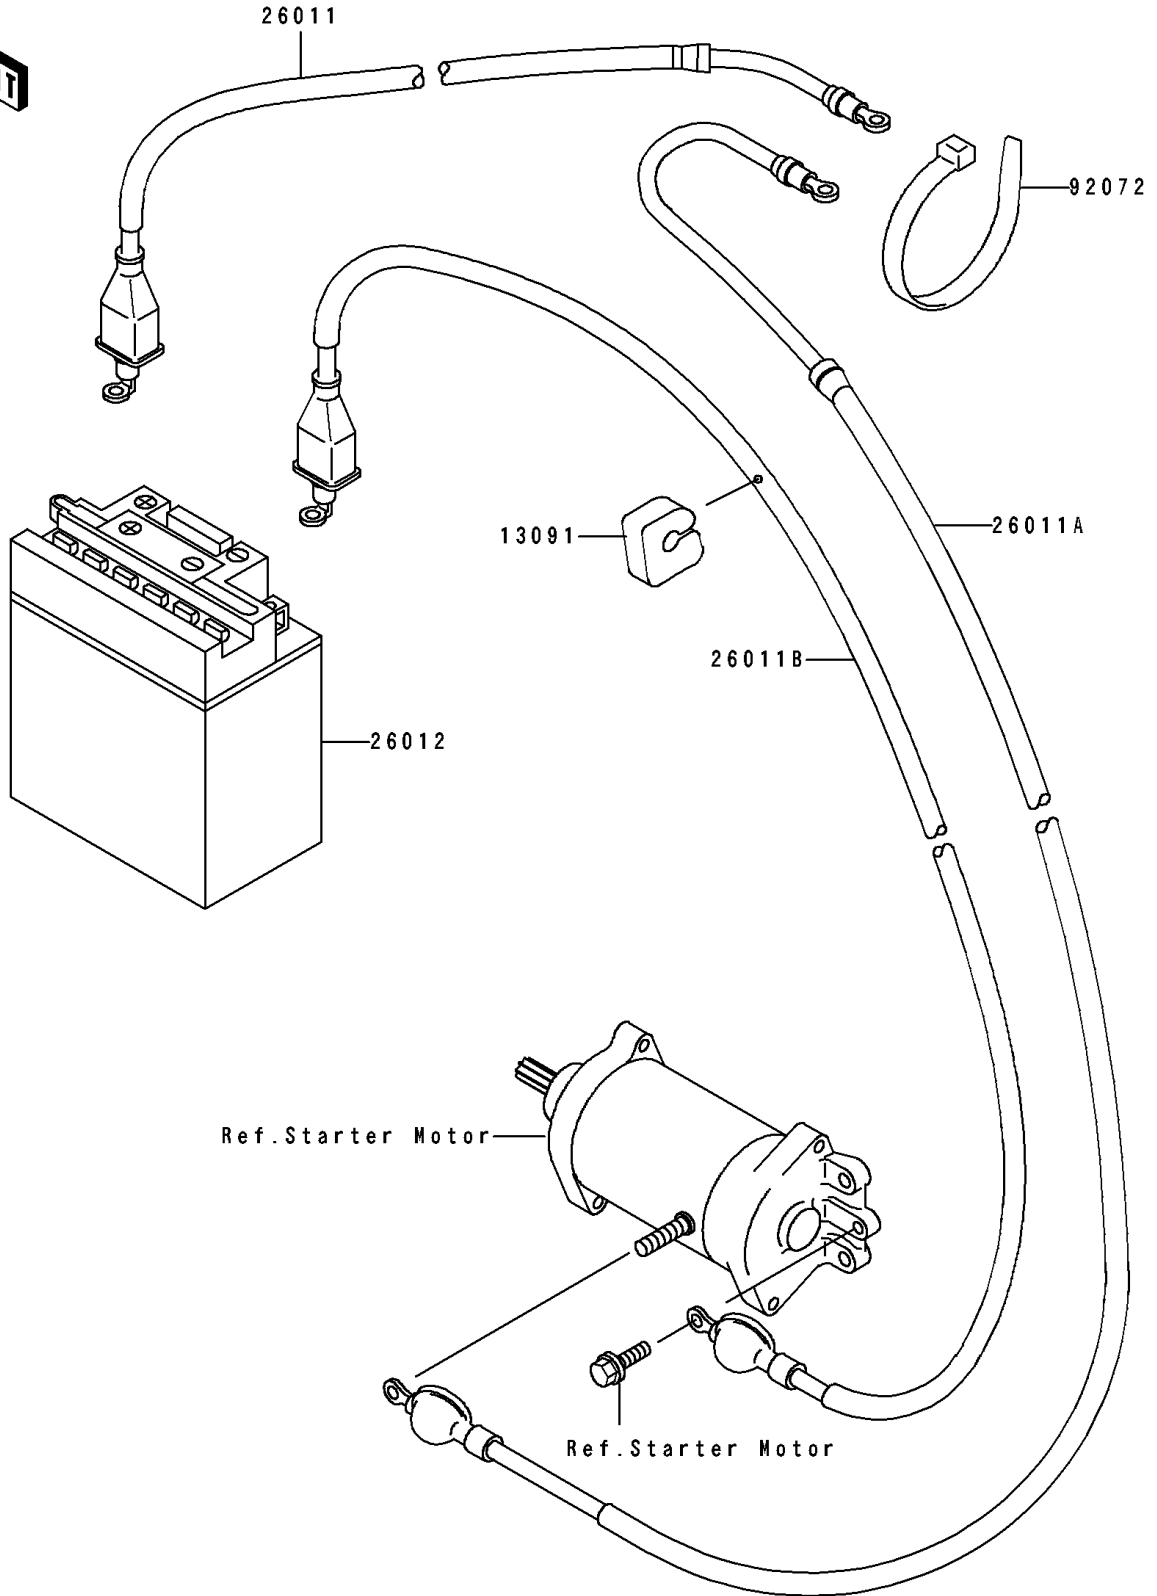

F3181



1996 JET SKI® TS PARTS LIST

Electrical Equipment

| ITEM NAME | PART NUMBER | QUANTITY |
|--|-------------|----------|
| HOLDER (Ref # 13091) | 13091-3712 | 1 |
| WIRE-LEAD,BATTERY-RELAY (Ref # 26011) | 26011-3785 | 1 |
| WIRE-LEAD,RELAY-STARTER (Ref # 26011A) | 26011-3786 | 1 |
| WIRE-LEAD,BATTERY-STARTER (Ref # 26011B) | 26011-3787 | 1 |
| BATTERY,YB16CL-B,12V 19AH (Ref # 26012) | 26012-3716 | 1 |
| BAND (Ref # 92072) | 92072-3778 | 1 |