

1972 PARTS LIST

OPTIONAL PARTS

ITEM NAME	PART NUMBER	QUANTITY
PEDAL GR CHG RH OPT (Ref # 1)	13156-037	1
PEDAL-BRAKE (OPT) (Ref # 2)	43001-040	1
BOLT-BRAKE PEDAL (Ref # 3)	92001-092	1
WASHER BRAKE PEDAL (Ref # 4)	92022-085	1
WASHER PLAIN 10MM (Ref # 5)	411B1000	1
SPRING-BRAKE PEDAL (Ref # 6)	43005-014	1
NUT, 10MM (Ref # 7)	315B1000	1
BRACKET-REAR BRAKE CABLE (Ref # 8)	32087-012	1
CABLE-REAR BRAKE (Ref # 9)	54022-019	1
SWITCH ASSY-ENG STOP (Ref # 10~12)	46027-006	1
WASHER SPRING 3MM (Ref # 11)	461F0300	1
SCREW-PAN-HEAD 3X6 (Ref # 12)	220B0306	1
TAIL PIECE (Ref # 13)	18048-013	1
SPARK ARRESTER COMP (Ref # 14)	18033-044	1
BRACKET-MUFFLER (Ref # 15)	18024-016	1
BOLT,6X10 (Ref # 16)	112G0610	2
WASHER LOCK 6MM (Ref # 17)	464H0600	1
BOLT-HEX HEAD,10X35 (Ref # 18)	110B1035	1
WASHER PLAIN 10MM (Ref # 19)	410B1000	1
WASHER SPRING 10MM (Ref # 20)	461F1000	1
NUT 10MM (Ref # 21)	312B1000	1
BOLT-SMALL-UPSET,8X1 (Ref # 22)	115B0814	1
WASHER SPRING 8MM (Ref # 23)	461F0800	1
TAIL PIECE (Ref # 24)	18048-016	1
SCREW PAN HEAD 6X20 (Ref # 25)	220B0620	1