


2008 NINJA® ZX™-10R PARTS DIAGRAM

Front Wheel

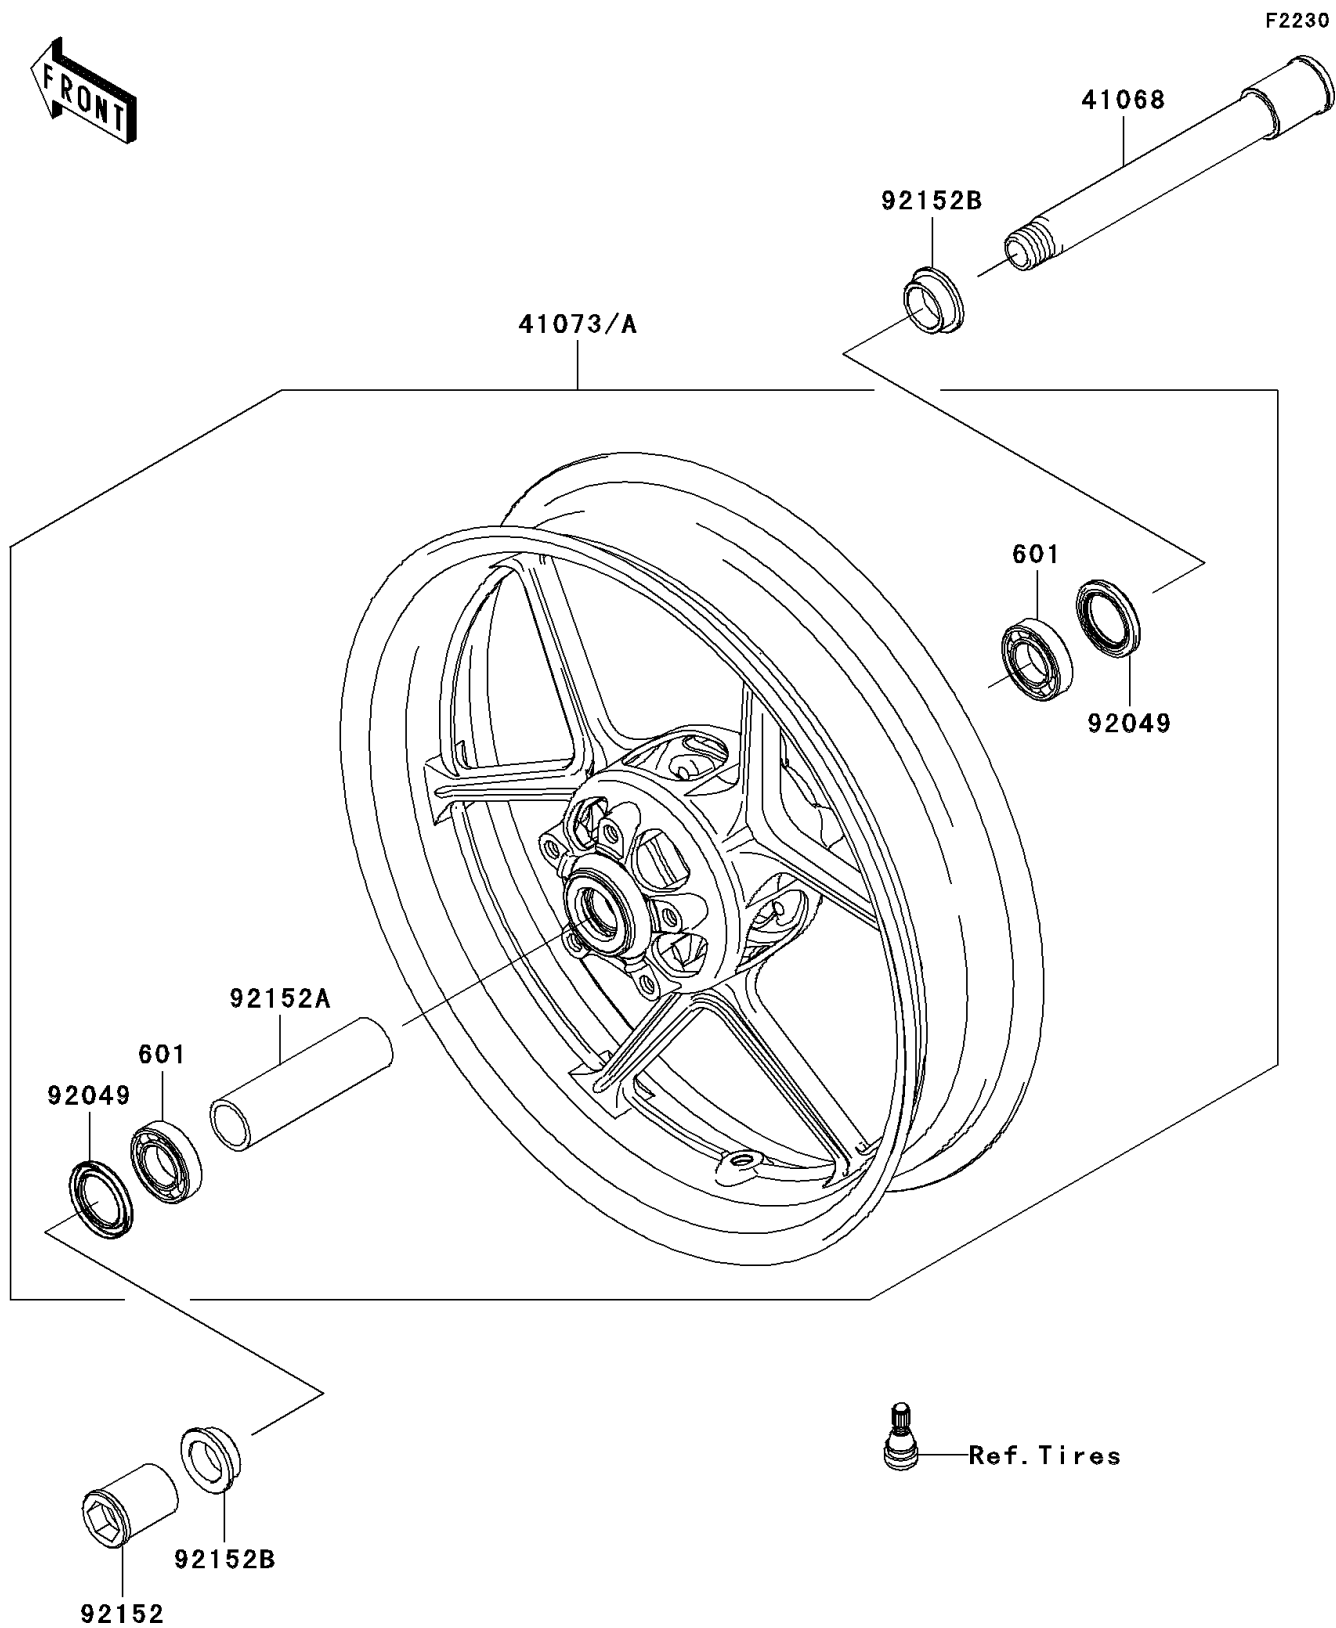

2008 NINJA® ZX™-10R PARTS LIST

Front Wheel

| ITEM NAME | PART NUMBER | QUANTITY |
|--|----------------|----------|
| BEARING-BALL,#6005UU (Ref # 601) | 601B6005UU | 1 |
| AXLE,FR (Ref # 41068) | 41068-0049 | 1 |
| WHEEL-ASSY,FR,BLACK (Ref # 41073) | 41073-0084-18F | 1 |
| WHEEL-ASSY,FR,BLACK/GREEN (Ref # 41073A) | 41073-0084-19K | 1 |
| SEAL-OIL,BJN-C2 32X47X5 (Ref # 92049) | 92049-0050 | 1 |
| COLLAR,FR AXLE,LH,L=44.5 (Ref # 92152) | 92152-0240 | 1 |
| COLLAR,FR HUB,L=115 (Ref # 92152A) | 92152-0242 | 1 |
| COLLAR,FR AXLE,L=13 (Ref # 92152B) | 92152-0289 | 1 |