


1988 Eliminator

PARTS DIAGRAM

Transmission

E1361-0170

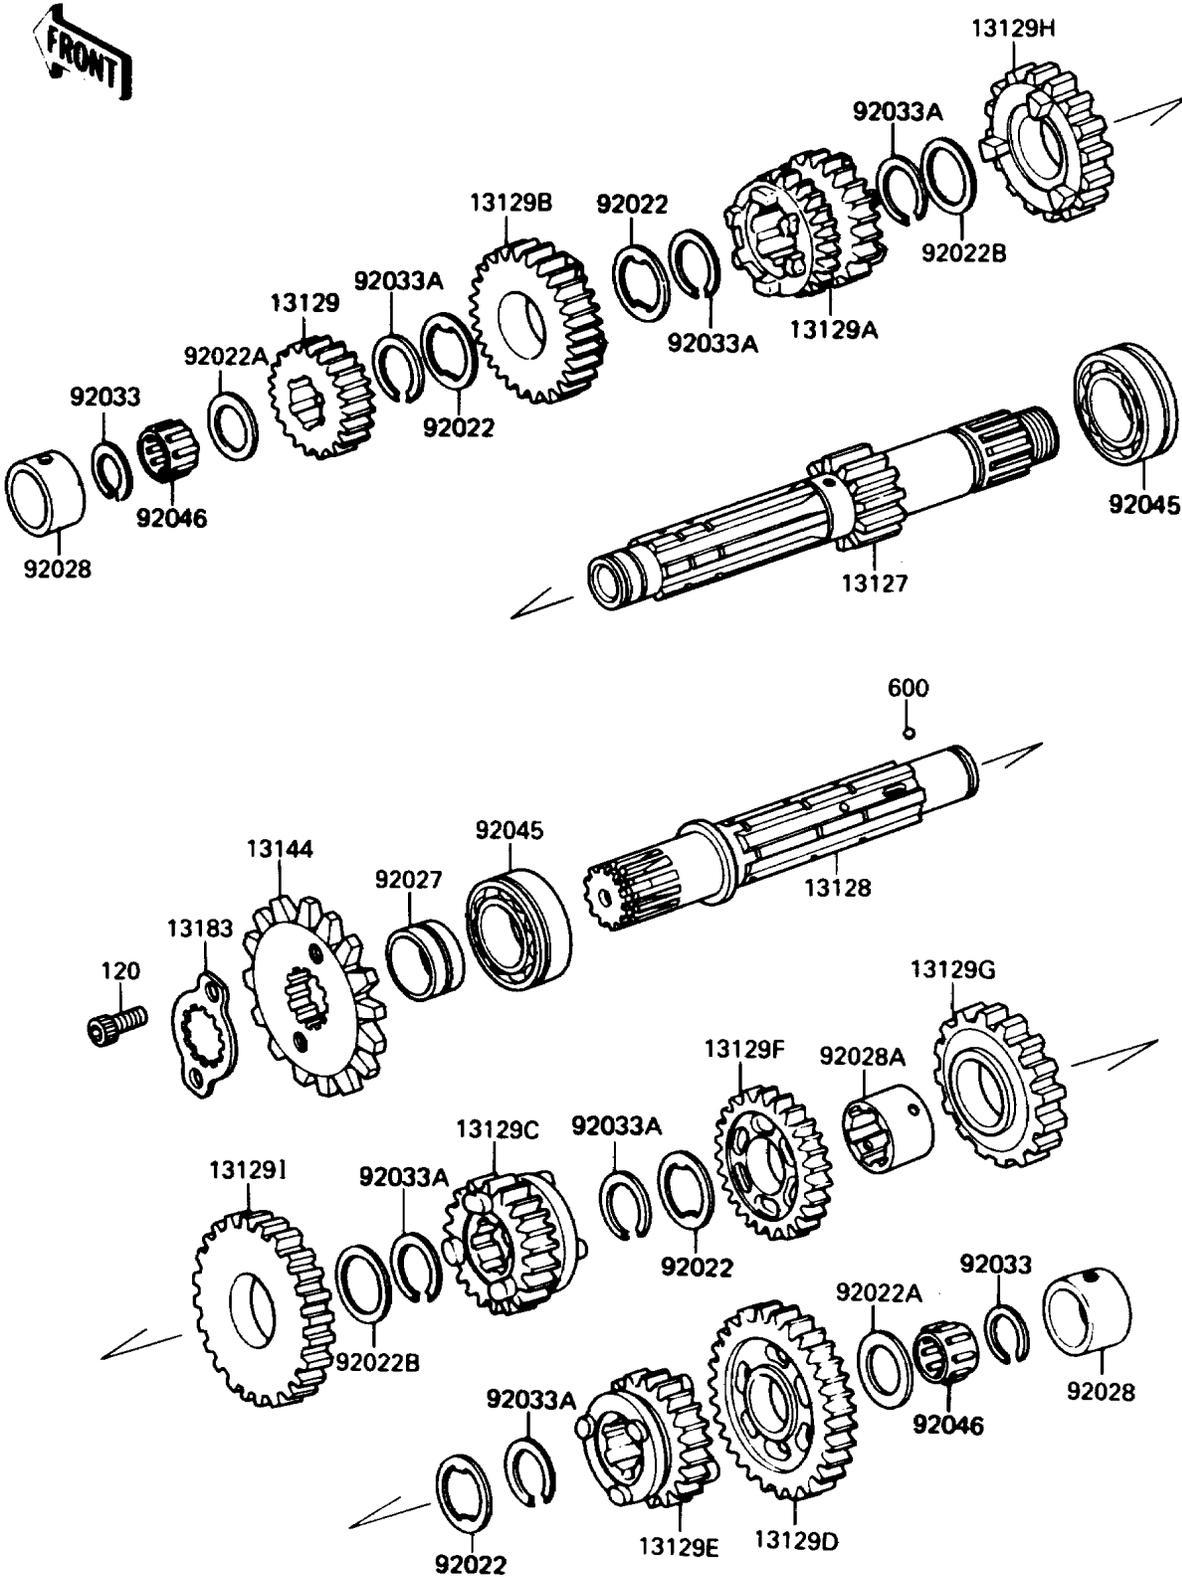

1988 Eliminator

PARTS LIST

Transmission

ITEM NAME	PART NUMBER	QUANTITY
SHAFT-TRANSMISSION INPUT (Ref # 13127)	13127-1134	1
SHAFT-TRANSMISSION OUTPUT (Ref # 13128)	13128-1147	1
GEAR,INPUT 2ND,19T (Ref # 13129)	13129-1086	1
GEAR,INPUT 3RD&4TH,22T&25T (Ref # 13129A)	13129-1087	1
GEAR,INPUT TOP,28T (Ref # 13129B)	13129-1089	1
GEAR,OUTPUT TOP,25T (Ref # 13129C)	13129-1095	1
GEAR,OUTPUT LOW,39T (Ref # 13129D)	13129-1254	1
GEAR,OUTPUT 5TH,27T (Ref # 13129E)	13129-1255	1
GEAR,OUTPUT 3RD,31T (Ref # 13129F)	13129-1781	1
GEAR,OUTPUT 4TH,29T (Ref # 13129G)	13129-1782	1
GEAR,INPUT 5TH,27T (Ref # 13129H)	13129-1882	1
GEAR,OUTPUT 2ND,34T (Ref # 13129I)	13129-1883	1
SPROCKET-OUTPUT,14T (Ref # 13144)	13144-1126	1
PLATE,SPROCKET (Ref # 13183)	13169-1658	1
WASHER,TOOTHED,25.3X30X1 (Ref # 92022)	92022-1072	4
WASHER,20.5X30X1,STEEL (Ref # 92022A)	92022-112	2
WASHER,25.3X30X1 (Ref # 92022B)	92022-161	2
COLLAR,ENGINE SPROCKET (Ref # 92027)	92027-1302	1
BUSHING,25X33X14 (Ref # 92028)	92028-1426	2
BUSHING (Ref # 92028A)	92028-1437	1
RING-SNAP,20MM (Ref # 92033)	92033-015	2
RING-SNAP,24MM (Ref # 92033A)	92033-026	6
BEARING-BALL,#6205NX3 (Ref # 92045)	92045-1013	2
BEARING-NEEDLE,20R2513P (Ref # 92046)	92046-044	2
BOLT-SOCKET,6X10 (Ref # 120)	120P0610	2
BALL-STEEL,5/32" (Ref # 600)	600A0500	3