


# 1988 Eliminator

## PARTS DIAGRAM

### Front Wheel

F2230-0158

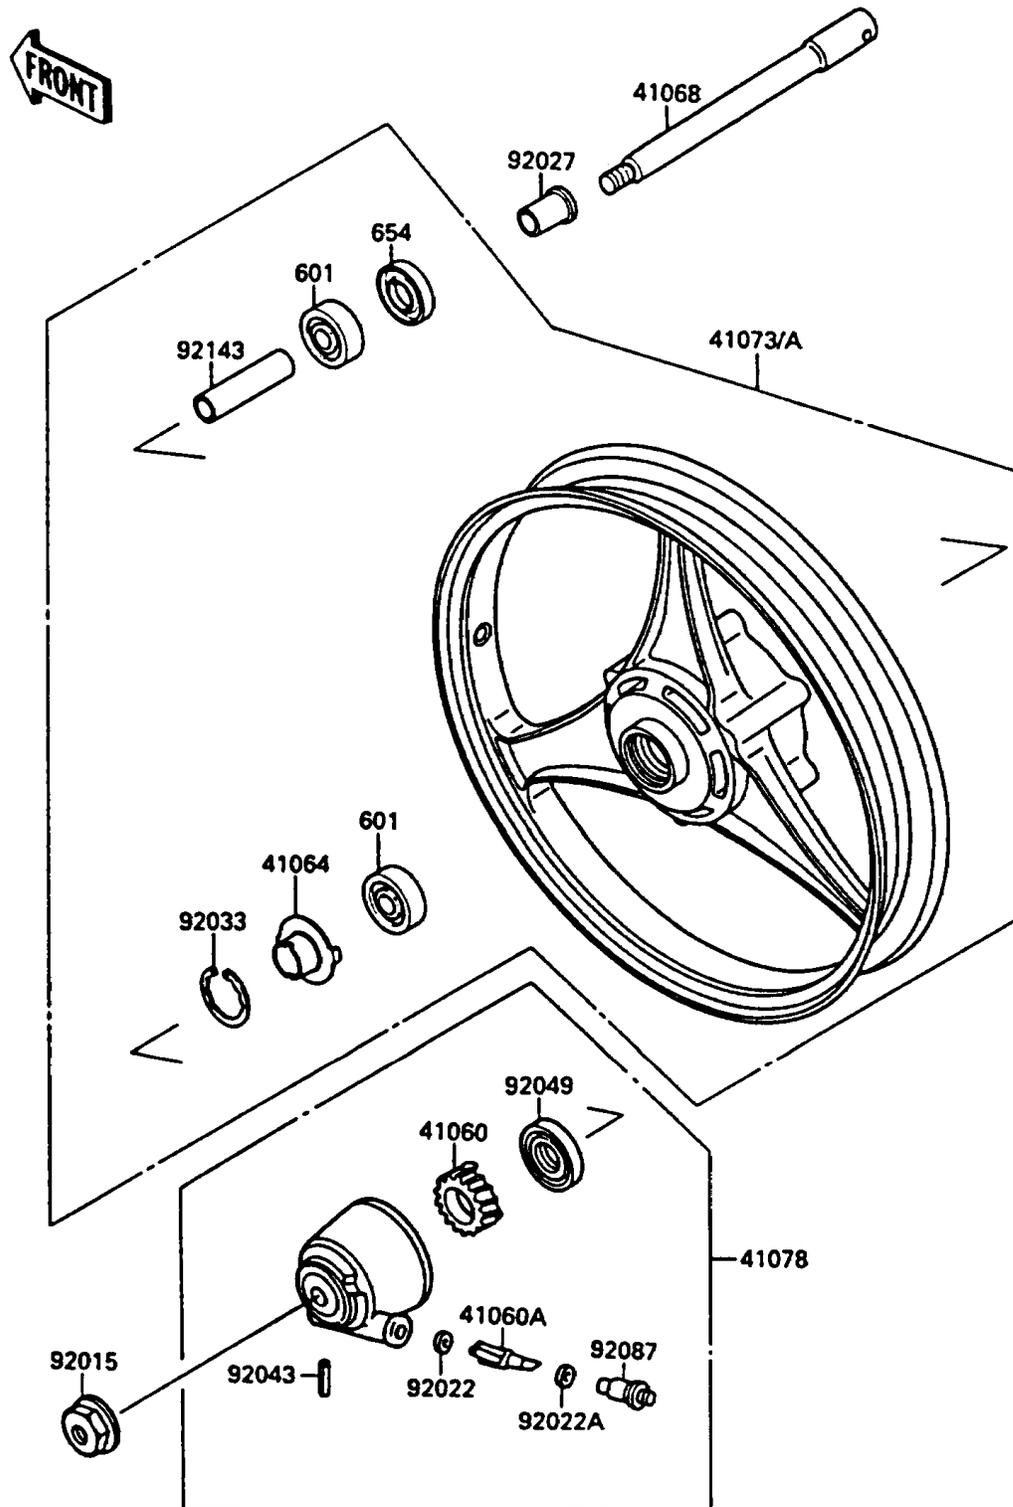

# 1988 Eliminator

## PARTS LIST

### Front Wheel

ITEM NAME	PART NUMBER	QUANTITY
GEAR-METER SCREW,24T (Ref # 41060)	41060-1025	1
GEAR-METER SCREW,9T (Ref # 41060A)	41060-1035	1
RECEIVER-SPEEDOMETER (Ref # 41064)	41064-1006	1
AXLE,FR (Ref # 41068)	41068-1238	1
WHEEL-ASSY,FR,F.BLACK (Ref # 41073A)	41073-1369-21	1
CASE-ASSY-METER GEAR,F.BLACK (Ref # 41078)	41078-1028	1
NUT,FLANGED,14MM (Ref # 92015)	92015-1032	1
WASHER,5.1X9X0.4 (Ref # 92022)	41063-001	1
WASHER,5.1X10X1 (Ref # 92022A)	92022-1062	1
COLLAR,L=34 (Ref # 92027)	92027-1118	1
RING-SNAP,42MM (Ref # 92033)	92033-1041	1
PIN,SPRING (Ref # 92043)	41082-001	1
SEAL-OIL,BJN30427-C3 (Ref # 92049)	92049-1057	1
BUSHING-METER GEAR (Ref # 92087)	92087-1002	1
COLLAR,15.2X22X60 (Ref # 92143)	92027-1980	1
BEARING-BALL (Ref # 601)	601B6202UU	2
OIL SEAL,22X35X8 (Ref # 654)	654A223508	1