


# 1974 F9-B

## PARTS DIAGRAM

### FRONT HUB/BRAKE ('74-'75 F9-B/F9-C 350)

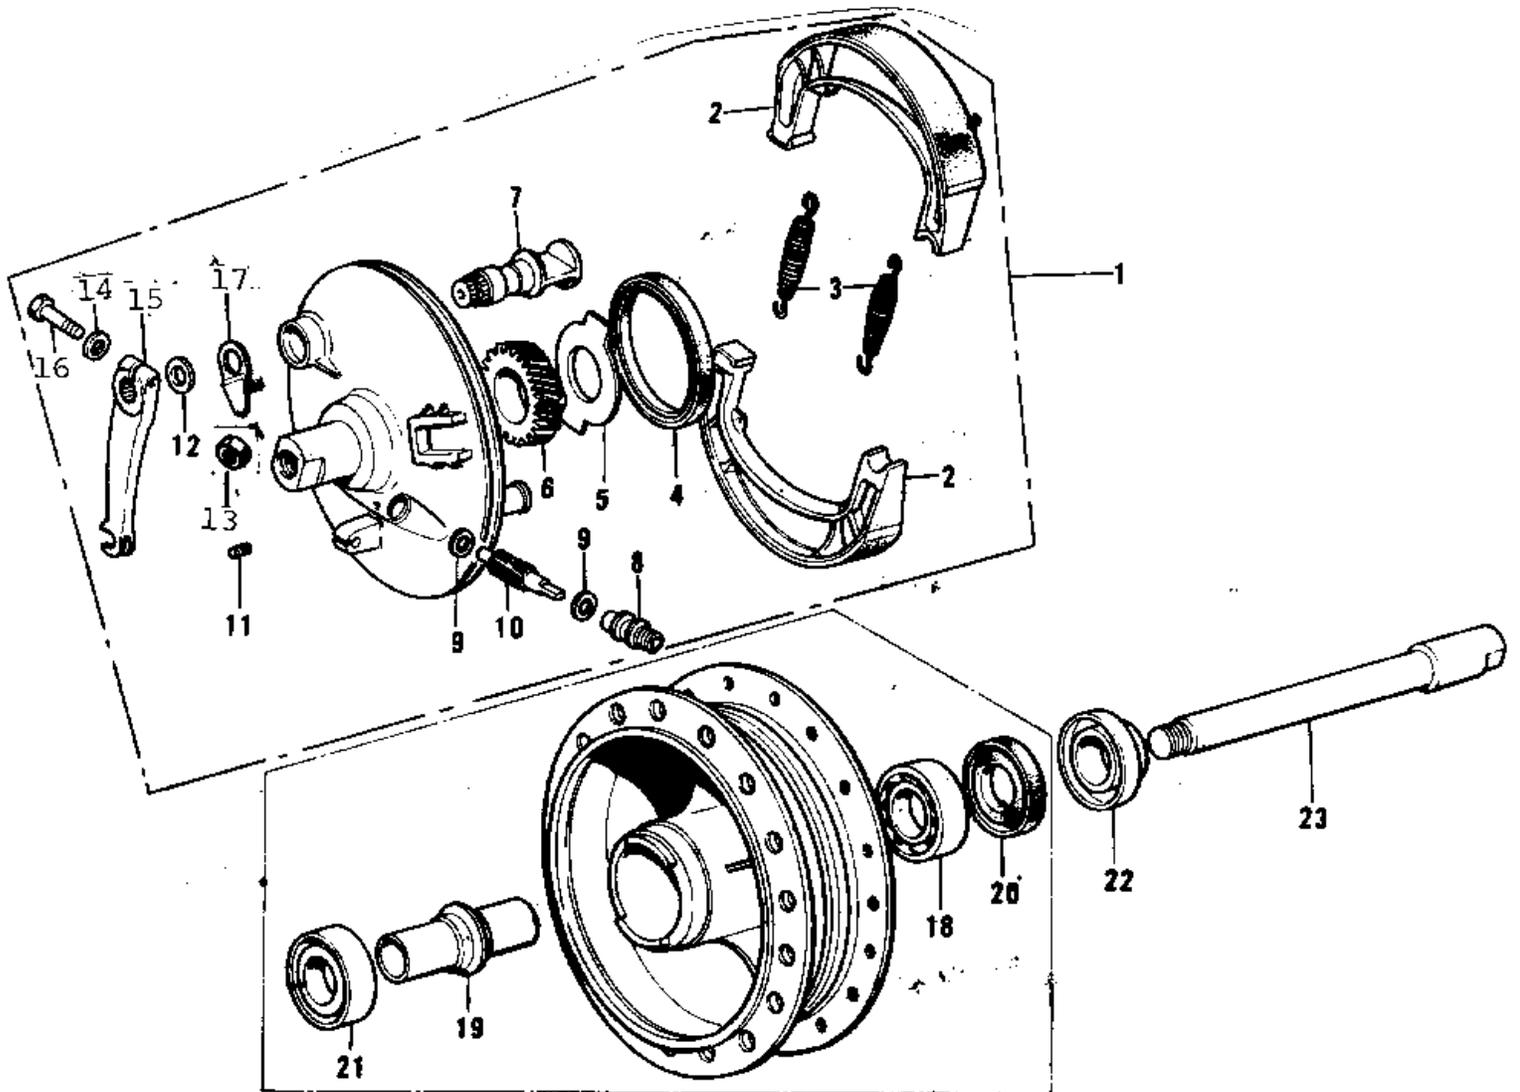

# 1974 F9-B

## PARTS LIST

### FRONT HUB/BRAKE ('74-'75 F9-B/F9-C 350)

ITEM NAME	PART NUMBER	QUANTITY
PANEL-ASY,FR BRK BUF (Ref # 1~16)	41035-045-80	
SHOE,BRAKE (Ref # 2)	42019-011	
SHOE,BRAKE (Ref # 2)	42019-011	
SPRING-BRAKE SHOE (Ref # 3)	42020-004	
OIL SEAL F BRK PANEL (Ref # 4)	92050-010	
RECIEVER GEAR (Ref # 5)	41064-003	
GEAR-SPEEDOMETER (Ref # 6)	41059-011	
CAM SHAFT,REAR BRAKE (Ref # 7)	42026-021	
CAM SHAFT,FRONT BRAK (Ref # 7)	41050-015	
BUSH SPEEDMETER CABL (Ref # 8)	41062-001	
BUSH,SPEEDMETER CABL (Ref # 8)	41062-005	
WASHER THRST SPD PIN (Ref # 9)	41063-001	
PINION-SPEEDOMETER (Ref # 10)	41060-010	
SCREW-BUSHING NET (Ref # 11)	41070-004	
PIN,SPRING (Ref # 11)	41082-001	
DUST SHIELD BRAKE CA (Ref # 12)	41051-001	
NUT 6MM (Ref # 13)	311B0600	
WASHER PLAIN 6MM (Ref # 14)	410B0600	
LEVER,REAR BRAKE CAM (Ref # 15)	42029-037	
LEVER-BRAKE CAM (Ref # 15)	41053-017	
BOLT 6X35 (Ref # 16)	110R0635	
BOLT-UPSET,6X35 (Ref # 16)	112G0635	
BOLT-UPSET (Ref # 16)	112G0625	
INDICATOR,FR BRK PNL (Ref # 17)	41085-005	
DRUM-ASSY,FR BRK (Ref # 18~21)	41034-022	
DRUM-ASSY,FR BRK,BUF (Ref # 18~21)	41034-023-80	
BEARING BALL #6202Z (Ref # 18)	601B6202Z	
SPACER FR HUB BEARIN (Ref # 19)	41039-004	
SPACER-FRONT HUB BER (Ref # 19)	41039-020	

# 1974 F9-B

## PARTS LIST

### FRONT HUB/BRAKE ('74-'75 F9-B/F9-C 350)

ITEM NAME	PART NUMBER	QUANTITY
BEARING BALL #6202 (Ref # 20)	601B6202	
OIL SEAL RR BRK DRUM (Ref # 21)	92050-008	
COLLAR FRONT HUB R.H (Ref # 22)	41069-004	
COLLAR-FRONT AXLE (Ref # 22)	41069-019	
AXLE-FRONT (Ref # 23)	41068-029	
AXLE-FRONT (Ref # 23)	41068-037	
TORQUE LINK-FRNT BRK (Ref # 24)	43007-022	
WASHER-LOCK (Ref # 25)	92088-012	
BOLT-HEA HEAD,8X20 (Ref # 26)	92001-086	