


# 1983 KX250

## PARTS DIAGRAM

### SWING ARM ('83 KX250-C1)



F2140-0141

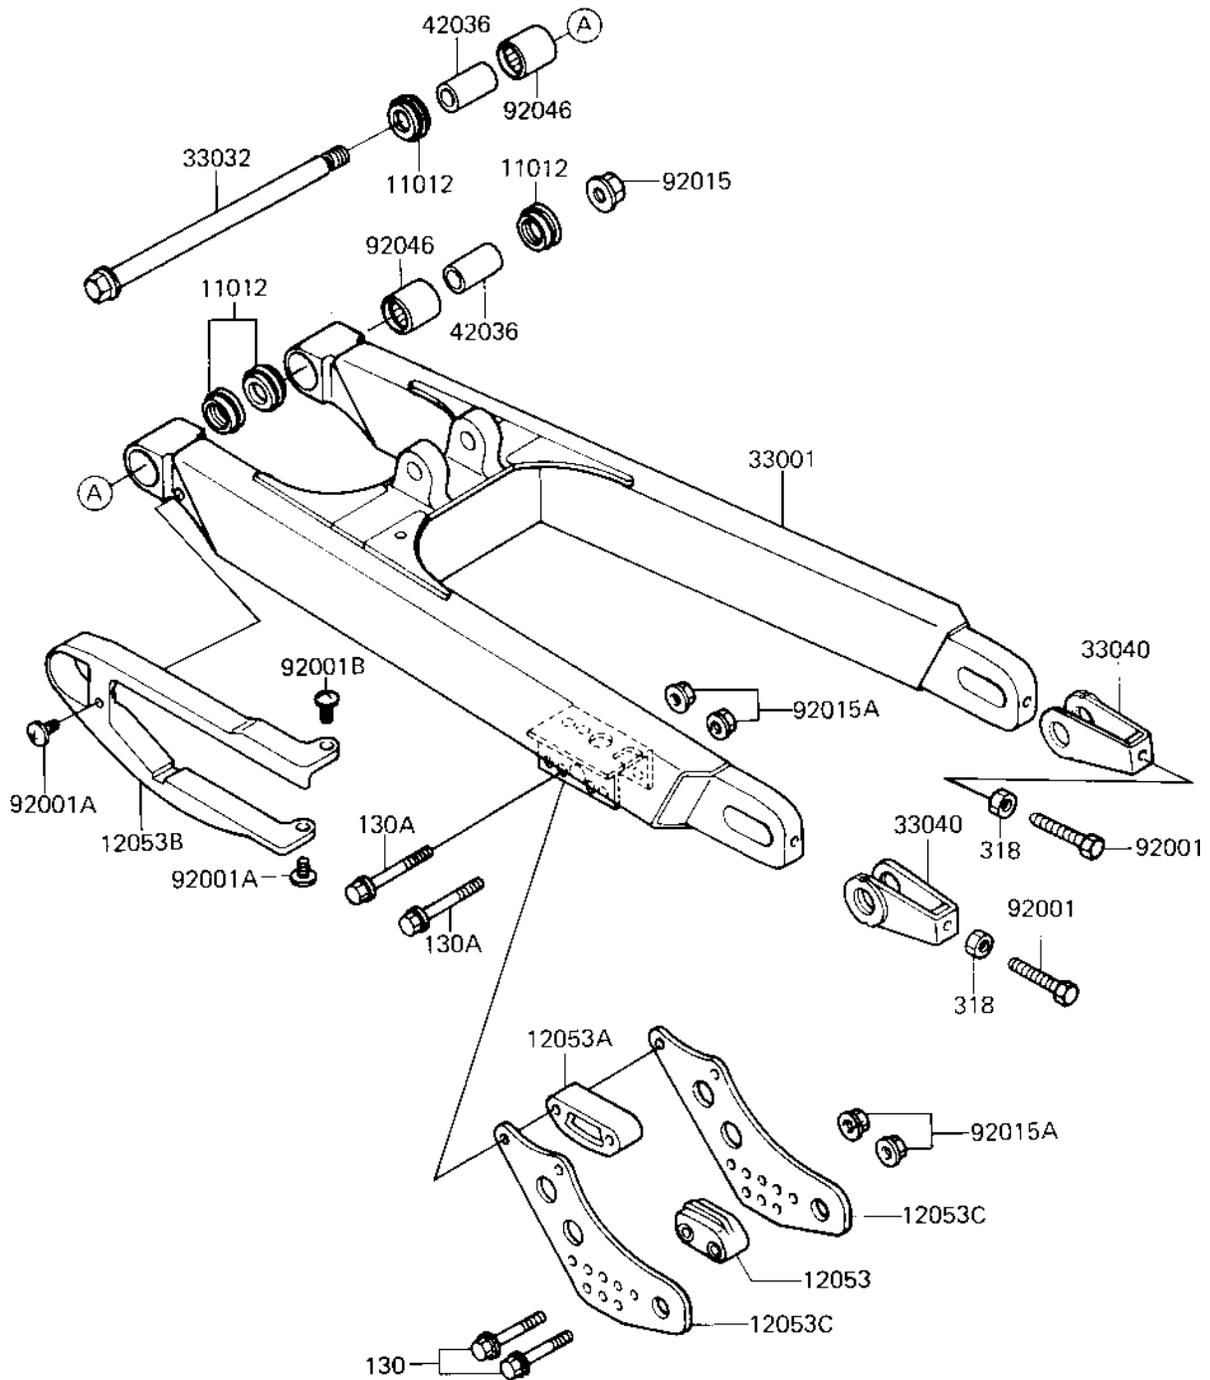

# 1983 KX250

## PARTS LIST

### SWING ARM ('83 KX250-C1)

ITEM NAME	PART NUMBER	QUANTITY
CAP,SWING ARM (Ref # 11012)	11012-1259	4
GUIDE,CHAIN,REAR (Ref # 12053)	12053-1011	1
GUIDE,CHAIN,REAR (Ref # 12053A)	12053-1039	1
GUIDE-CHAIN,FR (Ref # 12053B)	12053-1068	1
GUIDE-CHAIN,RR (Ref # 12053C)	12053-1073	2
ARM-COMP-SWING (Ref # 33001)	33001-1174	1
SHAFT-SWING ARM (Ref # 33032)	33032-1042	1
ADJUSTER-CHAIN (Ref # 33040)	33040-1022	2
SLEEVE,SWING ARM (Ref # 42036)	42036-1064	2
BOLT,CHAIN ADJUSTER (Ref # 92001)	92001-1027	2
SCREW,6X10 (Ref # 92001A)	92009-1286	2
SCREW,6X14 (Ref # 92001B)	92009-1287	1
NUT,14MM (Ref # 92015)	92015-1407	1
NUT-6MM (Ref # 92015A)	92015-1078	4
BRG,NEEDLE,HMK2030 (Ref # 92046)	92046-1031	2
BOLT,FLANGED,6X35 (Ref # 130)	130H0635	2
BOLT,FLANGED,6X45 (Ref # 130A)	130G0645	2
NUT 8MM (Ref # 318)	318G0800	2