


1974 MC1-A

PARTS DIAGRAM

TRANSMISSION/CHANGE DRUM ('73-'75 MC1/MC)

Kawasaki

Let the Good Times Roll®

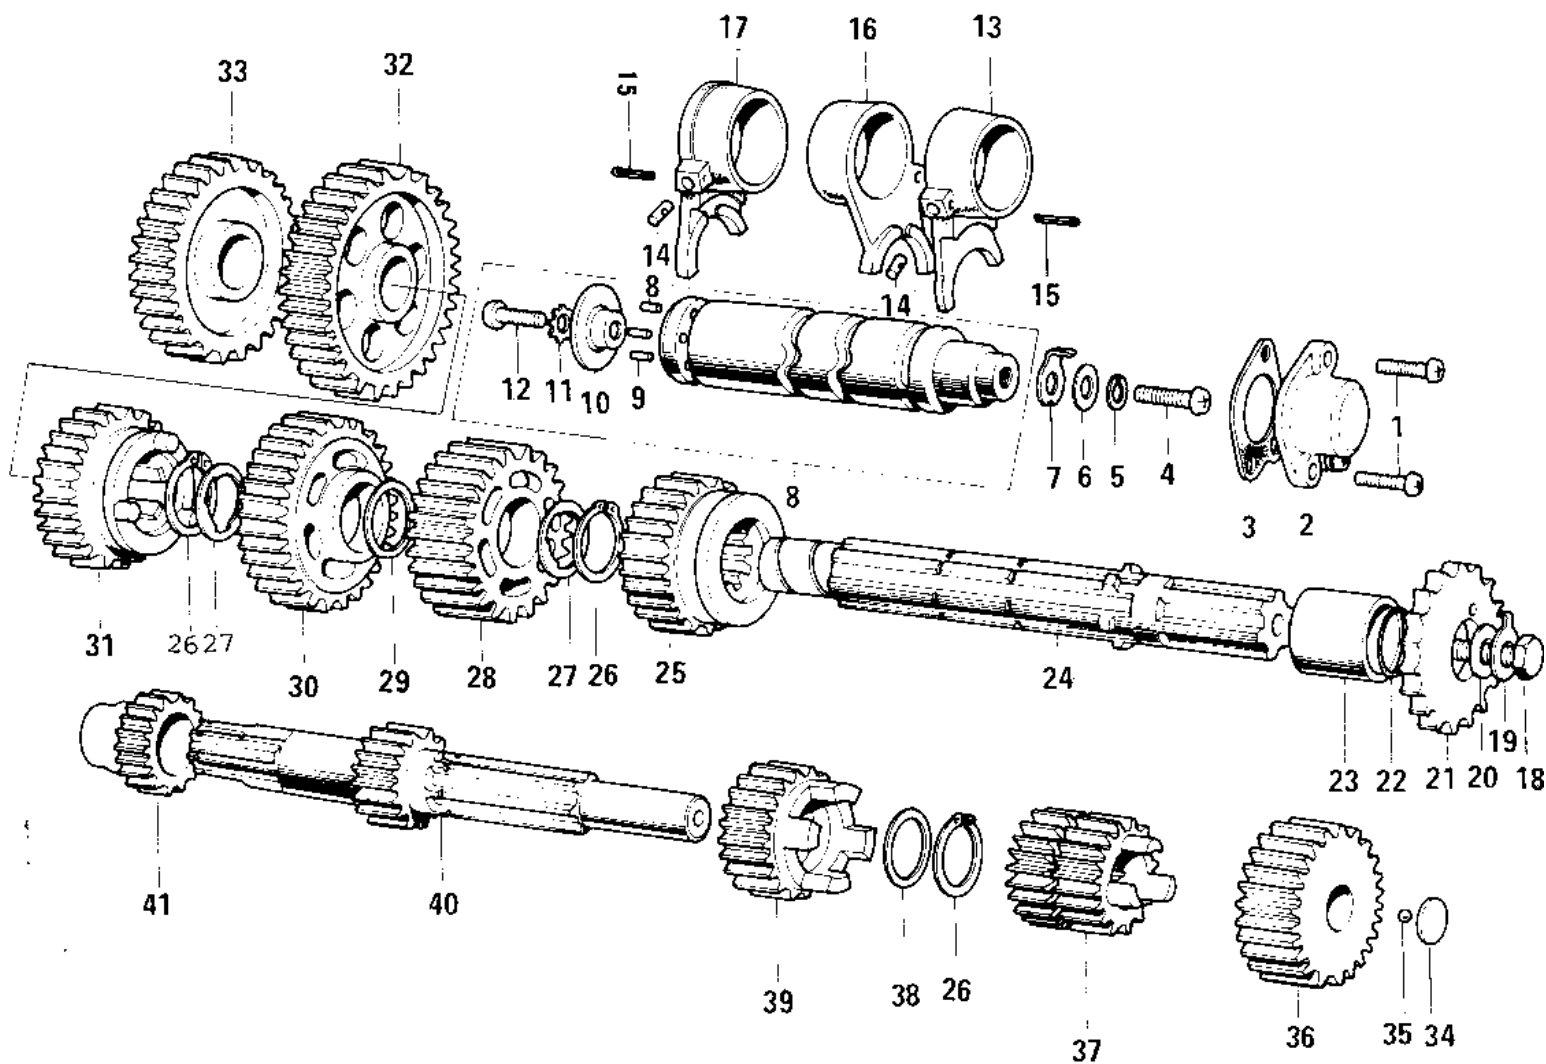

1974 MC1-A

PARTS LIST

TRANSMISSION/CHANGE DRUM ('73-'75 MC1/MC

ITEM NAME	PART NUMBER	QUANTITY
SCREW PAN HEAD 6X16 (Ref # 1)	220B0616	
SWITCH, NEUTRAL INDICATOR (Ref # 2)	13151-004	
GASKET NEUTRAL SWITCH (Ref # 3)	13146-002	
SCREW PAN HEAD 6X14 (Ref # 4)	220B0614	
WASHER SPRING 6MM (Ref # 5)	461F0600	
WASHER PLAIN 6MM (Ref # 6)	410B0600	
ROTOR,NEUTRAL INDICTR (Ref # 7)	21007-1003	
DRUM ASSY-GEAR CHANGE (Ref # 8)	13239-005	
PIN GEAR CHANGE DRUM (Ref # 9)	92042-014	
PLATE CHANGE DRUM PIN (Ref # 10)	13142-008	
WASHER LOCK 6MM (Ref # 11)	464H0600	
SCREW PAN HEAD 6X12 (Ref # 12)	220B0612	
FORK SELECTOR 3RD (Ref # 13)	13140-009	
PIN SELECT FORK GUIDE (Ref # 14)	92043-005	
PIN COTTER 3.0X20 (Ref # 15)	550D3020	
FORK SELECTOR 4TH-TOP (Ref # 16)	13140-017	
FORK SELECTOR LOW-2ND (Ref # 17)	13140-010	
BOLT-SMALL-UPSET,8X16 (Ref # 18)	115G0816	
WASHER,LOCK,8MM (Ref # 19)	92030-012	
WASHER,ENGINE SPRCKT (Ref # 20)	92022-266	
SPROCKET-OUTPUT,14T (Ref # 21)	13144-1058	
"O" RING (Ref # 22)	92055-022	
COLLAR,ENG NPROCKET (Ref # 23)	92027-179	
SHAFT OUTPUT (Ref # 24)	13128-021	
TOP GEAR OUTPUT SHAFT (Ref # 25)	13137-012	
CIRCLIP (Ref # 26)	92033-014	
WASHER-LOCK (Ref # 27)	92024-030	
3RD GEAR OUTPUT SHAFT (Ref # 28)	13133-005	
WASHER THRUST (Ref # 29)	92022-146	

1974 MC1-A

PARTS LIST

TRANSMISSION/CHANGE DRUM ('73-'75 MC1/MC

ITEM NAME	PART NUMBER	QUANTITY
2ND GEAR OUTPUT SHAFT (Ref # 30)	13131-008	
GEAR-TRANSMISSION SPU (Ref # 31)	13129-1708	
LOW GEAR OUTPUT SHAFT (Ref # 32)	13129-010	
IDLE GEAR (Ref # 33)	13073-004	
WASHER THRUST (Ref # 34)	92022-115	
BALL STEEL 7/32' (Ref # 35)	600A0700	
GEAR,INPUT TOP,24T (Ref # 36)	13129-1927	
2ND&3RD GEAR,DRIVE (Ref # 37)	13129-1052	
WASHER THRUST (Ref # 38)	92022-118	
4TH GEAR,DRIVE (Ref # 39)	13129-1053	
SHAFT,DRIVE (Ref # 40)	13127-032	
PINION KICKSTARTER (Ref # 41)	13075-004	