


1971 G3SS-A

PARTS DIAGRAM

HANDLEBAR ('69-'73)

Kawasaki

Let the Good Times Roll®

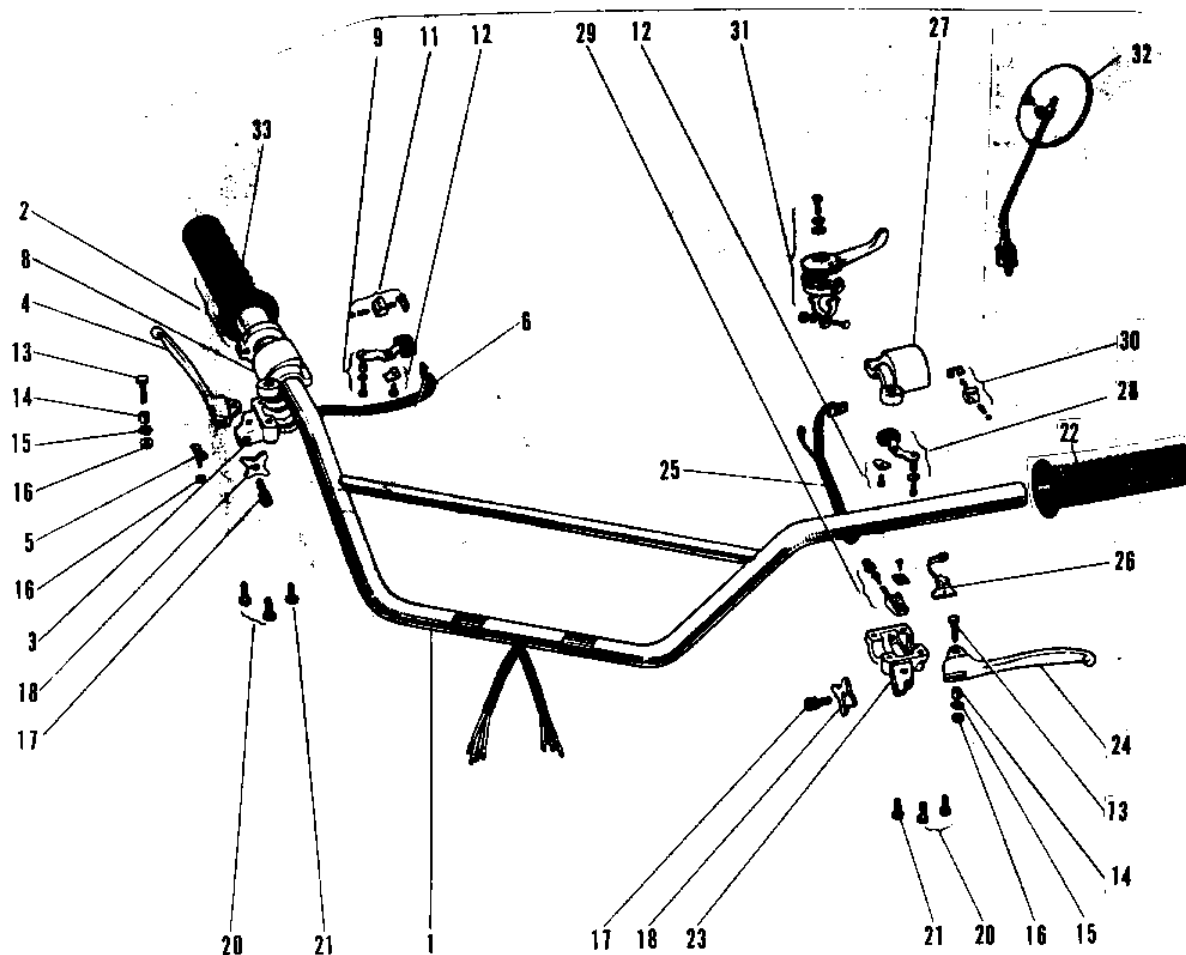

Ref. No.

- 1
- 2 ~ 27, 31
- 2
- 3
- 4
- 5
- 6
- 8
- 9
- 11
- 12
- 13
- 14
- 15
- 16
- 17
- 18
- 20
- 21
- 12 ~ 3
- 22
- 23
- 24
- 25
- 26
- 27
- 28
- 29
- 30
- 31
- 32
- 33



1971 G3SS-A

PARTS LIST

HANDLEBAR ('69-'73)

Kawasaki

Let the Good Times Roll®

ITEM NAME	PART NUMBER	QUANTITY
HANDLEBAR (Ref # 1)	46004-022	1
GRIP-ASSY,RH (Ref # 2-27,3)	46017-1071	1
GRIP ASSY THROTTLE (Ref # 2)	46019-005	1
CASE R.H SWITCH LOWER (Ref # 3)	46022-012	1
LEVER FRONT BRAKE (Ref # 4)	46058-004	1
SPRING THROTTLE GRIP (Ref # 5)	46024-001	1
SPRING THROTTLE GRIP (Ref # 5)	46024-002	1
WIRING HARNESS R.H SW (Ref # 6)	46032-010	1
GRIP-ASSY,RH (Ref # 8)	46017-1071	1
KNOB ASSY R.H SWITCH (Ref # 9)	46043-002	1
SLIDE BLOCK AY R.H SW (Ref # 11)	46045-004	1
HOLDER WIRING HARNESS (Ref # 12)	46085-012	2
BOLT HEX HEAD 5X20 (Ref # 13)	92007-018	2
BOLT HEX HEAD 5X20 (Ref # 13)	92007-020	2
COLLAR LEVER (Ref # 14)	46059-005	2
COLLAR LEVER (Ref # 14)	46059-011	2
WASHER LOCK 5MM (Ref # 15)	464H0500	2
NUT 5MM (Ref # 16)	312B0500	3
NUT 5MM (Ref # 16)	312B0500	3
SCREW,CABLE ADJUST (Ref # 17)	46055-010	2
NUT LOCK ADJUST SCREW (Ref # 18)	46056-001	2
SCREW PAN HEAD 5X20 (Ref # 20)	220B0520	4
SCREW PAN HEAD 5X20 (Ref # 20)	220B0520	4
SCREW PAN HEAD 5X18 (Ref # 21)	220B0518	2
SCREW PAN HEAD 5X18 (Ref # 21)	220B0518	2
GRIP ASSY L.H (Ref # 12-30)	46074-017	1
RUBBER L.H GRIP (Ref # 22)	46075-007	1
CASE L.H SWITCH LOWER (Ref # 23)	46077-008	1
LEVER-CLUTCH (Ref # 24)	46092-015	1

1971 G3SS-A

PARTS LIST

HANDLEBAR ('69-'73)

ITEM NAME	PART NUMBER	QUANTITY
WIRING HARNESS L.H SW (Ref # 25)	46082-015	1
HOLDER L.H SWITCH (Ref # 26)	46085-008	1
CASE L.H SWITCH UPPER (Ref # 27)	46086-007	1
KNOB ASSY L.H SWITCH (Ref # 28)	46088-001	1
SWITCH ASSY LH BUTTON (Ref # 29)	46078-003	1
SLIDE BLOCK AY L.H SW (Ref # 30)	46089-002	1
LEVER ASSY,STARTER (Ref # 31)	46109-012	1
REAR VIEW MIRROR R.H. (Ref # 32)	56002-024	1
RUBBER R.H GRIP (Ref # 33)	46061-009	1