
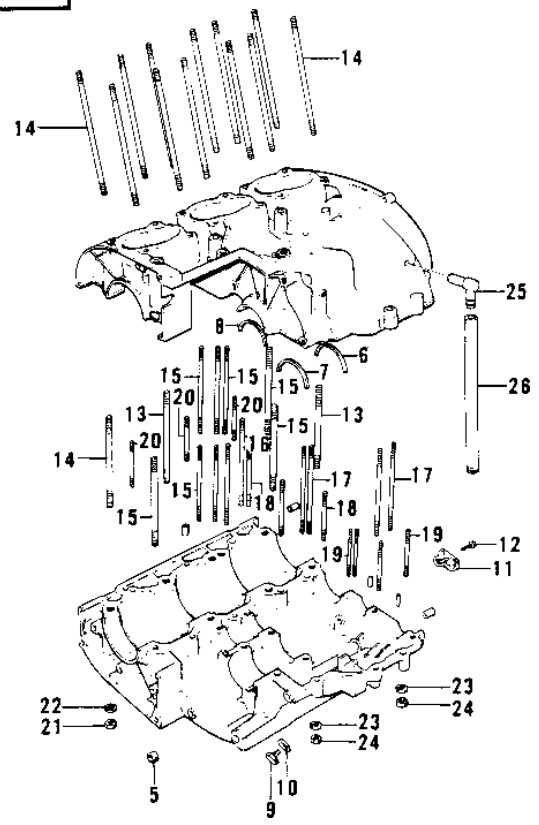


1974 Mach IV PARTS DIAGRAM

CRANKCASE

FRONT

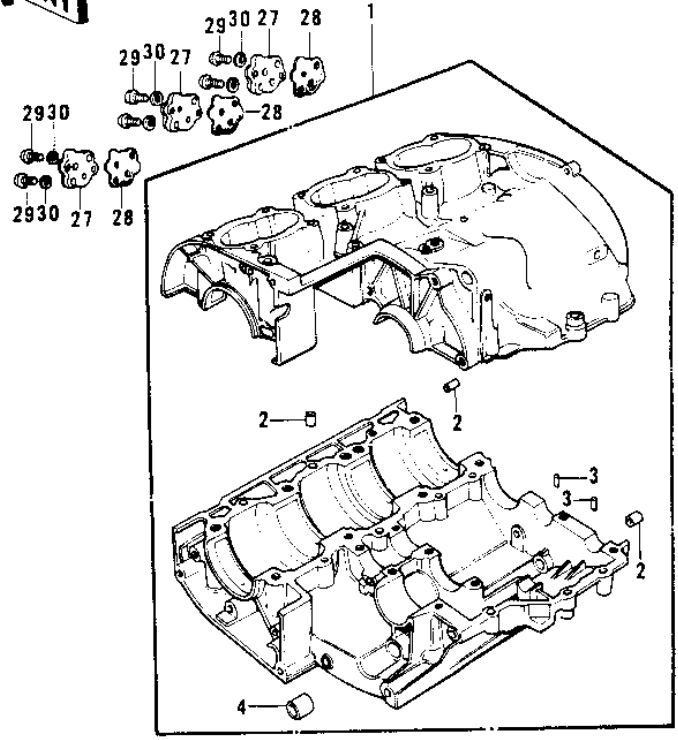

1974 Mach IV PARTS LIST

CRANKCASE

ITEM NAME	PART NUMBER	QUANTITY
CRANKCASE SET (Ref # 1)	14001-050	
CRANKCASE SET (Ref # 1)	14001-063	
PIN,DOWEL,10X8.2X14 (Ref # 2)	92043-1037	
PIN DOWEL 6MM (Ref # 3)	92042-016	
BUSH CHANGE PEDAL SHT (Ref # 4)	92028-071	
OIL SEAL SB12205 (Ref # 5)	92049-004	
RING-POSITIONING (Ref # 6)	14013-012	
RING BEARING SETTING (Ref # 7)	14013-004	
RING-BEARING SET (Ref # 8)	14013-013	
PLUG OIL DRAIN (Ref # 9)	92067-001	
GASKET CHECK VALVE (Ref # 10)	92065-058	
RECEIVER OIL (Ref # 11)	14015-001	
SCREW CNTSNK HD 6X16 (Ref # 12)	221B0616	
STUD 10X90 (Ref # 13)	172G1090	
STUD 10X75 (Ref # 14)	172G1075	
STUD 10X60 (Ref # 15)	172G1060	
STUD,6X80 (Ref # 16)	172G0680	
STUD 6X75 (Ref # 17)	172G0675	
STUD 6X50 (Ref # 18)	172G0650	
STUD 6X35 (Ref # 19)	172G0635	
STUD,6X30 (Ref # 20)	172G0630	
NUT,10MM (Ref # 21)	317B1000	
WASHER SPRING 10MM (Ref # 22)	461F1000	
WASHER SPRING 6MM (Ref # 23)	461F0600	
NUT 6MM (Ref # 24)	311B0600	
BREATHER (Ref # 25)	14069-003	
PIPE-BREATHER (Ref # 26)	92059-061	
VALVE,CHECK (Ref # 27)	16128-008	
GASKET,CHECK VALVE (Ref # 28)	14051-003	

1974 Mach IV PARTS LIST

CRANKCASE

ITEM NAME	PART NUMBER	QUANTITY
SCREW PAN HEAD 6X20 (Ref # 29)	220B0620	
WASHER SPRING 6MM (Ref # 30)	461F0600	