


1970 Bushwhacker

PARTS DIAGRAM HANDLEBAR

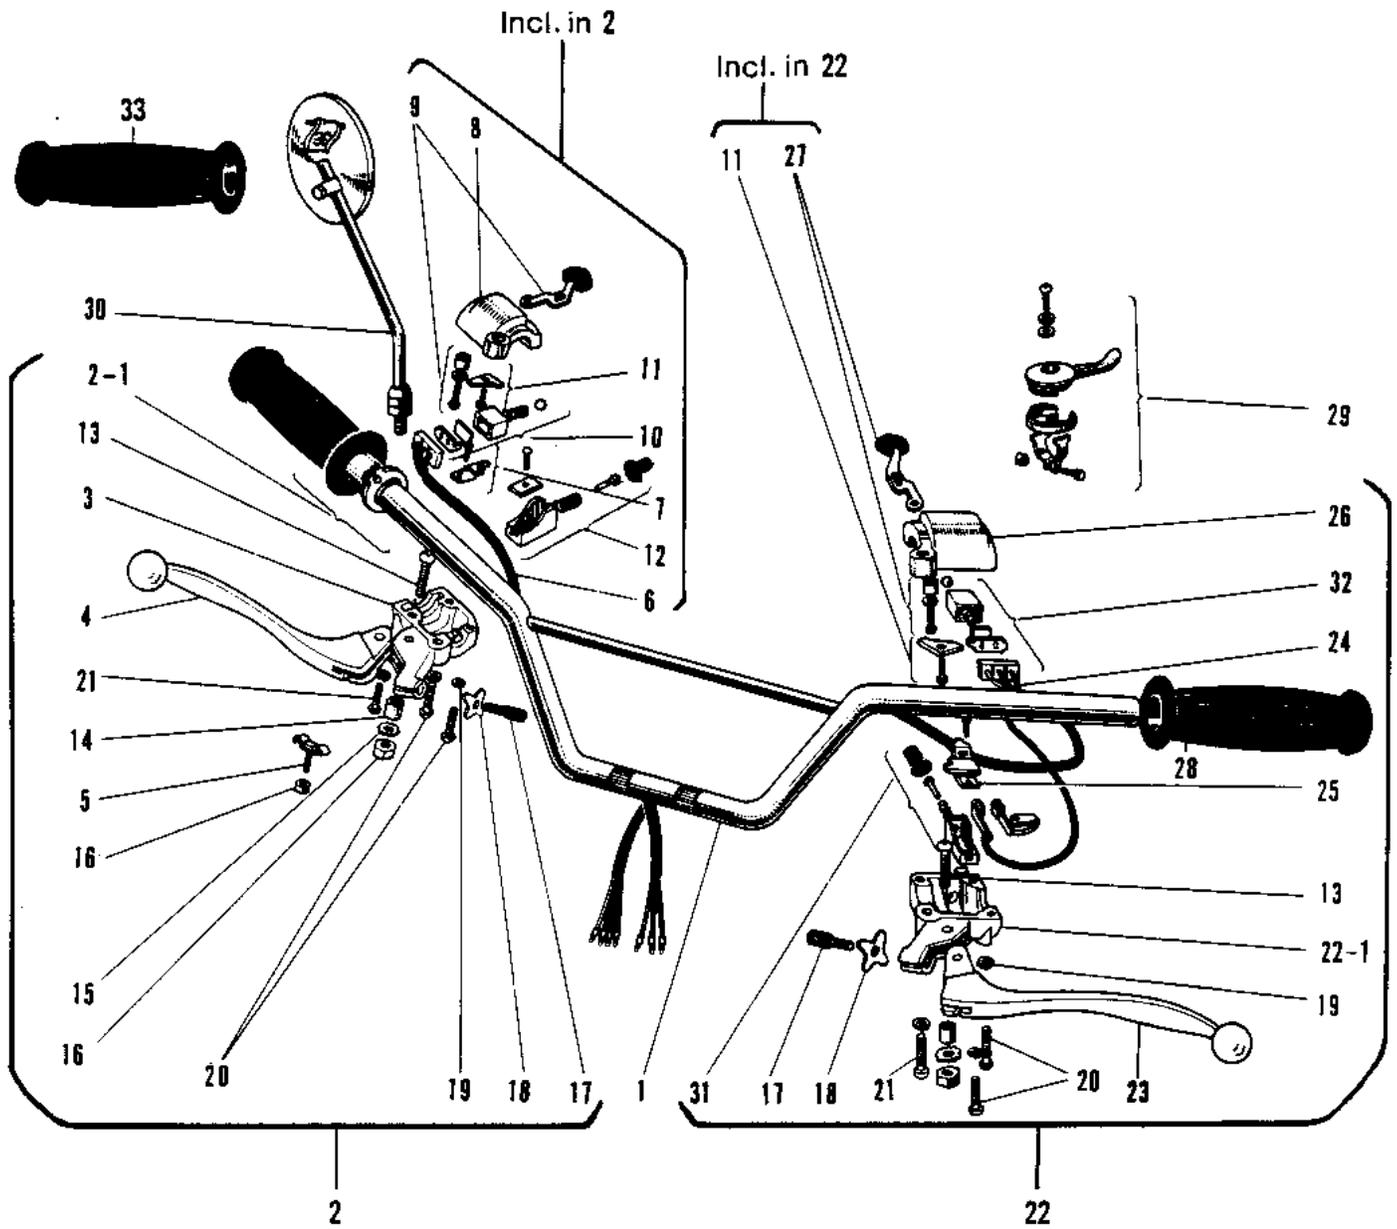

1970 Bushwhacker

PARTS LIST HANDLEBAR

ITEM NAME	PART NUMBER	QUANTITY
HANDLEBAR (Ref # 1)	46004-022	
GRIP THROTTLE (Ref # 2)	46019-008	
GRIP-ASSY,RH (Ref # 2-1)	46017-1073	
CASE R.H SWITCH LOWER (Ref # 3)	46022-009	
LEVER FRONT BRAKE (Ref # 4)	46058-004	
SPRING THROTTLE GRIP (Ref # 5)	46024-002	
WIRING HARNESS R.H SW (Ref # 6)	46032-012	
HOLDER R.H SWITCH (Ref # 7)	46037-009	
GRIP-ASSY,RH (Ref # 8)	46017-1071	
KNOB ASSY R.H SWITCH (Ref # 9)	46043-002	
SLIDE BLOCK AY R.H SW (Ref # 10)	46045-004	
LEVER FRONT BRAKE (Ref # 11)	46058-012	
SWITCH R.H PUSH BUTTN (Ref # 12)	46027-005	
BOLT HEX HEAD 5X20 (Ref # 13)	92007-020	
COLLAR LEVER (Ref # 14)	46059-011	
WASHER LOCK 5MM (Ref # 15)	464H0500	
NUT 5MM (Ref # 16)	312B0500	
SCREW,CABLE ADJUST (Ref # 17)	46055-010	
NUT LOCK ADJUST SCREW (Ref # 18)	46056-001	
WASHER SPRING 5MM (Ref # 19)	461F0500	
SCREW PAN HEAD 5X20 (Ref # 20)	220B0520	
SCREW PAN HEAD 5X18 (Ref # 21)	220B0518	
GRIP ASSY L.H (Ref # 22)	46074-036	
CASE L.H SWITCH LOWER (Ref # 22-1)	46077-008	
LEVER-CLUTCH (Ref # 23)	46092-015	
UNAVAILABLE IN PRICE BOOK (Ref # 24)	26082-011	
LEVER FRONT BRAKE (Ref # 25)	46058-008	
CASE L.H SWITCH UPPER (Ref # 26)	46086-007	
KNOB ASSY L.H SWITCH (Ref # 27)	46088-001	

1970 Bushwhacker

PARTS LIST

HANDLEBAR

Kawasaki

Let the Good Times Roll®

ITEM NAME	PART NUMBER	QUANTITY
RUBBER L.H GRIP (Ref # 28)	46075-010	
LEVER ASSY,STARTER (Ref # 29)	46109-012	
REAR VIEW MIRROR ASSY(WHN EXH USE 5 (Ref # 30)	56002-011	
REAR VIEW MIRROR ASSY (Ref # 30)	56001-005	
SWITCH ASSY LH BUTTON (Ref # 31)	46078-003	
BLOCK ASSY. L.H. SWITCH SLIDE (Ref # 32)	46089-002	
RUBBER R.H GRIP (Ref # 33)	46061-010	