


1968 Sidewinder PARTS DIAGRAM

FRONT HUB/BRAKE

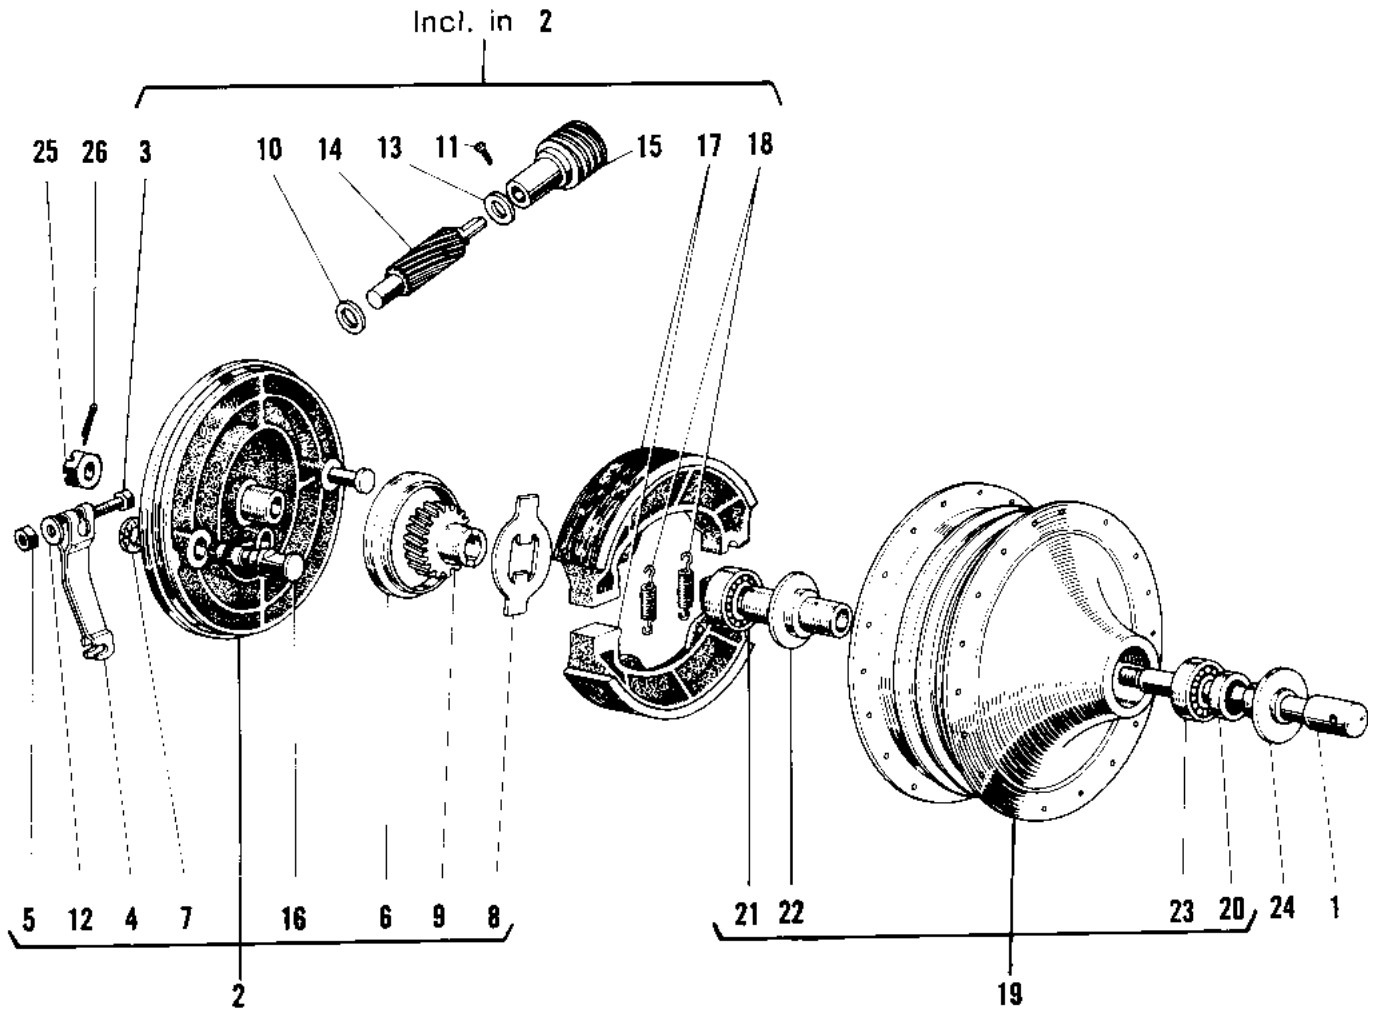

1968 Sidewinder PARTS LIST

FRONT HUB/BRAKE

| ITEM NAME | PART NUMBER | QUANTITY |
|-----------------------------------|--------------|----------|
| AXLE FRONT (Ref # 1) | 41068-024 | |
| PANEL-ASY,FR BRK (Ref # 2) | 41035-019 | |
| .BOLT 6X35 (Ref # 3) | 110R0635 | |
| .LEVER FRONT BRAKE CAM (Ref # 4) | 41053-003 | |
| .NUT 6MM (Ref # 5) | 311B0600 | |
| .OIL SEAL F BRK PANEL (Ref # 6) | 92050-010 | |
| .DUST SHIELD BRAKE CAM (Ref # 7) | 41051-001 | |
| .RECIEVER GEAR (Ref # 8) | 41064-003 | |
| .GEAR SPEEDOMETER (Ref # 9) | 41059-008 | |
| .WASHER THRST SPD PINI (Ref # 10) | 41063-001 | |
| .SCREW BUSHING SET (Ref # 11) | 41070-001 | |
| SCREW-BUSHING NET (Ref # 11) | 41070-004 | |
| .WASHER PLAIN 6MM (Ref # 12) | 410B0600 | |
| .WASHER THRUST (Ref # 13) | 41063-004 | |
| .PINION SPEEDOMETER (Ref # 14) | 41060-008 | |
| .BUSH-SPEEDMETER CABLE (Ref # 15) | 41062-004 | |
| .CAM SHAFT,REAR BRAKE (Ref # 16) | 42026-021 | |
| .SPRING,BRAKE SHOE (Ref # 17) | 92081-1766 | |
| .SPRING-BRAKE SHOE (Ref # 18) | 42020-004 | |
| DRUM-ASSY,FR BRK,BUFF (Ref # 19) | 41034-048-80 | |
| .OIL SEAL RR BRK DRUM (Ref # 20) | 92050-008 | |
| .BEARING BALL #6202Z (Ref # 21) | 601B6202Z | |
| .SPACER FR HUB BEARING (Ref # 22) | 41039-004 | |
| .6BEARING BALL #6202 (Ref # 23) | 601B6202 | |
| COLLAR FRONT HUB R.H (Ref # 24) | 41069-004 | |
| NUT CASTLE 14MM (Ref # 25) | 321B1400 | |
| PIN COTTER 3.0X35 (Ref # 26) | 550D3035 | |