


# 1982 CSR Belt

## PARTS DIAGRAM

### FRONT HUB

F2230-0022

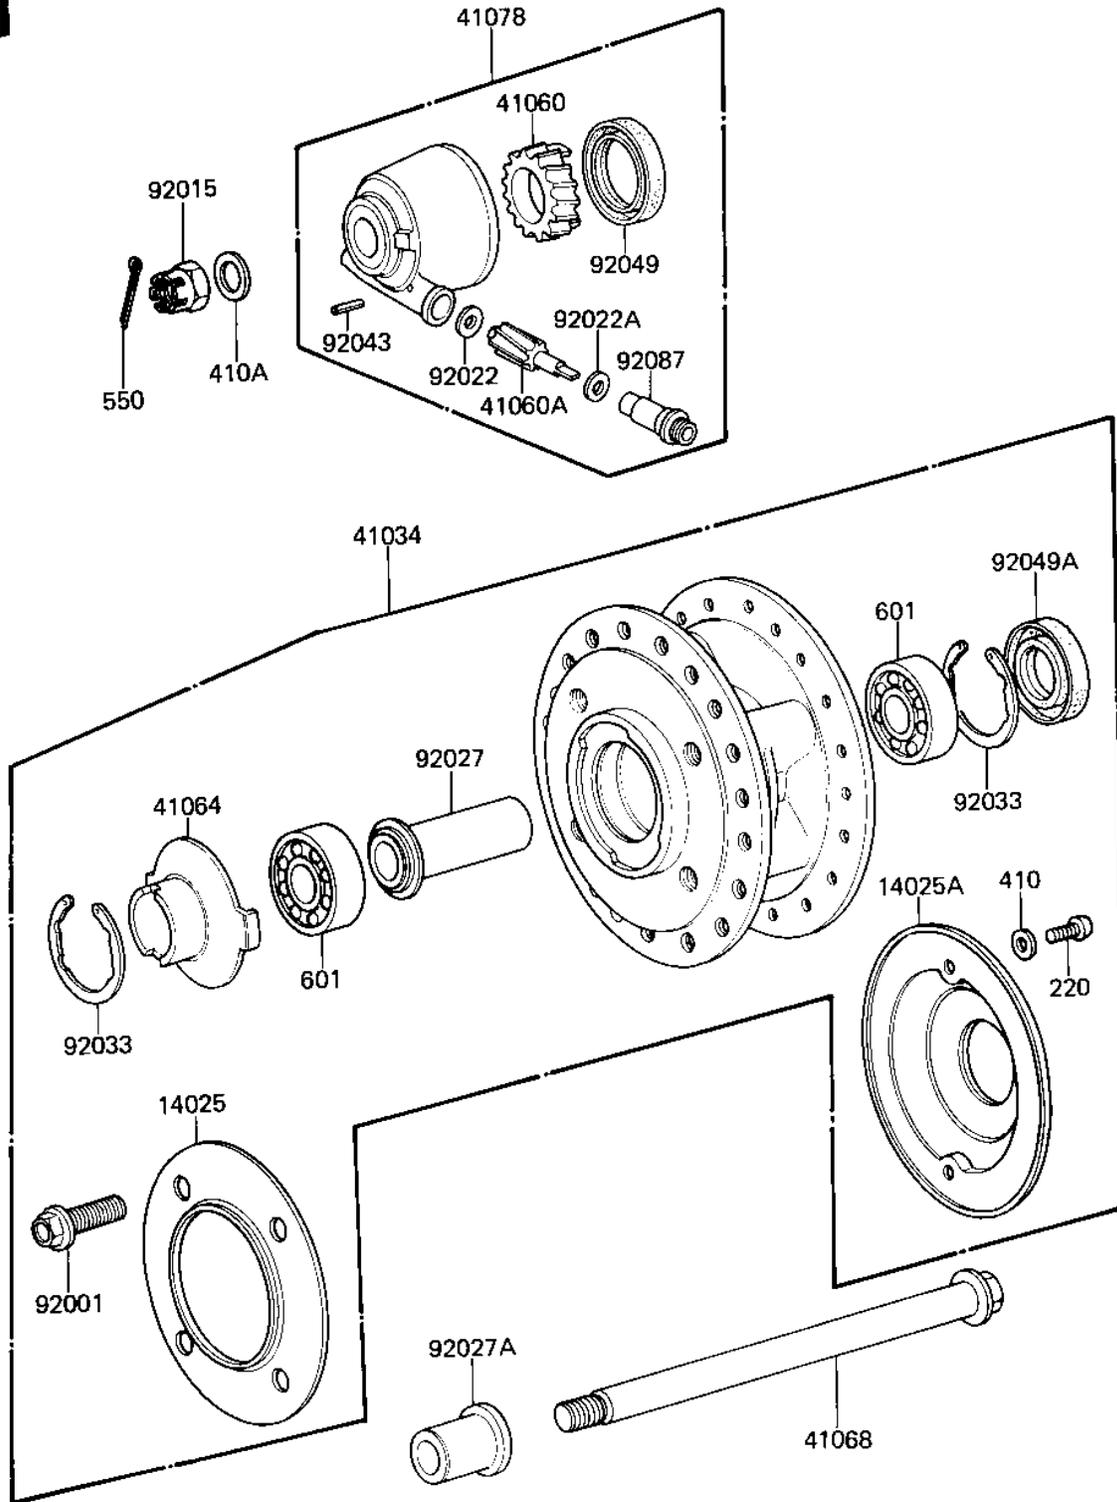

# 1982 CSR Belt

## PARTS LIST

### FRONT HUB

ITEM NAME	PART NUMBER	QUANTITY
COVER,DUST,LH (Ref # 14025)	14025-1277	1
COVER,DUST,RH (Ref # 14025A)	14025-1341	1
DRUM-ASSY,FR BRK (Ref # 41034)	41034-1033	1
GEAR-METER SCREW,24T (Ref # 41060)	41060-1025	1
GEAR-METER SCREW,9T (Ref # 41060A)	41060-1035	1
RECEIVER,SPEEDOMETER (Ref # 41064)	41064-1006	1
AXLE,FR (Ref # 41068)	41068-1099	1
CASE-ASSY-METER GEAR (Ref # 41078)	41078-1018	1
BOLT,HEX HEAD,10X30 (Ref # 92001)	92001-1173	4
NUT,14MM (Ref # 92015)	42045-020	1
WASHER THRST SPD PINI (Ref # 92022)	41063-001	1
WASHER THRST SPD PINI (Ref # 92022A)	41063-001	1
COLLAR,FR HUB L=55M/M (Ref # 92027)	92027-1223	1
COLLAR,FR AXLE L=30MM (Ref # 92027A)	92027-1225	1
CIRCLIP,42MM (Ref # 92033)	92033-1041	2
PIN,SPRING (Ref # 92043)	41082-001	1
OIL SEAL,BJN30427-C3 (Ref # 92049)	92049-1057	1
OIL SEAL,AG1144AO (Ref # 92049A)	92049-1058	1
BUSHING,METER GEAR (Ref # 92087)	92087-1002	1
SCREW-PAN-CROS (Ref # 220)	220B0514	2
WASHER PLAIN 5MM (Ref # 410)	410B0500	2
WASHER PLAIN 14MM (Ref # 410A)	410B1400	1
PIN-COTTER,3.2X25 (Ref # 550)	550D3225	1
BEARING-BALL, #6302 (Ref # 601)	601B630ZZ	2