


# 1988 Mojave 110E

## PARTS DIAGRAM

### Starter Motor

E1840-0084

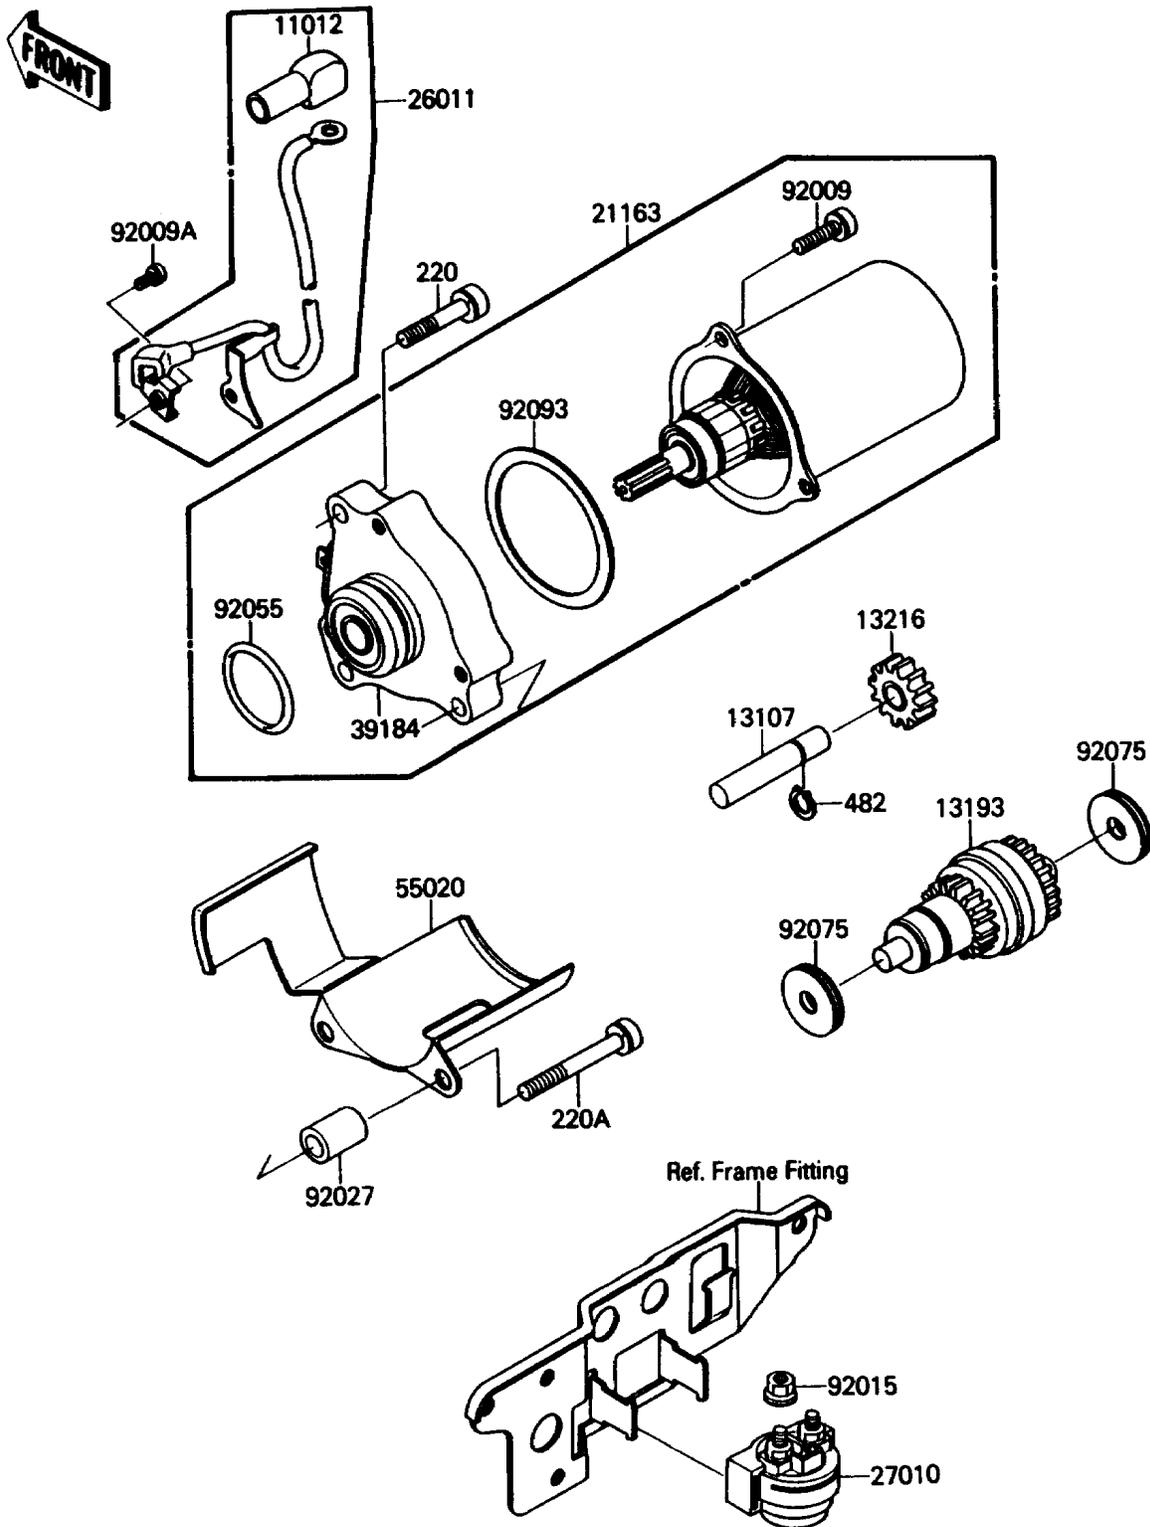

# 1988 Mojave 110E

## PARTS LIST

### Starter Motor

ITEM NAME	PART NUMBER	QUANTITY
CAP,TERMINAL (Ref # 11012)	11012-1354	1
SHAFT,STARTER GEAR (Ref # 13107)	13107-1027	1
CLUTCH-ASSY-ONEWAY (Ref # 13193)	13193-1010	1
GEAR-COMP,26T (Ref # 13216)	13216-1028	1
STARTER-ELECTRIC (Ref # 21163)	21163-1101	1
WIRE-LEAD,STARTER MOTOR (Ref # 26011)	26011-1385	1
SWITCH,STARTER (Ref # 27010)	27010-1075	1
BRACKET-ASSY (Ref # 39184)	39184-1011	1
GUARD (Ref # 55020)	55020-1255	1
SCREW,5X16 (Ref # 92009)	92009-1466	3
SCREW,4X6 (Ref # 92009A)	92009-1467	1
NUT,FLANGED,6MM (Ref # 92015)	92015-1367	2
COLLAR (Ref # 92027)	92027-1461	2
RING-O (Ref # 92055)	92055-1276	1
DAMPER (Ref # 92075)	92075-1415	2
SEAL (Ref # 92093)	92093-1079	1
SCREW-PAN-CROS (Ref # 220)	220X0625	1
SCREW-PAN-CROS (Ref # 220A)	220X0640	2
CIRCLIP-TYPE-E,6MM (Ref # 482)	482J6000	1