


# 1988 Mojave 110E

## PARTS DIAGRAM

### Front Hub

F2230-0150

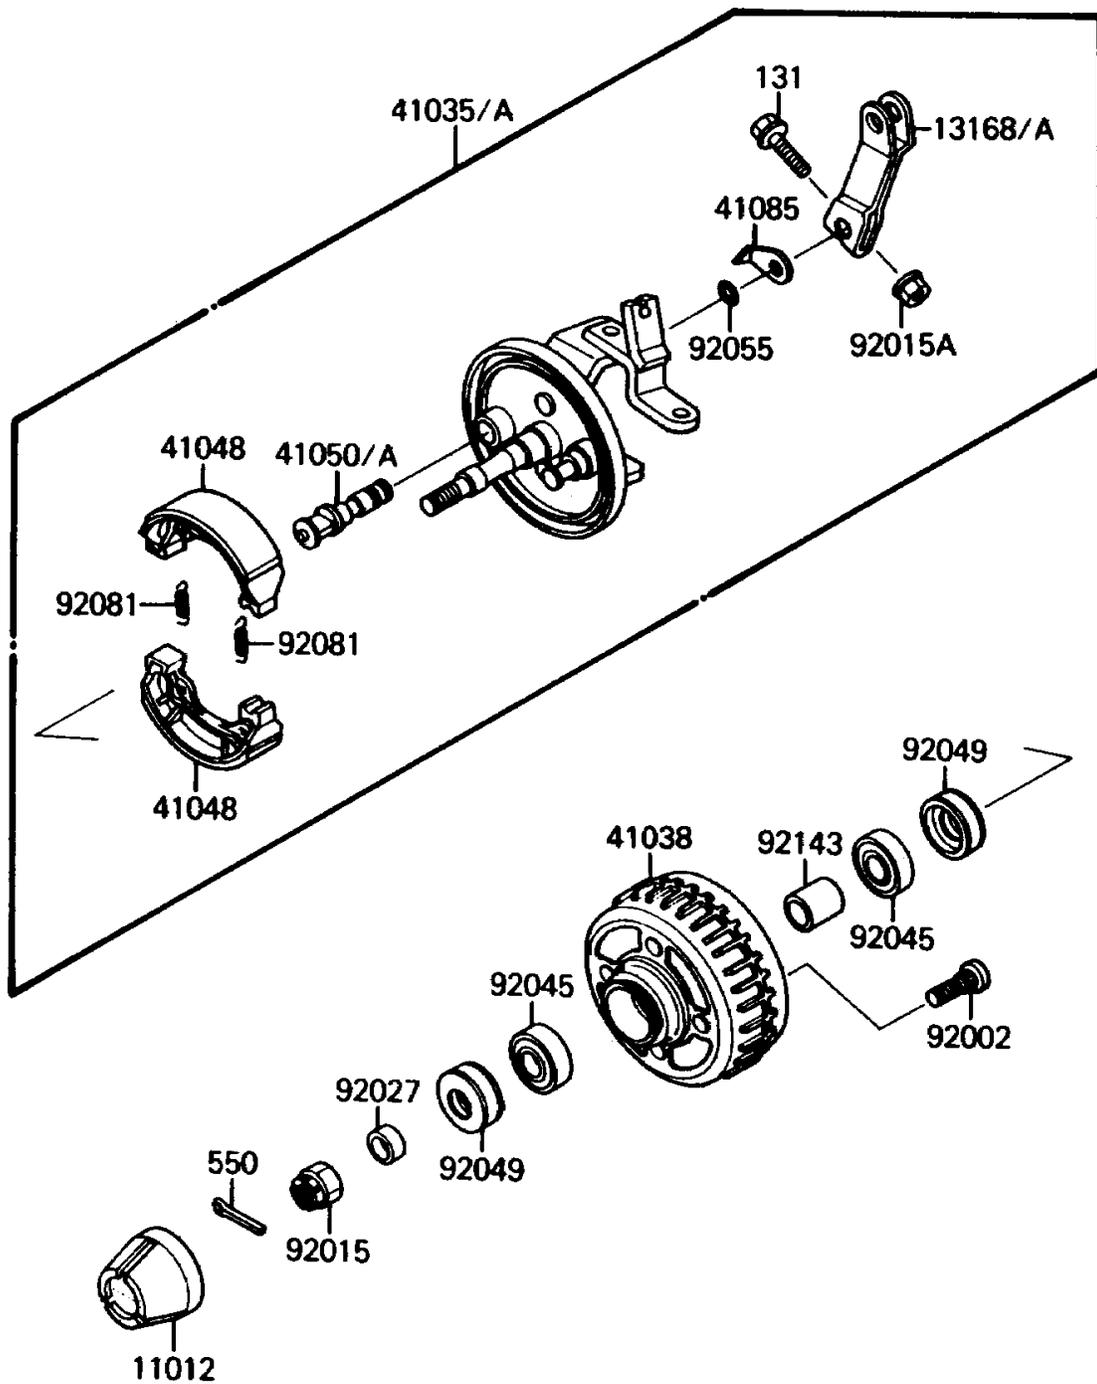

# 1988 Mojave 110E

## PARTS LIST

### Front Hub

ITEM NAME	PART NUMBER	QUANTITY
CAP,WHEEL (Ref # 11012)	11012-1519	2
LEVER,BRAKE CAM,LH (Ref # 13168)	13168-1325	1
LEVER,BRAKE CAM,RH (Ref # 13168A)	13168-1326	1
PANEL-ASSY-BRAKE,FR,LH (Ref # 41035)	41035-1215	1
PANEL-ASSY-BRAKE,FR,RH (Ref # 41035A)	41035-1216	1
DRUM,FRONT BRAKE (Ref # 41038)	41038-1171	2
SHOE-BRAKE (Ref # 41048)	41048-1052	4
CAM-BRAKE,FR,LH (Ref # 41050)	41050-1069	1
CAM-BRAKE,FR,RH (Ref # 41050A)	41050-1070	1
INDICATOR (Ref # 41085)	41085-1058	2
BOLT,10MM (Ref # 92002)	92002-1868	8
NUT,CASTLE,16MM (Ref # 92015)	42045-014	2
NUT,FLANGED,6MM,BLACK (Ref # 92015A)	92015-1237	2
COLLAR,16.0X22X9.5 (Ref # 92027)	92027-1815	2
BEARING-BALL,6203DDU2 AV2S (Ref # 92045)	92045-1192	4
SEAL-OIL (Ref # 92049)	92049-1197	4
RING-O,BRAKE CAM (Ref # 92055)	92055-004	2
SPRING,BRAKE SHOE (Ref # 92081)	41049-002	4
COLLAR,17.6X22.2X25 (Ref # 92143)	92143-1037	2
BOLT-FLANGED (Ref # 131)	131H0635	2
PIN-COTTER,4.0X30 (Ref # 550)	550D4030	2