


1988 Mojave 110E

PARTS DIAGRAM

Ignition Switch

F2770-0134

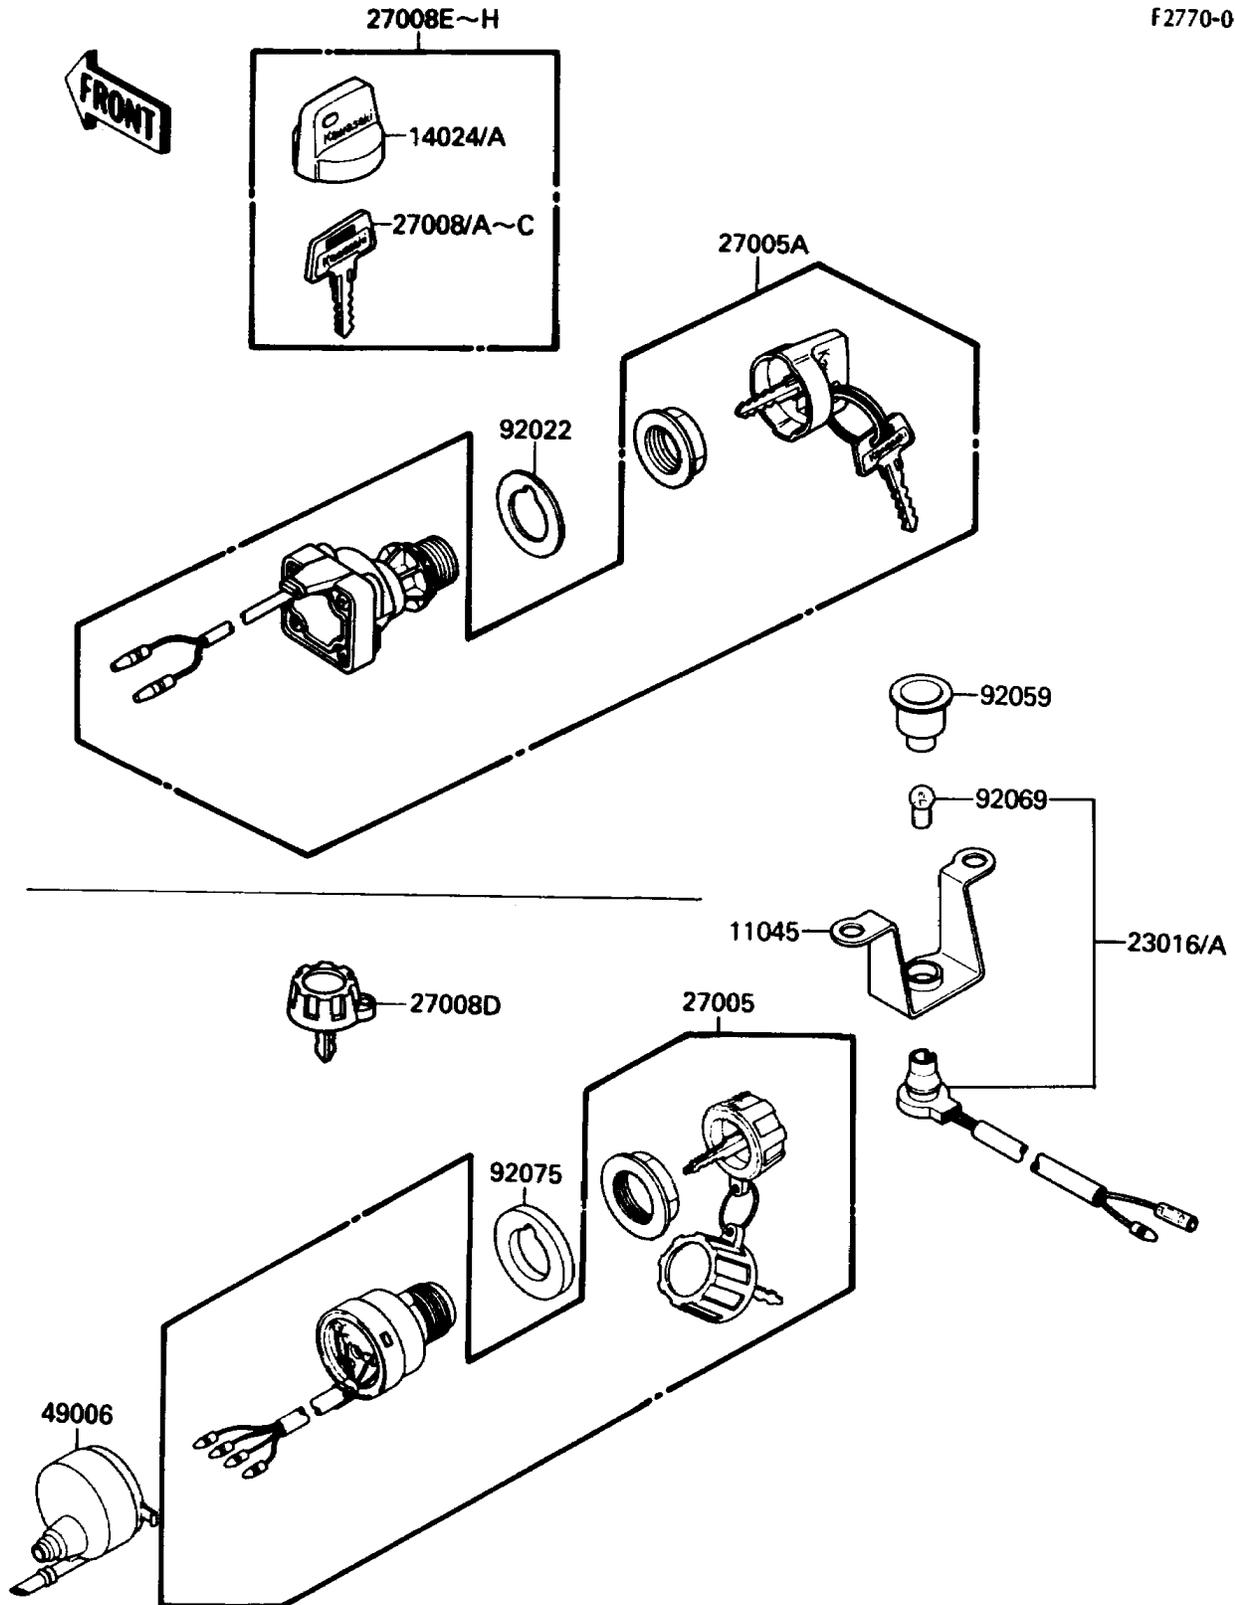

1988 Mojave 110E

PARTS LIST

Ignition Switch

ITEM NAME	PART NUMBER	QUANTITY
BRACKET,NEUTRAL LAMP (Ref # 11045)	11045-1267	1
COVER,KEY (Ref # 14024)	14024-1551	1
COVER,KEY (Ref # 14024A)	14024-1551	4
LAMP-ASSY,NEUTRAL (Ref # 23016A)	23016-1092	1
SWITCH-ASSY-IGNITION (Ref # 27005A)	27005-1131	1
KEY-LOCK,BLANK (Ref # 27008)	27008-1041	1
KEY-LOCK,BLANK (Ref # 27008A)	27008-1042	1
KEY-LOCK,BLANK (Ref # 27008B)	27008-1043	1
KEY-LOCK,BLANK (Ref # 27008C)	27008-1044	1
KEY-LOCK,BLANK (Ref # 27008E)	27008-1132	1
KEY-LOCK,BLANK (Ref # 27008F)	27008-1133	1
KEY-LOCK,BLANK (Ref # 27008G)	27008-1134	1
KEY-LOCK,BLANK (Ref # 27008H)	27008-1135	1
WASHER,IGNITION SWITCH (Ref # 92022)	92022-1929	1
TUBE,IGNITION SWITCH LAMP (Ref # 92059)	92059-1559	1
BULB,12V 3.4W (Ref # 92069)	92069-018	1