


2008 Ninja[®] ZX[™]-6R

PARTS DIAGRAM

Top Feed Injector

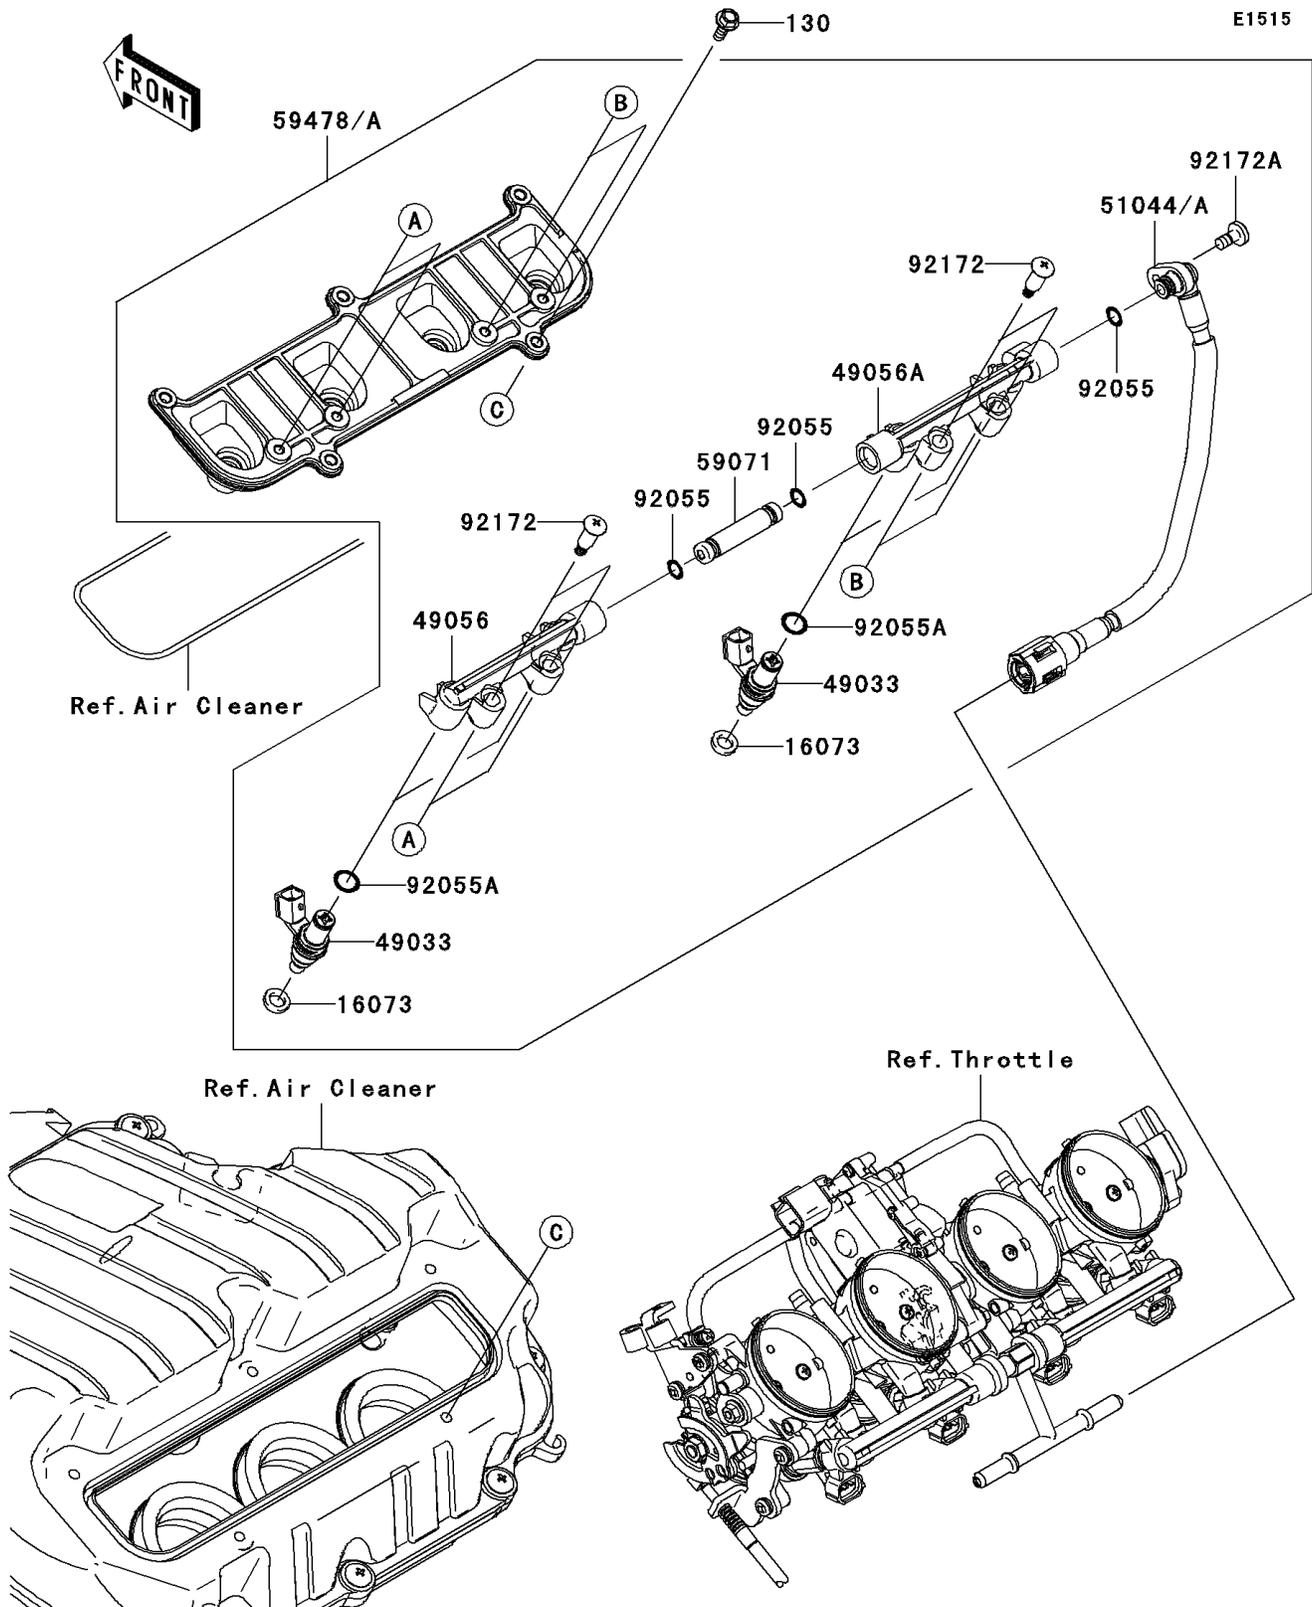

2008 Ninja® ZX™-6R

PARTS LIST

Top Feed Injector

ITEM NAME	PART NUMBER	QUANTITY
BOLT-FLANGED,5X14 (Ref # 130)	130BB0514	5
INSULATOR (Ref # 16073)	16073-0077	4
NOZZLE-INJECTION (Ref # 49033)	49033-0015	4
PIPE-INJECTION,LH (Ref # 49056)	49056-0015	1
PIPE-INJECTION,RH (Ref # 49056A)	49056-0016	1
TUBE-ASSY,FUEL (Ref # 51044A)	51044-0043	1
JOINT (Ref # 59071)	59071-0034	1
NOZZLE-ASSY, TOP INJECTOR (Ref # 59478A)	59478-0005	1
RING-O (Ref # 92055)	92055-0064	3
RING-O (Ref # 92055A)	92055-0170	4
SCREW,PIPE INJECTION (Ref # 92172)	92172-0064	4
SCREW,TORX (Ref # 92172A)	92172-0272	1