


2007 Ninja[®] ZX[™]-6R

PARTS DIAGRAM

Front Wheel

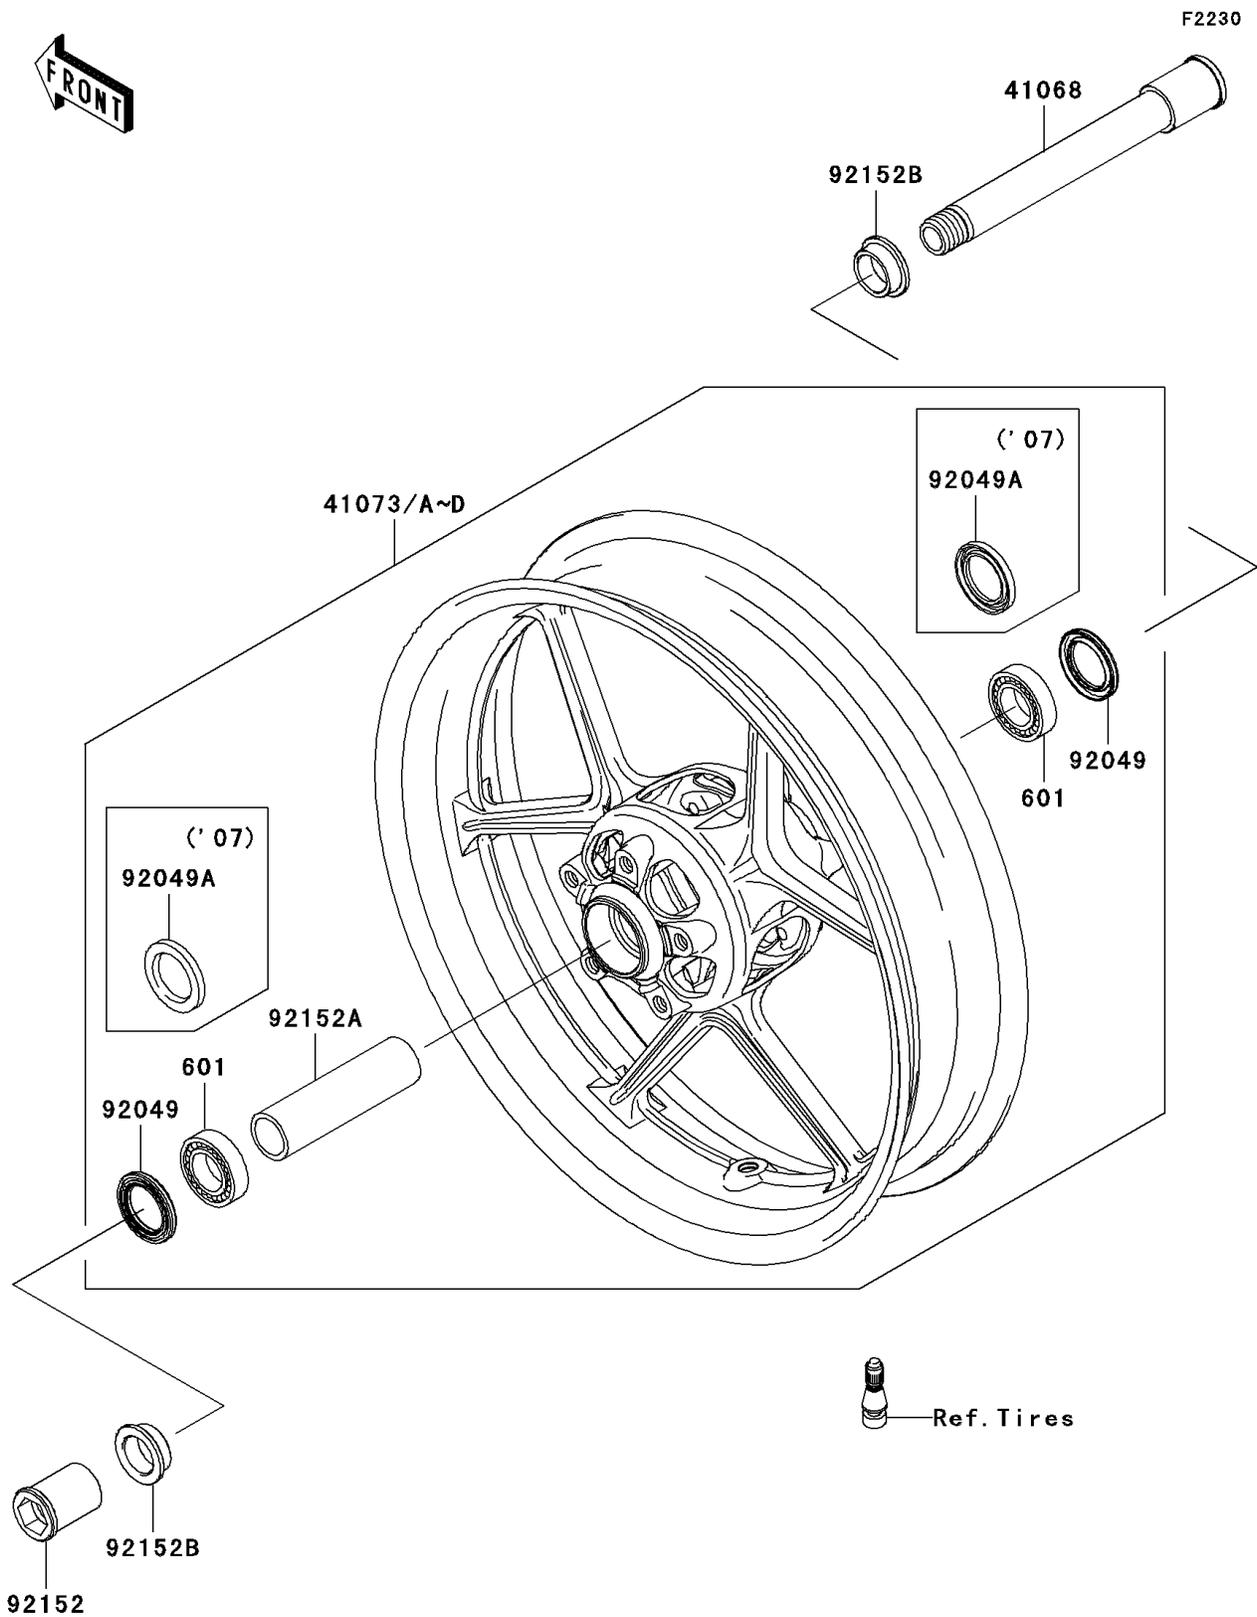

2007 Ninja[®] ZX[™]-6R

PARTS LIST

Front Wheel

ITEM NAME	PART NUMBER	QUANTITY
BEARING-BALL,#6005UU (Ref # 601)	601B6005UU	2
AXLE,FR (Ref # 41068)	41068-0034	1
WHEEL-ASSY,FR,M.P.RED (Ref # 41073)	41073-0107-17J	1
WHEEL-ASSY,FR,BLACK (Ref # 41073A)	41073-0107-18F	1
SEAL-OIL,BJN-C2 32X47X5 (Ref # 92049A)	92049-1377	2
COLLAR,FR AXLE,LH,L=44.5 (Ref # 92152)	92152-0240	1
COLLAR,FR HUB,L=115 (Ref # 92152A)	92152-0242	1
COLLAR,FR AXLE,L=13 (Ref # 92152B)	92152-0289	2