


# 2006 KFX400 PARTS DIAGRAM

Front Hub

F2230

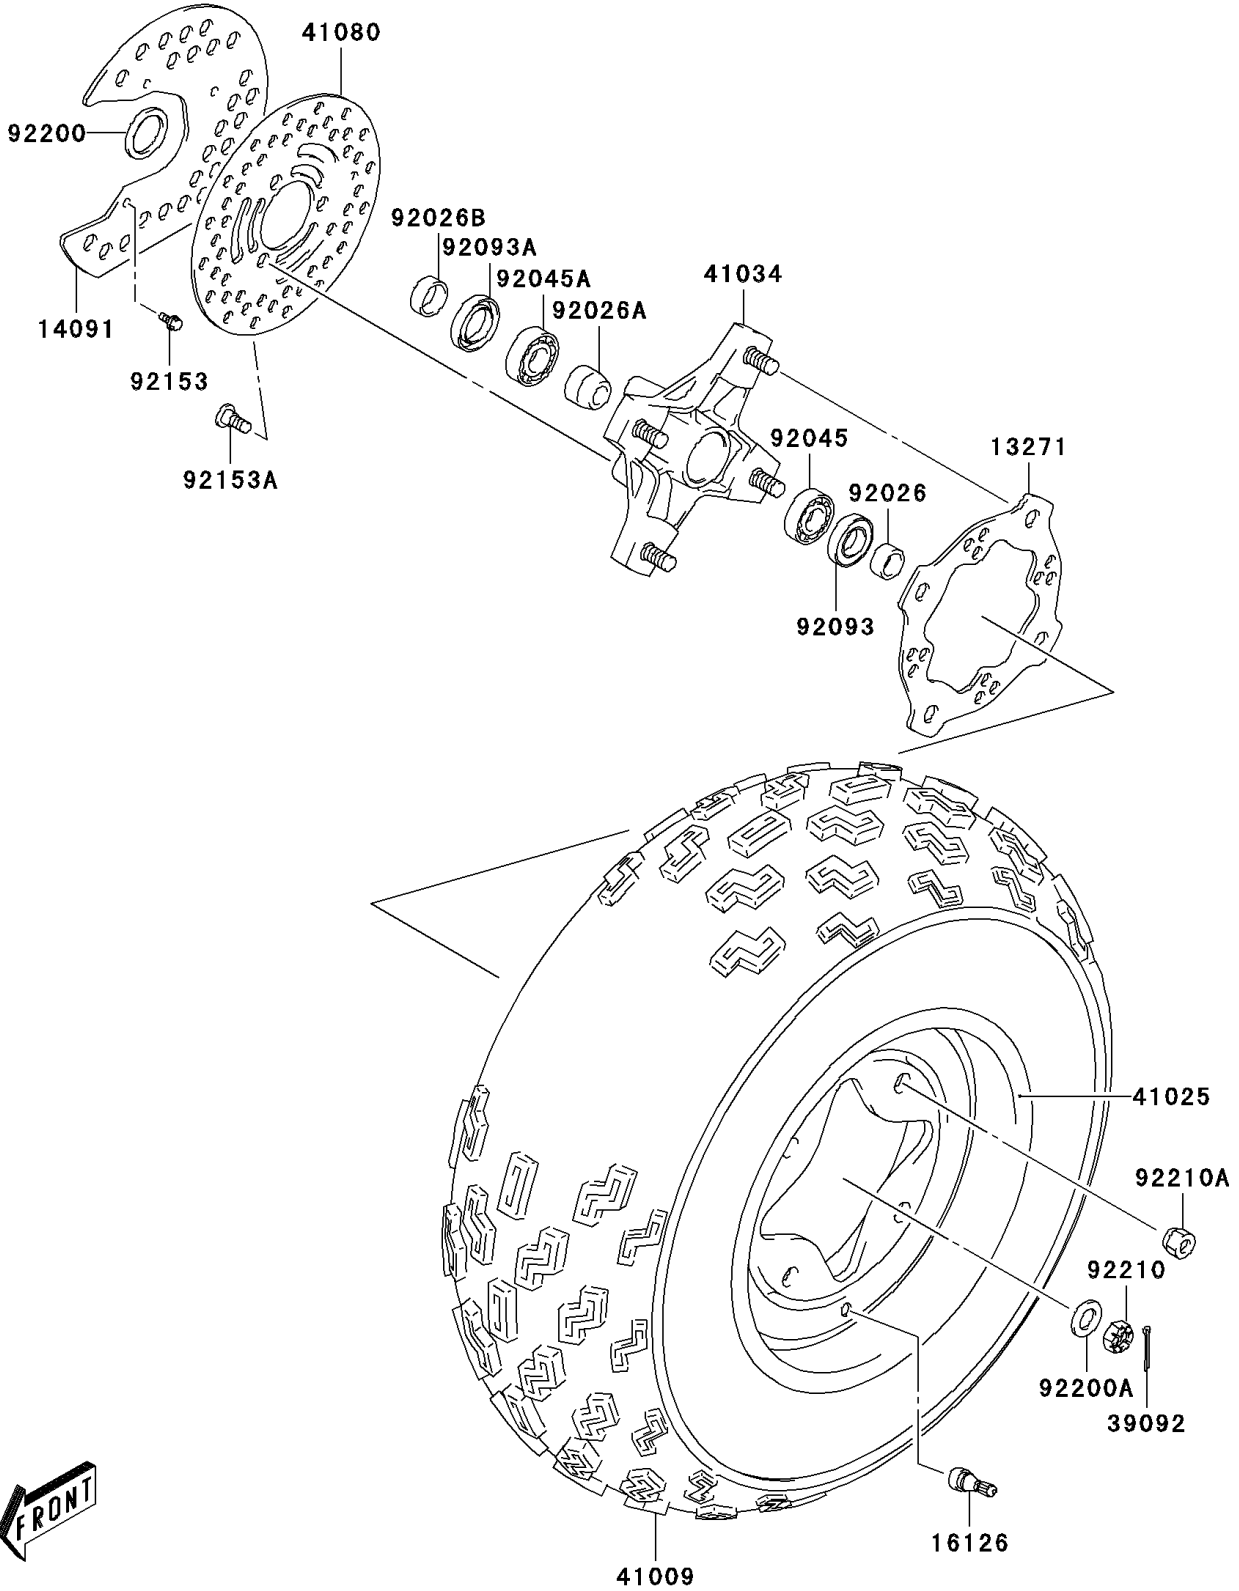

## 2006 KFX400 PARTS LIST

### Front Hub

ITEM NAME	PART NUMBER	QUANTITY
PLATE (Ref # 13271)	13271-S053	2
COVER,FRONT DISC (Ref # 14091)	14091-S185	2
VALVE,WHEEL RIM,TR412 (Ref # 16126)	16126-S002	2
PIN-HAIR (Ref # 39092)	39092-S007	2
TIRE,FR (Ref # 41009)	41009-S012	2
RIM,FRONT WHEEL,10X5.5AT (Ref # 41025)	41025-S020	2
DRUM-ASSY,FR,BLACK (Ref # 41034)	41034-S005-503	2
DISC,FRONT BRAKE (Ref # 41080)	41080-S005	2
SPACER (Ref # 92026)	92026-S090	2
SPACER (Ref # 92026A)	92026-S097	2
SPACER (Ref # 92026B)	92026-S165	2
BEARING-BALL,FRONT HUB (Ref # 92045)	92045-S036	2
BEARING-BALL,FRONT HUB (Ref # 92045A)	92045-S048	2
SEAL (Ref # 92093)	92093-S033	2
SEAL (Ref # 92093A)	92093-S034	2
BOLT,FRONT DISC COVER (Ref # 92153)	92153-S258	6
BOLT (Ref # 92153A)	92153-S283	6
WASHER,DRIVEN GEAR (Ref # 92200)	92200-S090	2
WASHER,FRONT AXLE (Ref # 92200A)	92200-S099	2
NUT,FRONT AXLE (Ref # 92210)	92210-S075	2
NUT (Ref # 92210A)	92210-S179	8