


2006 KFX400 PARTS DIAGRAM

Rear Hub

F2240

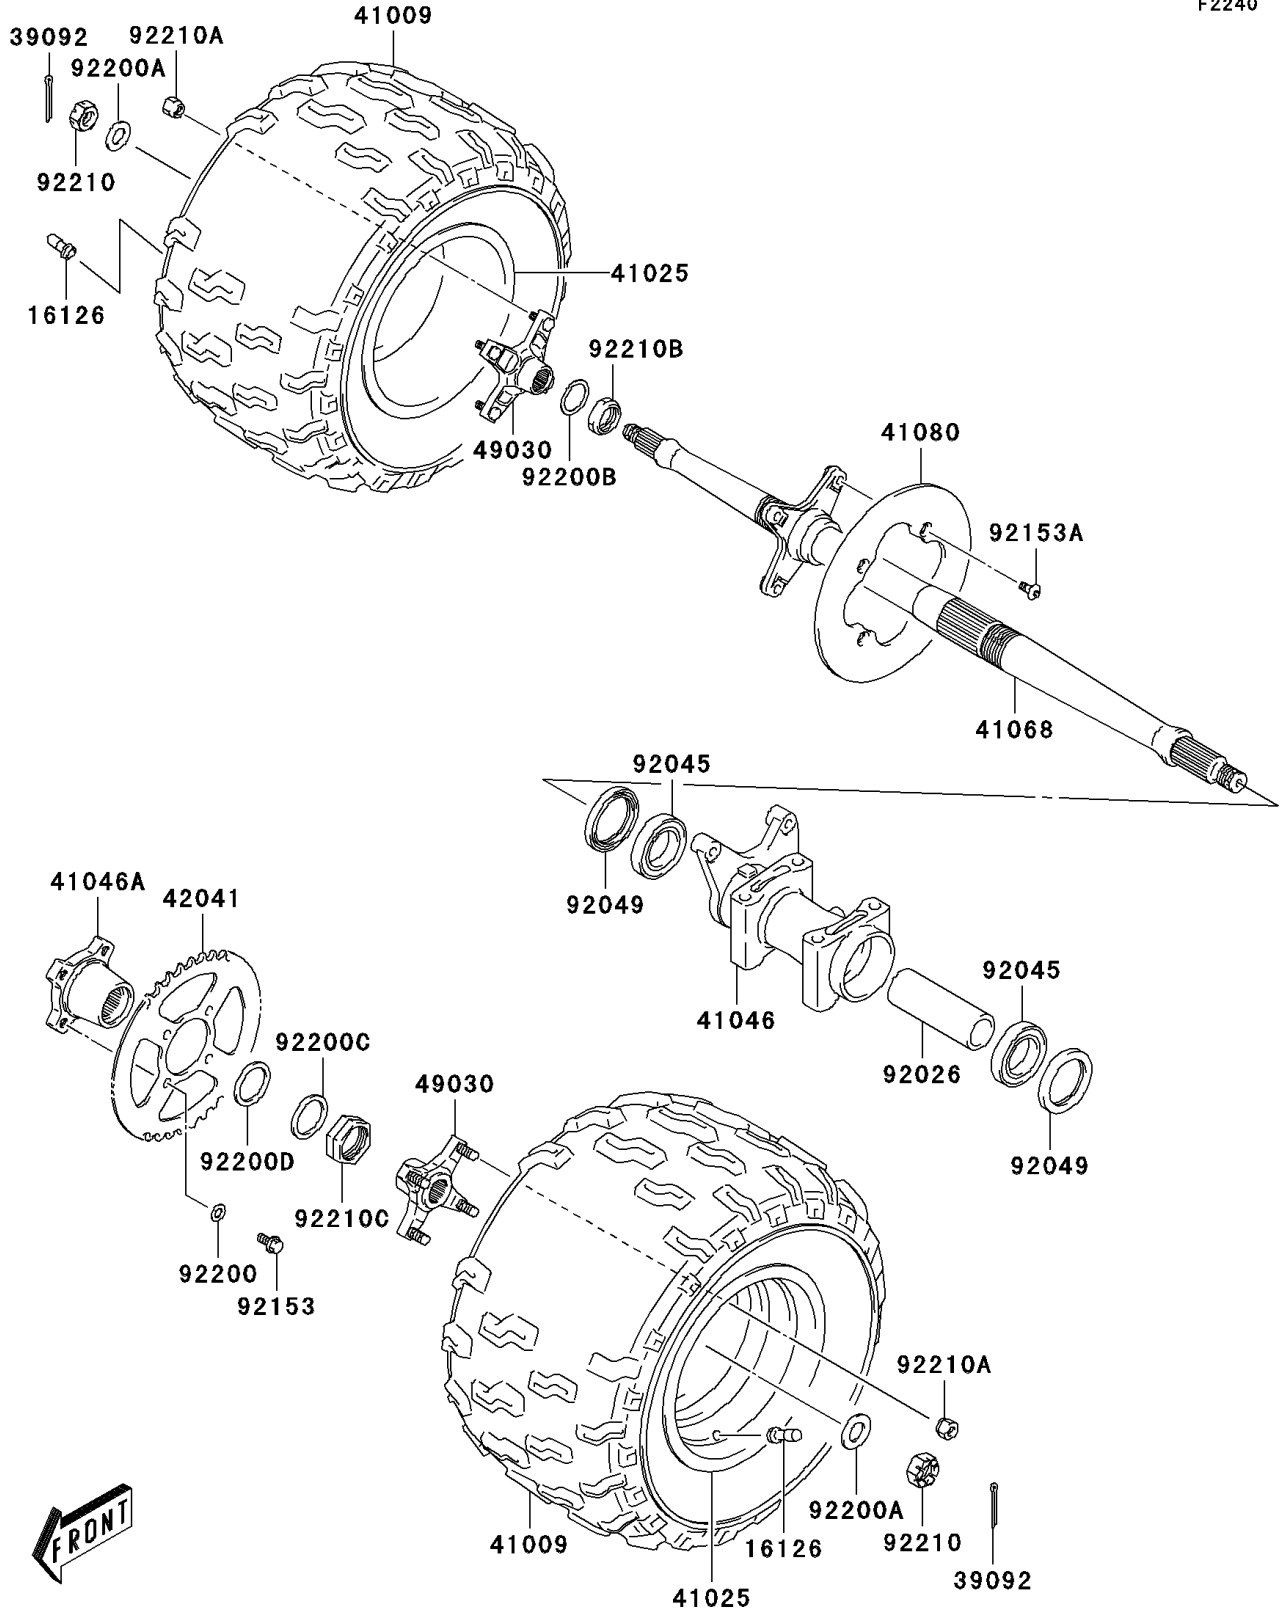

2006 KFX400 PARTS LIST

Rear Hub

ITEM NAME	PART NUMBER	QUANTITY
VALVE,WHEEL RIM,TR412 (Ref # 16126)	16126-S002	2
PIN-HAIR,REAR HUB (Ref # 39092)	39092-S010	2
TIRE,RR (Ref # 41009)	41009-S013	2
RIM,REAR WHEEL (Ref # 41025)	41025-S021	2
HOUSING-BEARING (Ref # 41046)	41046-S007	1
HOUSING-BEARING (Ref # 41046A)	41046-S009	1
AXLE,RR (Ref # 41068)	41068-S019	1
DISC,REAR BRAKE (Ref # 41080)	41080-S006	1
SPROCKET-HUB (Ref # 42041)	42041-S011	1
HUB,RR,BLACK (Ref # 49030)	49030-S006-503	2
SPACER,REAR AXLE (Ref # 92026)	92026-S106	1
BEARING-BALL,REAR AXLE (Ref # 92045)	92045-S049	2
SEAL-OIL,AXLE (Ref # 92049)	92049-S052	2
BOLT,REAR SPROCKET (Ref # 92153)	92153-S277	4
BOLT (Ref # 92153A)	92153-S283	4
WASHER,REAR SPROCKET (Ref # 92200)	92200-S139	4
WASHER,REAR HUB (Ref # 92200A)	92200-S141	2
WASHER,REAR AXLE (Ref # 92200B)	92200-S143	1
WASHER (Ref # 92200C)	92200-S278	1
WASHER (Ref # 92200D)	92200-S279	1
NUT,REAR HUB (Ref # 92210)	92210-S113	2
NUT (Ref # 92210A)	92210-S179	8
NUT (Ref # 92210B)	92210-S180	1
NUT,REAR AXLE (Ref # 92210C)	92210-S181	1