


## 2006 KFX50 PARTS DIAGRAM

Front Hub

F2230

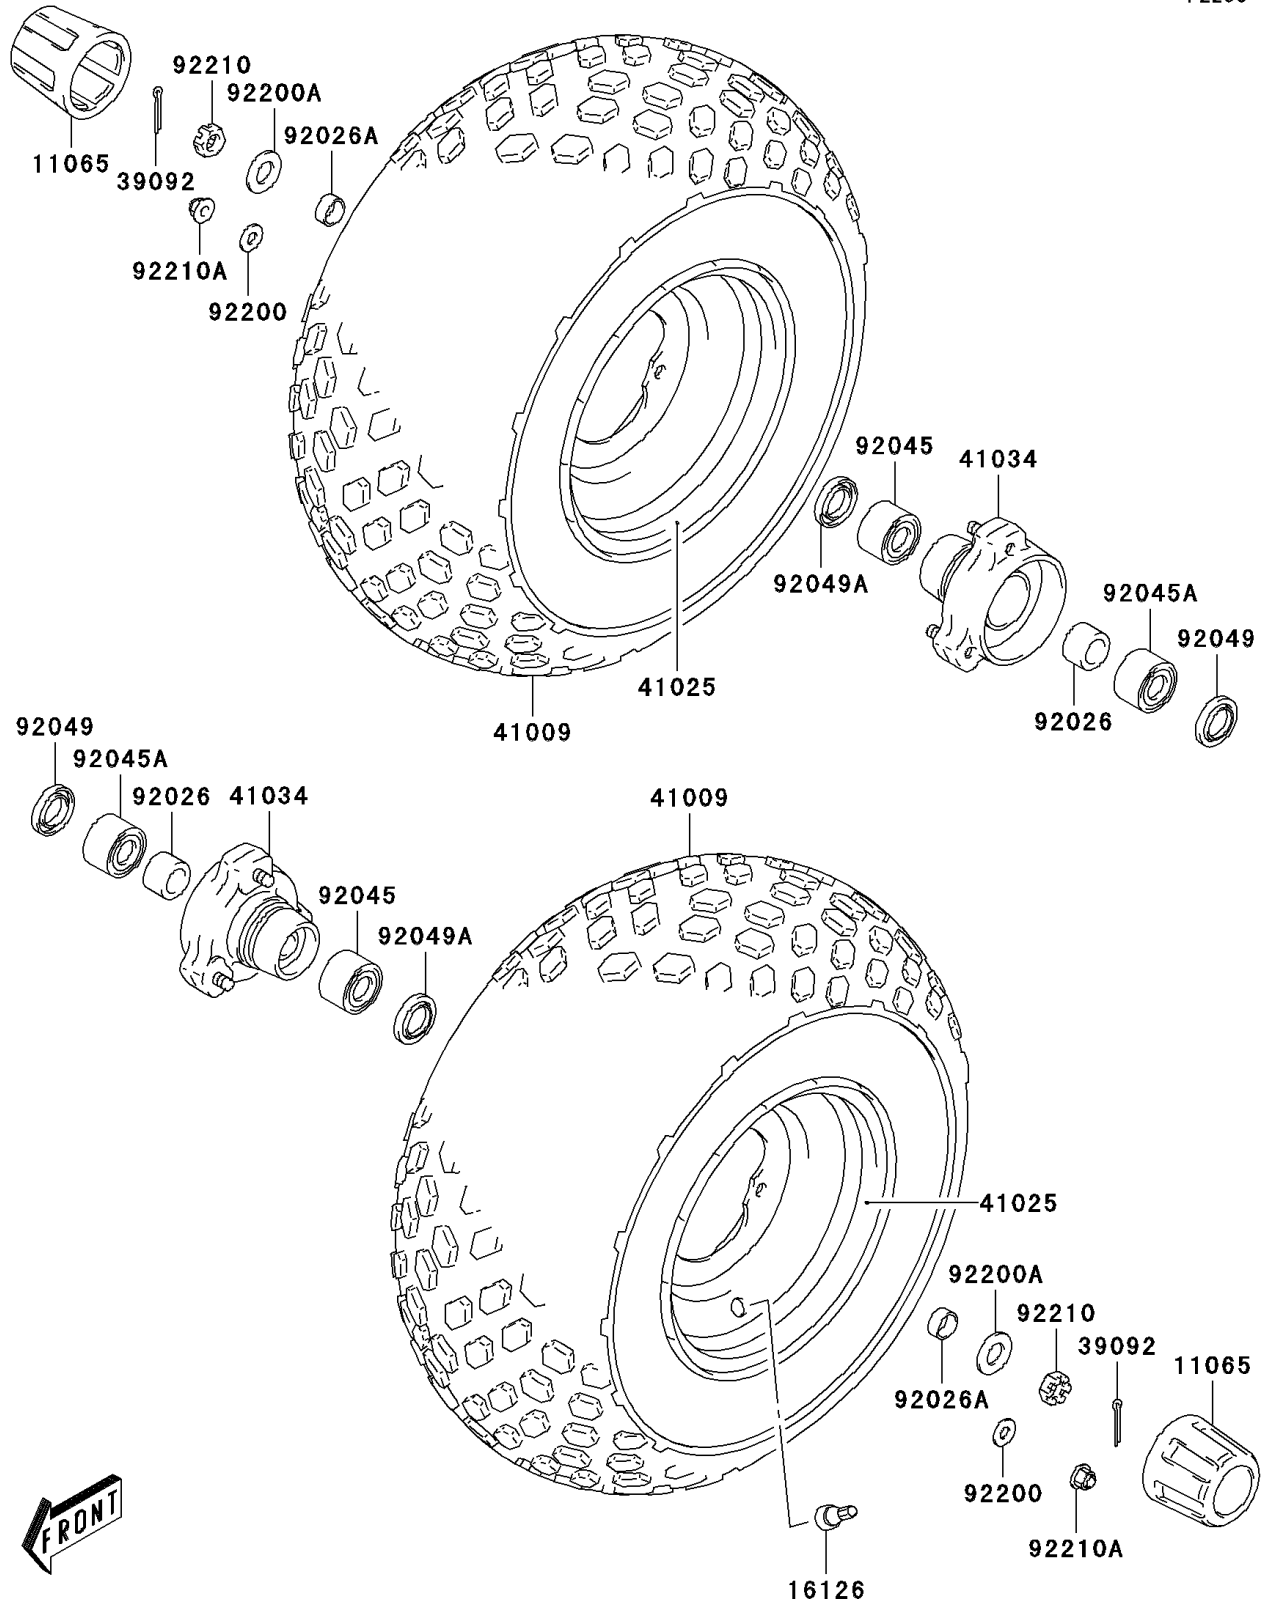

## 2006 KFX50 PARTS LIST

### Front Hub

ITEM NAME	PART NUMBER	QUANTITY
CAP,WHEEL (Ref # 11065)	11065-S022	1
VALVE,WHEEL RIM,TR412 (Ref # 16126)	16126-S002	1
PIN-HAIR (Ref # 39092)	39092-S007	1
TIRE (Ref # 41009)	41009-S009	1
RIM,FRONT WHEEL,B.SILVER (Ref # 41025)	41025-S005-530	1
DRUM-ASSY,FR (Ref # 41034)	41034-S003	1
SPACER,FRONT HUB BEARING (Ref # 92026)	92026-S061	1
SPACER,FRONT AXLE (Ref # 92026A)	92026-S062	1
BEARING-BALL,FRONT HUB (Ref # 92045)	92045-S036	1
BEARING-BALL,FRONT HUB (Ref # 92045A)	92045-S037	1
SEAL-OIL,22X40X6 (Ref # 92049)	92049-S032	1
SEAL-OIL,FRONT HUB BRG (Ref # 92049A)	92049-S063	1
WASHER,WHEEL NUT (Ref # 92200)	92200-S098	1
WASHER,FRONT AXLE (Ref # 92200A)	92200-S099	1
NUT,FRONT AXLE (Ref # 92210)	92210-S075	1
NUT (Ref # 92210A)	92210-S094	1