


PARTS DIAGRAM

Air Cleaner

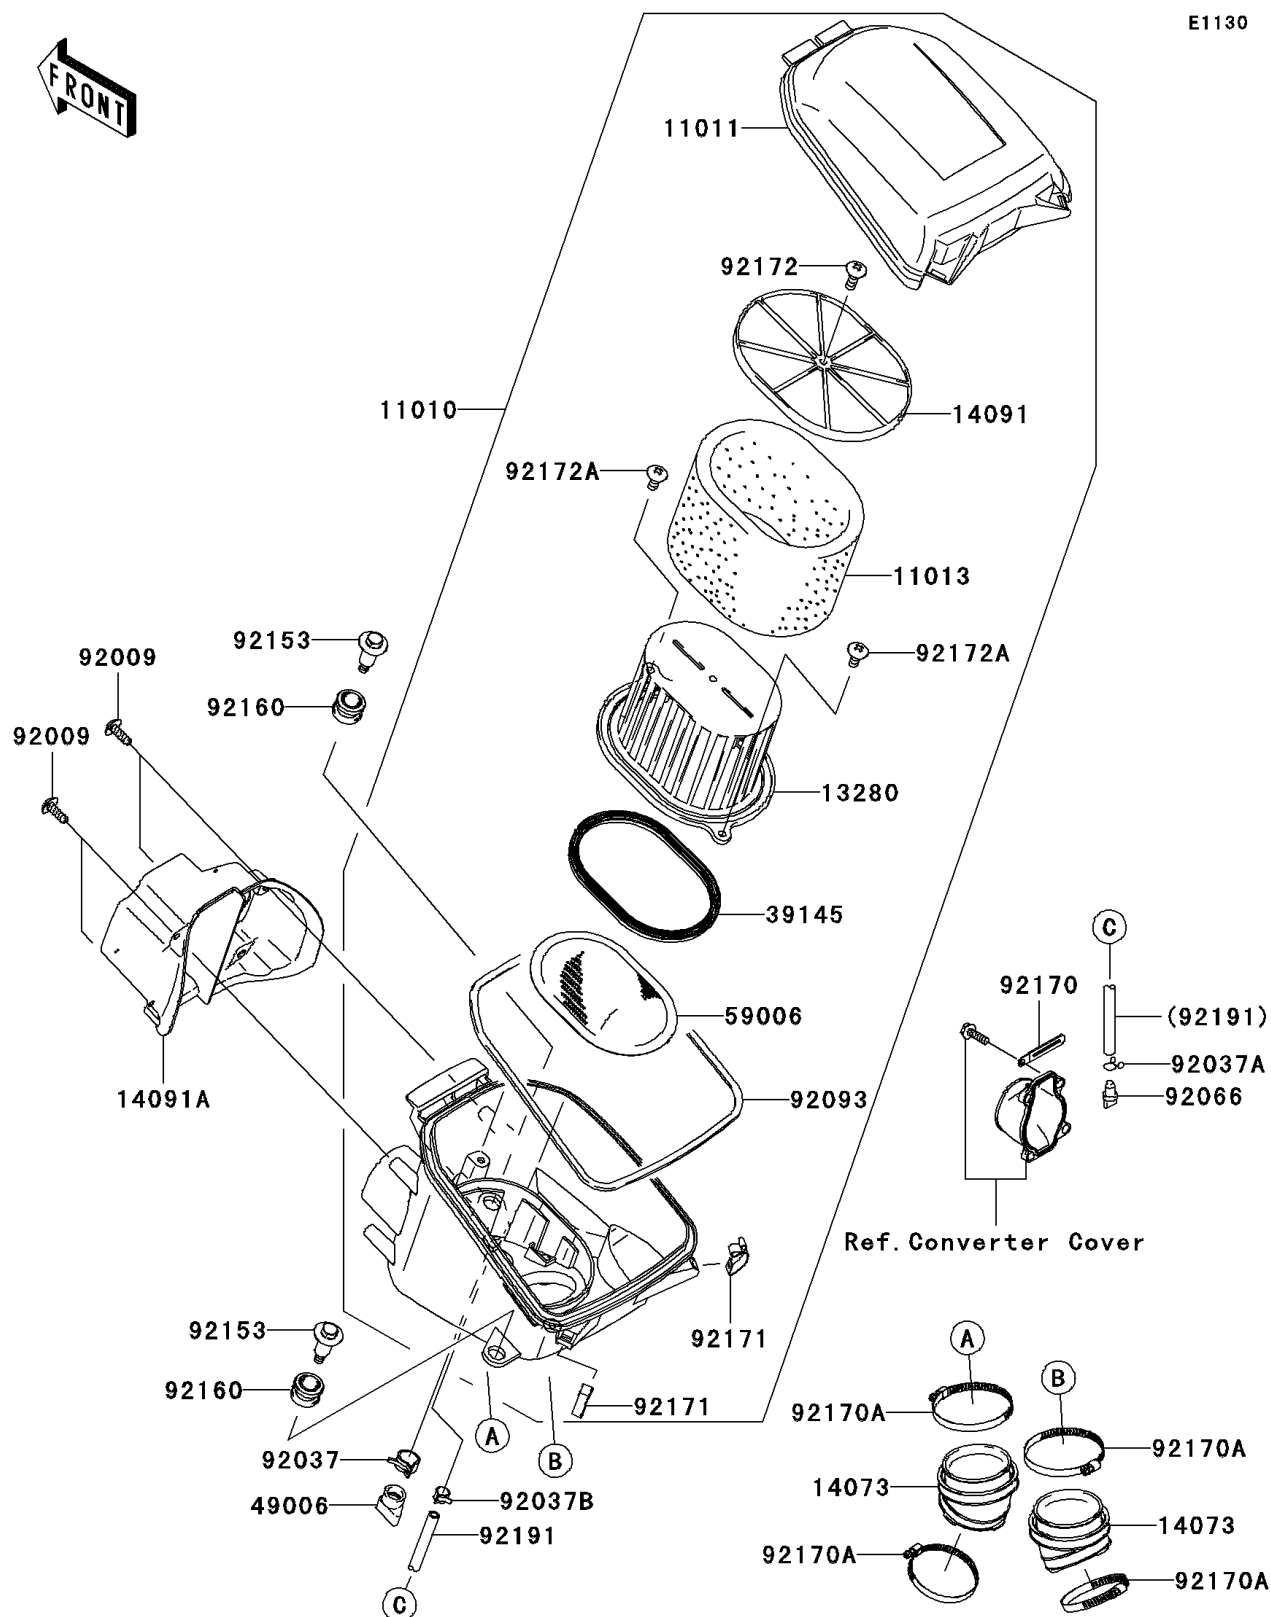

PARTS LIST

Air Cleaner

ITEM NAME	PART NUMBER	QUANTITY
FILTER-ASSY-AIR,F.BLACK (Ref # 11010)	11010-0125-6Z	1
CASE-AIR FILTER,UPP,F.BLACK (Ref # 11011)	11011-0017-6Z	1
ELEMENT-AIR FILTER (Ref # 11013)	11013-0021	1
HOLDER (Ref # 13280)	13280-0048	1
DUCT,JOINT (Ref # 14073)	14073-0030	2
COVER,ELEMENT (Ref # 14091)	14091-0163	1
COVER,FR (Ref # 14091A)	14091-0164	1
TRIM-SEAL (Ref # 39145)	39145-0001	1
BOOT (Ref # 49006)	49006-1292	1
ARRESTER-FLAME (Ref # 59006)	59006-0002	1
SCREW,TAPPING (Ref # 92009)	92009-1113	4
CLAMP,HOSE CLIP (Ref # 92037)	92037-1460	1
CLAMP,TUBE (Ref # 92037A)	92037-147	1
CLAMP,TUBE (Ref # 92037B)	92037-1505	1
PLUG,DRAIN (Ref # 92066)	92066-1211	1
SEAL (Ref # 92093)	92093-0083	1
BOLT,FLANGED,6X28.7 (Ref # 92153)	92153-1052	2
DAMPER (Ref # 92160)	92160-1594	2
CLAMP (Ref # 92170)	92170-1514	1
CLAMP (Ref # 92170A)	92170-1763	4
CLAMP (Ref # 92171)	92171-0225	2
SCREW,6X18 (Ref # 92172)	92172-0130	1
SCREW,6X14 (Ref # 92172A)	92172-0131	2
TUBE,7X11X470 (Ref # 92191)	92191-1531	1