


2008 Vulcan® 1600 Nomad™ PARTS DIAGRAM

Valve(s)

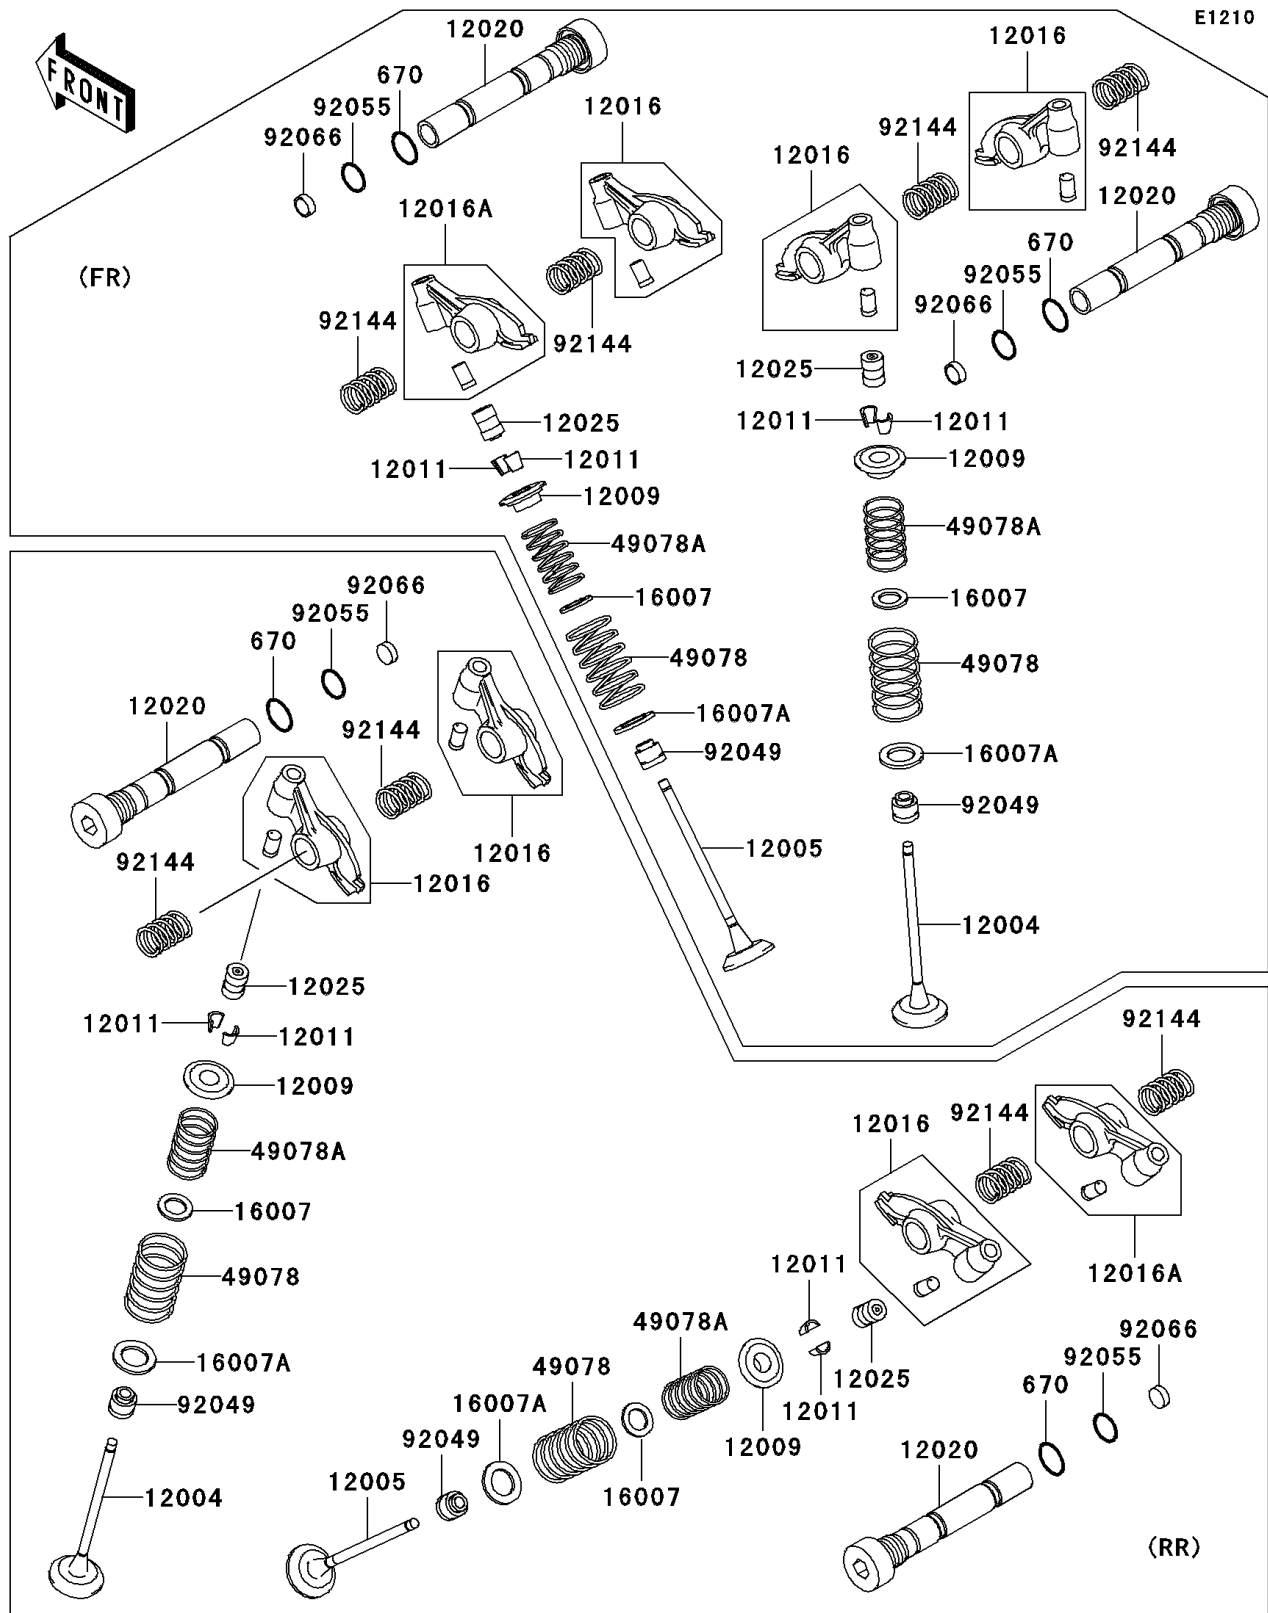

2008 Vulcan® 1600 Nomad™ PARTS LIST

Valve(s)

ITEM NAME	PART NUMBER	QUANTITY
O RING,20MM (Ref # 670)	670B2020	1
VALVE-INTAKE (Ref # 12004)	12004-1072	1
VALVE-EXHAUST (Ref # 12005)	12005-1268	1
RETAINER-VALVE SPRING (Ref # 12009)	12009-005	1
COLLET,RETAINER (Ref # 12011)	12011-004	1
ARM-ROCKER (Ref # 12016)	12016-1112	1
ARM-ROCKER (Ref # 12016A)	12016-1113	1
SHAFT-ROCKER (Ref # 12020)	12020-1061	1
ADJUSTER-LASH (Ref # 12025)	12025-1053	1
SEAT-SPRING,12X20X0.5 (Ref # 16007)	16007-1031	1
SEAT-SPRING,21X29.5X0.5 (Ref # 16007A)	16007-1137	1
SPRING-ENGINE VALVE,OUTER (Ref # 49078)	49078-1157	1
SPRING-ENGINE VALVE,INNER (Ref # 49078A)	49078-1158	1
SEAL-OIL,RV37129.5 (Ref # 92049)	92049-016	1
RING-O,12X1.5 (Ref # 92055)	92055-025	1
PLUG (Ref # 92066)	92066-1198	1
SPRING,ROCKER ARM (Ref # 92144)	92144-1221	1