

Cowling

Exploded view diagram of a motorcycle headlight assembly. The diagram shows the following components and their labels:

- 92154**: Screws/bushings at the top of the main housing.
- 92200**: Washers/bushings below 92154.
- 14093L**: The main upper headlight housing.
- 92015**: Pins/bushings on the side of the housing.
- 23062**: A bracket or support arm.
- Ref. Headlight(s)**: Reference to the main headlight unit.
- 130A** and **92200A**: Components at the bottom left.
- 92154B** and **92200B**: Screws/bushings on the side of the main housing.
- 39156**: A long thin bar or bracket.
- 14093**: The main lower headlight housing.
- 92210**: Multiple pins/bushings connecting various parts.
- 92161**: A small rectangular component.
- 11057**: A bracket or support arm.
- Ref. Headlight(s)**: Reference to the main headlight unit.
- 130**: Multiple screws/bushings used for mounting.
- 14093F~J**: A side housing or bracket.
- 130C**: A screw/bushing.
- 92210**: Pins/bushings on the side housing.
- 130B**: A screw/bushing at the bottom.
- 23062A**: A bracket or support arm.
- Ref. Front Fork**: Reference to the front fork assembly.
- 14093K**: A bracket or support arm.
- 92154A**: A screw/bushing on the bracket.
- 3A~E**: A bracket or support arm.
- 130C**: A screw/bushing on the bracket.
- D**: A circular component or cap.

A "FRONT" arrow is located in the top left corner, pointing towards the left.

2022 Z400 PARTS LIST

Cowling

ITEM NAME	PART NUMBER	QUANTITY
-----------	-------------	----------