


# 2020 MULE SX™ PARTS DIAGRAM

Crankcase

E1411

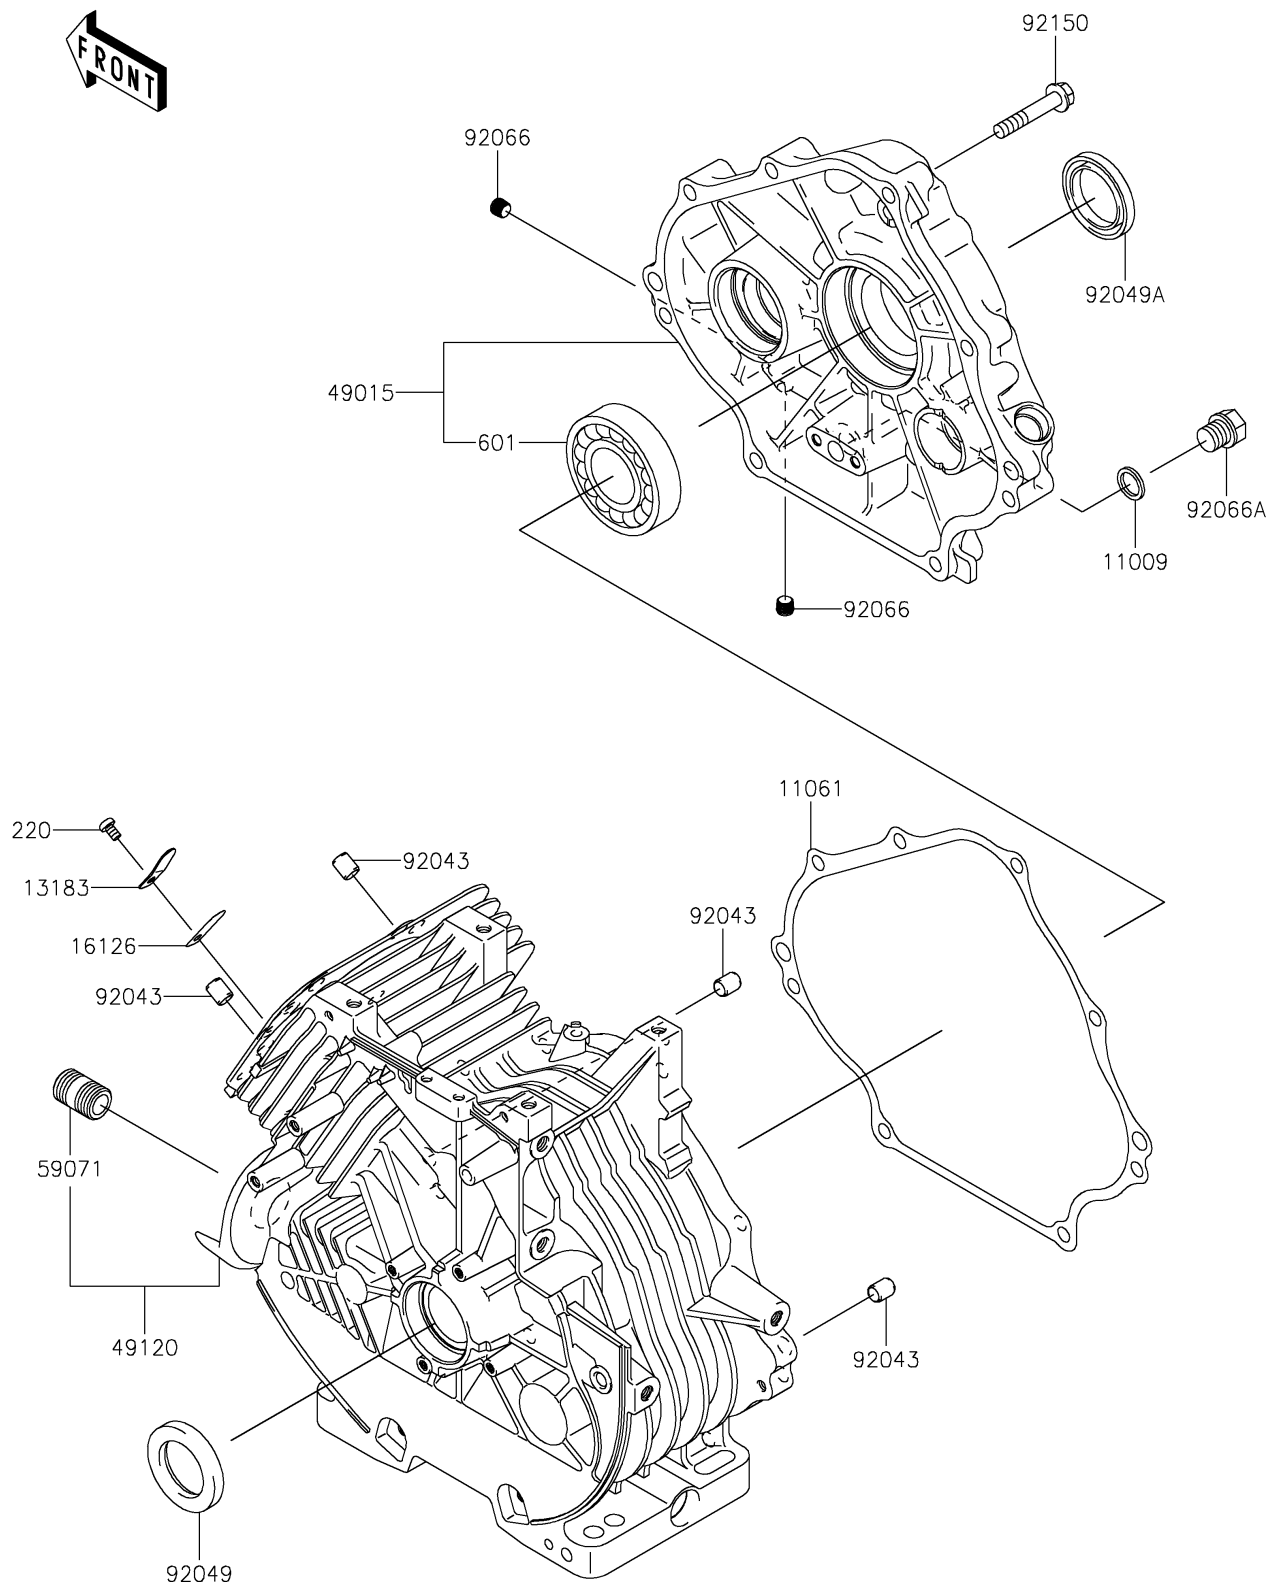

## 2020 MULE SX™ PARTS LIST

### Crankcase

| ITEM NAME                              | PART NUMBER | QUANTITY |
|----------------------------------------|-------------|----------|
| GASKET (Ref # 11009)                   | 11009-2175  | 1        |
| GASKET,COVER-CRANKCASE (Ref # 11061)   | 11061-0798  | 1        |
| PLATE (Ref # 13183)                    | 13183-2120  | 1        |
| VALVE (Ref # 16126)                    | 16126-2146  | 1        |
| COVER-CRANKCASE (Ref # 49015)          | 49015-0038  | 1        |
| CRANKCASE-COMP (Ref # 49120)           | 49120-6208  | 1        |
| JOINT (Ref # 59071)                    | 59071-0733  | 1        |
| PIN (Ref # 92043)                      | 92043-7001  | 4        |
| SEAL-OIL,SD 35X48X8 R HS (Ref # 92049) | 92049-7010  | 1        |
| SEAL-OIL (Ref # 92049A)                | 92049-7018  | 1        |
| PLUG (Ref # 92066)                     | 92066-0881  | 2        |
| PLUG,14X12 (Ref # 92066A)              | 92066-2253  | 1        |
| BOLT,8X45 (Ref # 92150)                | 92150-2252  | 8        |
| SCREW-PAN-CROS,5X8 (Ref # 220)         | 220AA0508   | 1        |
| BEARING-BALL (Ref # 601)               | 601A6207    | 1        |