


1988 LTD

PARTS DIAGRAM

Front Wheel

F223U-0022

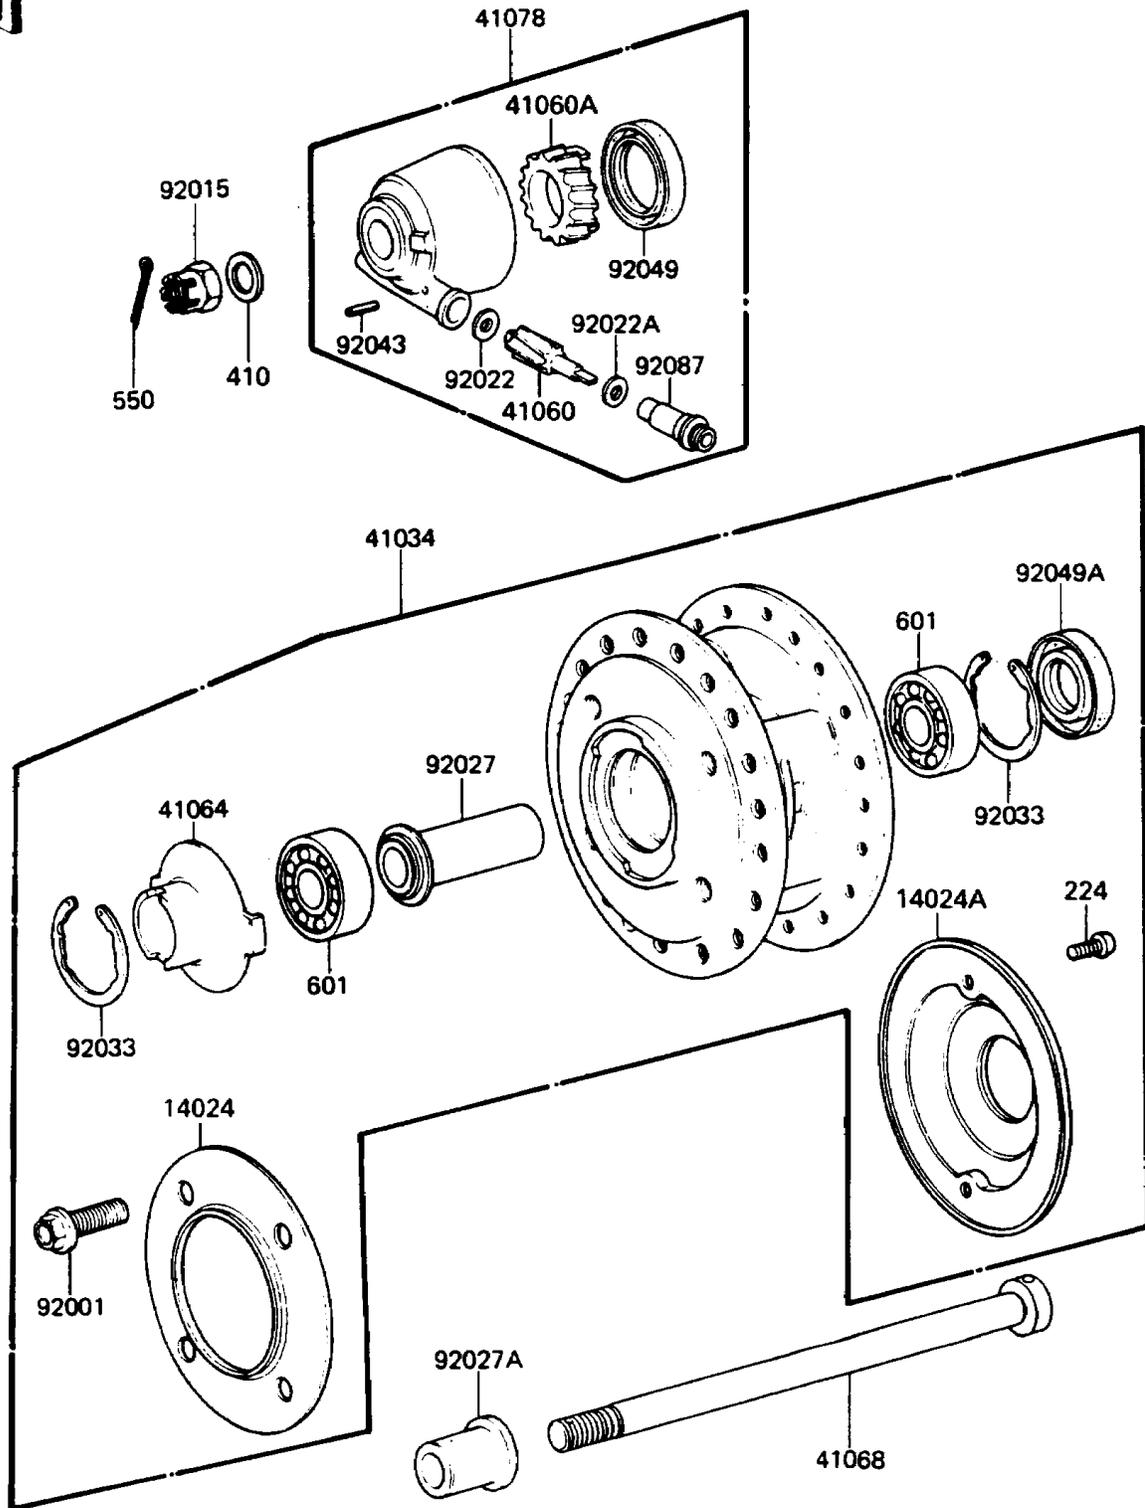

1988 LTD

PARTS LIST

Front Wheel

ITEM NAME	PART NUMBER	QUANTITY
COVER,DUST,LH (Ref # 14024)	14025-1277	1
COVER,DUST,RH (Ref # 14024A)	14025-1341	1
DRUM-ASSY,FR (Ref # 41034)	41034-1033	1
GEAR-METER SCREW,9T (Ref # 41060)	41060-1016	1
GEAR-METER SCREW,25T (Ref # 41060A)	41060-1041	1
RECEIVER-SPEEDOMETER (Ref # 41064)	41064-1006	1
AXLE,FR,L=230 (Ref # 41068)	41068-1099	1
CASE-ASSY-METER GEAR (Ref # 41078)	41078-1020	1
BOLT,FLANGED,10X30 (Ref # 92001)	92001-1173	4
NUT,CASTLE,14MM (Ref # 92015)	42045-020	1
WASHER,5.1X9X0.4 (Ref # 92022)	41063-001	1
WASHER,5.1X10X1 (Ref # 92022A)	92022-1062	1
COLLAR,L=55 (Ref # 92027)	92027-1223	1
COLLAR,L=30 (Ref # 92027A)	92027-1225	1
RING-SNAP,42MM (Ref # 92033)	92033-1041	2
PIN,SPRING (Ref # 92043)	41082-001	1
SEAL-OIL,BJN30427-C3 (Ref # 92049)	92049-1057	1
SEAL-OIL,BJN22425 (Ref # 92049A)	92049-1058	1
BUSHING-METER GEAR (Ref # 92087)	92087-1002	1
SCREW-PAN-WP-CROS (Ref # 224)	224B0514	2
WASHER-PLAIN-SMALL,14MM (Ref # 410)	410B1400	1
PIN-COTTER,3.0X25 (Ref # 550)	550D3025	1
BEARING-BALL,#6302C3 (Ref # 601)	601B6302	2