


# 1987 Vulcan 88 SE

## PARTS DIAGRAM

Valve(s)

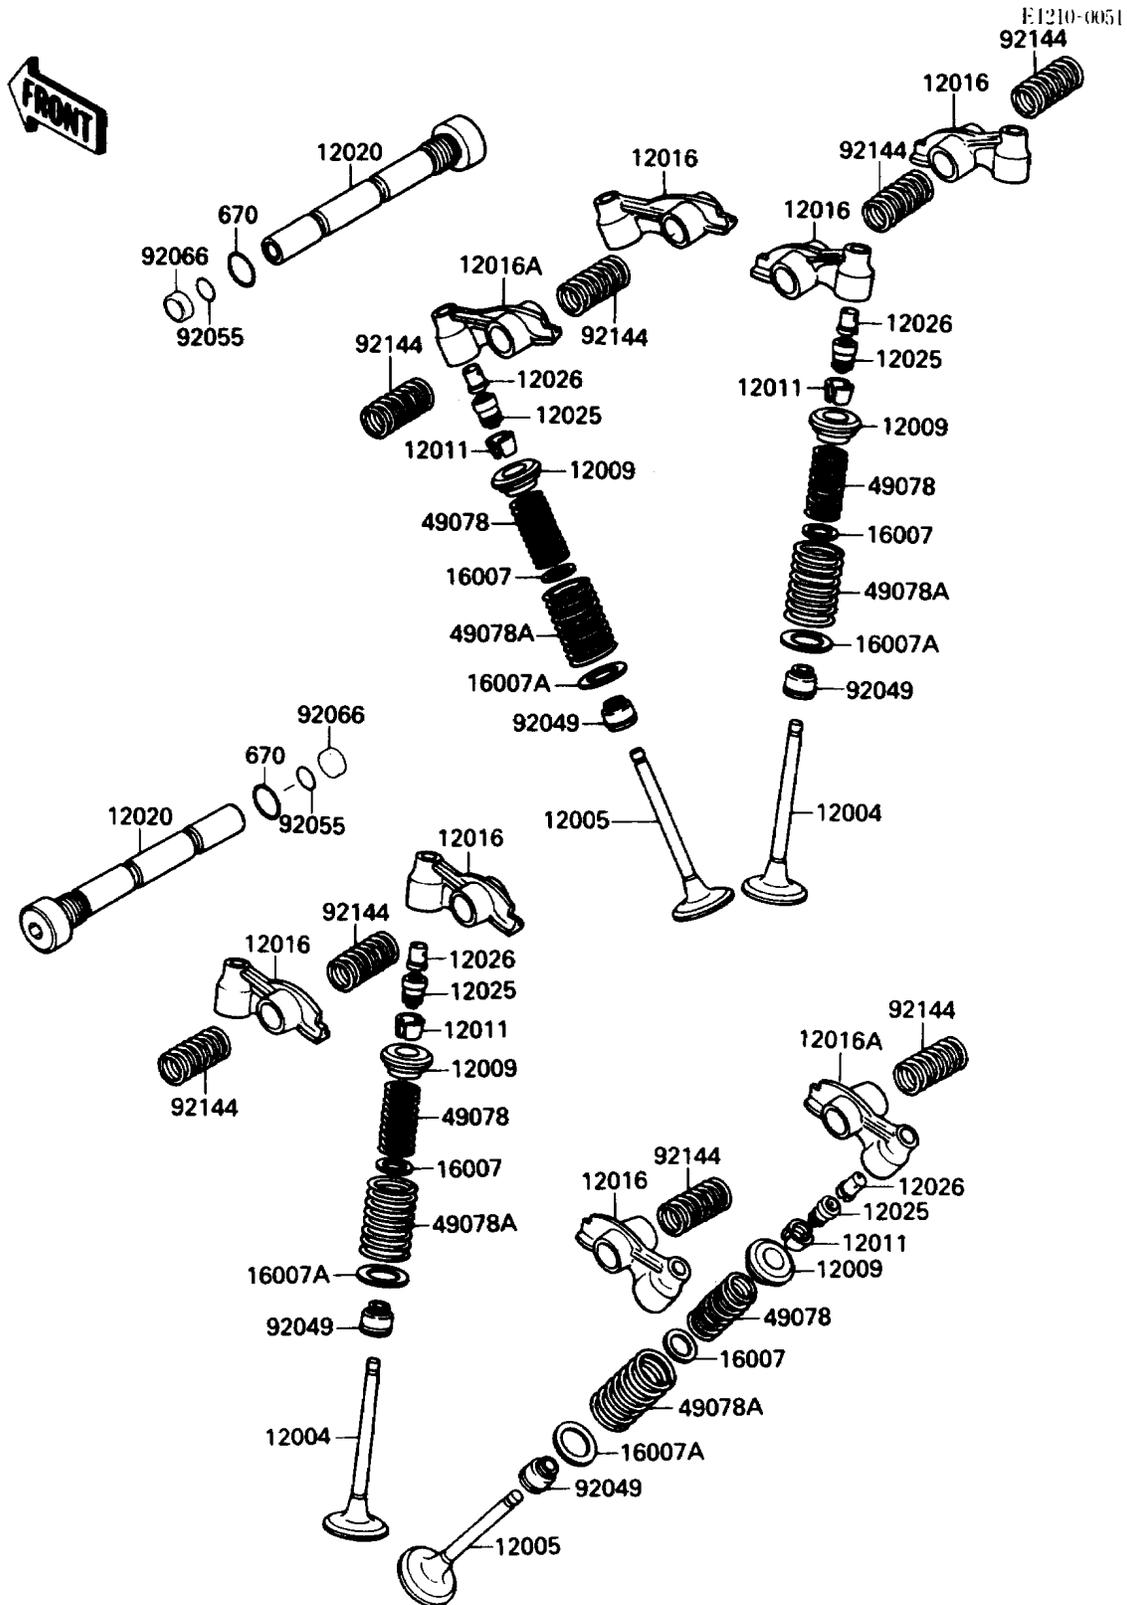

# 1987 Vulcan 88 SE

## PARTS LIST

### Valve(s)

ITEM NAME	PART NUMBER	QUANTITY
VALVE-INTAKE (Ref # 12004)	12004-1072	4
VALVE-EXHAUST (Ref # 12005)	12005-1090	4
RETAINER-VALVE SPRING (Ref # 12009)	12009-005	8
COLLET,RETAINER (Ref # 12011)	12011-004	16
ARM-ROCKER (Ref # 12016)	12016-1079	6
ARM-ROCKER (Ref # 12016A)	12016-1080	2
SHAFT-ROCKER (Ref # 12020)	12020-1061	4
ADJUSTER-LASH (Ref # 12025)	12025-1053	8
CHAMBER,OIL (Ref # 12026)	12026-1001	8
SEAT-SPRING (Ref # 16007)	16007-1031	8
SEAT-SPRING,OUTER (Ref # 16007A)	16007-1137	8
SPRING-ENGINE VALVE,INNER (Ref # 49078)	49078-1084	8
SPRING-ENGINE VALVE,OUTER (Ref # 49078A)	49078-1085	8
SEAL-OIL,RV37129.5 (Ref # 92049)	92049-016	8
RING-O (Ref # 92055)	92055-025	4
PLUG (Ref # 92066)	92066-1198	4
SPRING,ROCKER ARM (Ref # 92144)	92144-1221	8
O RING,20MM (Ref # 670)	670B2020	4