


2004 Ninja® ZX™-10R PARTS DIAGRAM

Fuel Injection

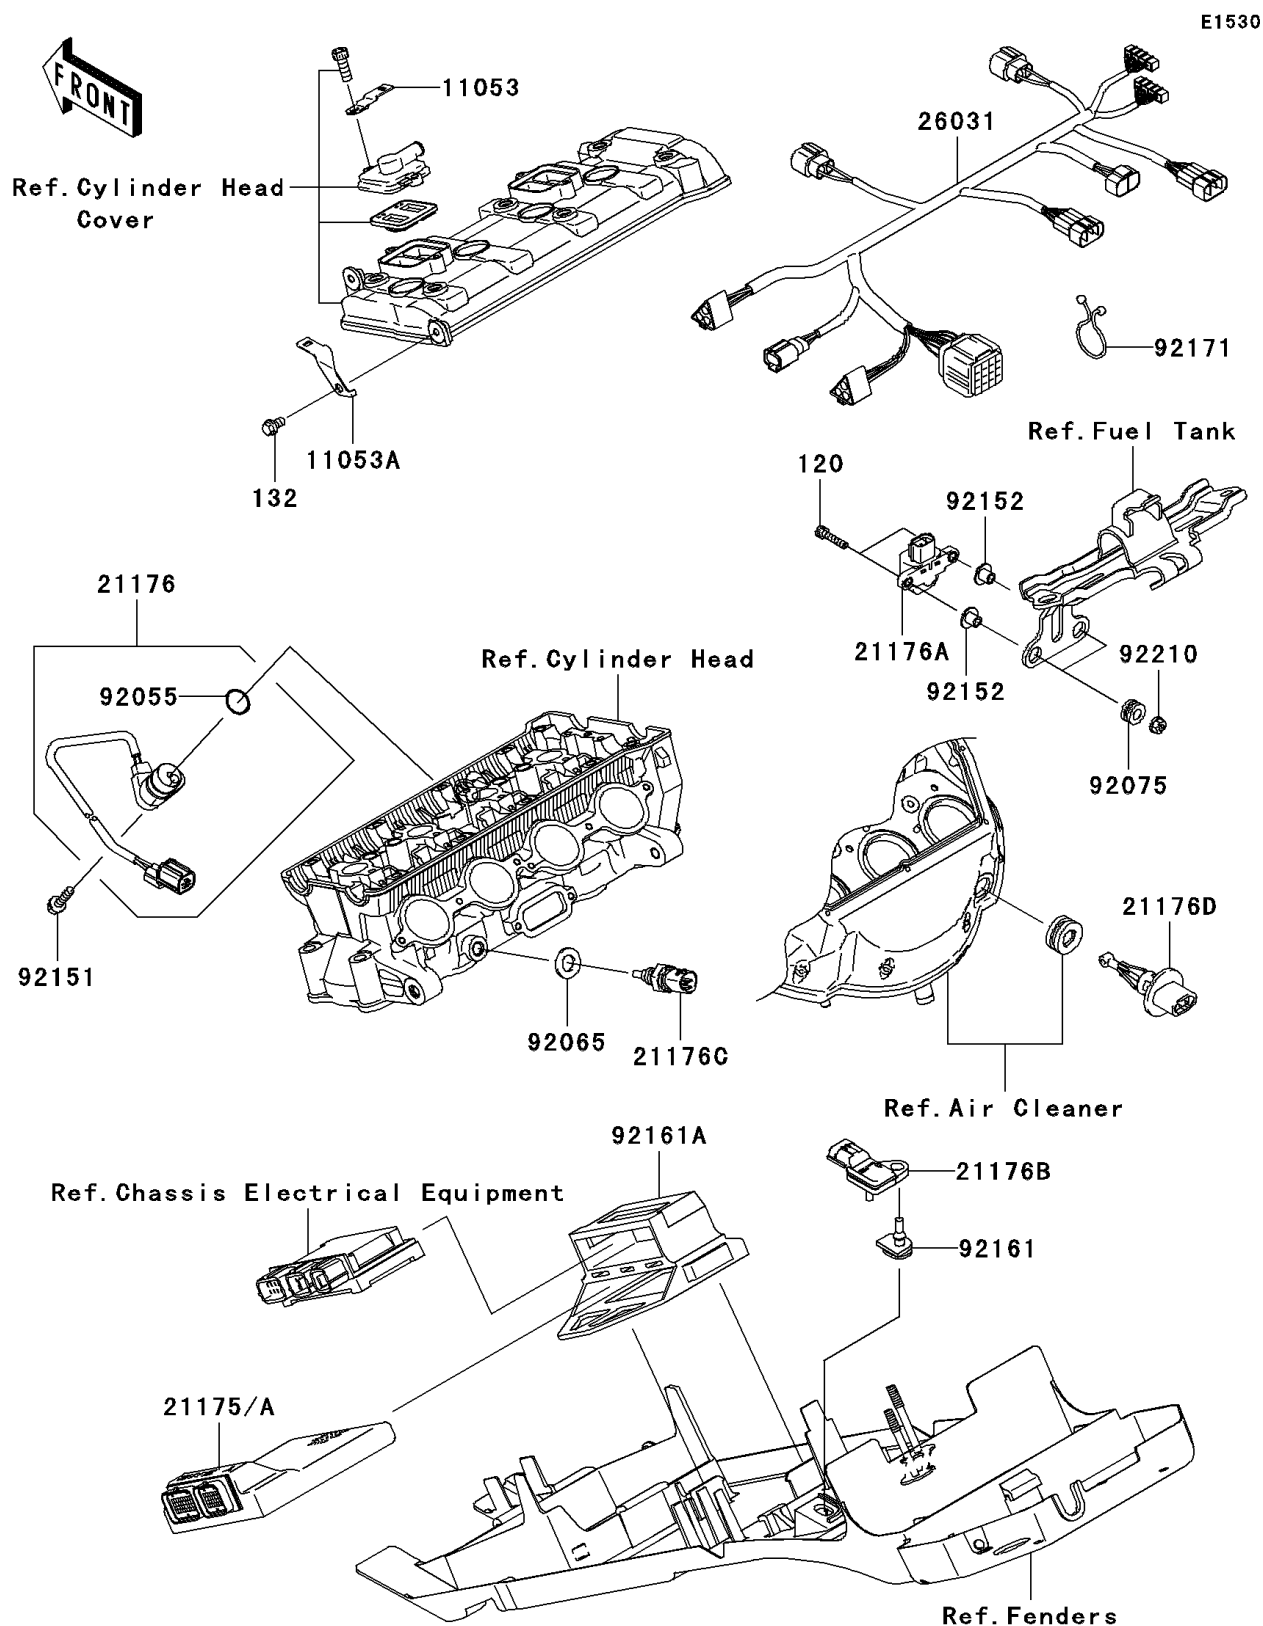

2004 Ninja® ZX™-10R PARTS LIST

Fuel Injection

ITEM NAME	PART NUMBER	QUANTITY
BOLT-SOCKET (Ref # 120)	120W0522	2
BOLT-FLANGED-SMALL (Ref # 132)	132L0610	1
BRACKET (Ref # 11053)	11053-0554	1
BRACKET (Ref # 11053A)	11053-0555	1
SENSOR,CAM (Ref # 21176)	21176-0024	1
SENSOR,VEHICLE-DOWN (Ref # 21176A)	21176-0026	1
SENSOR (Ref # 21176B)	21176-1118	1
SENSOR,WATER TEMP (Ref # 21176C)	21176-1120	1
SENSOR,AIR TEMP (Ref # 21176D)	21176-2106	1
HARNESS (Ref # 26031)	26031-0204	1
RING-O (Ref # 92055)	92055-1639	1
GASKET,12X22X2 (Ref # 92065)	92065-097	1
DAMPER (Ref # 92075)	92075-1912	2
BOLT,6X16 (Ref # 92151)	92151-1774	1
COLLAR (Ref # 92152)	92152-0134	2
DAMPER (Ref # 92161)	92161-0041	1
DAMPER (Ref # 92161A)	92161-0092	1
CLAMP (Ref # 92171)	92171-1185	1
NUT,FLANGED,5MM (Ref # 92210)	92210-0007	2
CONTROL UNIT-ELECTRONIC (Ref # 21175)	21175-0029	1
CONTROL UNIT-ELECTRONIC (Ref # 21175A)	21175-0050	1