

Front Wheel

Let the Good Times Roll®

Diagram illustrating the assembly of a wheel component, showing various parts and their assembly sequence:

- 41068**: Main shaft or axle.
- 92143A**: Nut or washer.
- 92033**: Washer or spacer.
- 601**: Seal or O-ring.
- 92049**: Nut or washer.
- 41073/A/B**: Hub or mounting flange.
- 92143**: Nut or washer.
- 601**: Seal or O-ring.
- 41064**: Washer or spacer.
- 92033**: Washer or spacer.
- 41078**: Hub or mounting flange.
- 92049A**: Nut or washer.
- 41060A**: Gear or pinion.
- 92143B**: Nut or washer.
- 92043**: Washer or spacer.
- 41060**: Gear or pinion.
- 41063**: Bolt or screw.
- 92028**: Washer or spacer.

The diagram shows the assembly of the wheel hub and shaft, with components labeled A and B indicating different views or configurations.

2003 ZZR1200

PARTS LIST

Front Wheel

ITEM NAME	PART NUMBER	QUANTITY
BEARING-BALL,#6005UU (Ref # 601)	601B6005UU	2
GEAR-METER SCREW,9T (Ref # 41060)	41060-1140	1
GEAR-METER SCREW,24T (Ref # 41060A)	41060-1141	1
WASHER,5.1X9X0.4 (Ref # 41063)	41063-001	2
RECEIVER-SPEEDOMETER (Ref # 41064)	41064-1055	1
AXLE,FR (Ref # 41068)	41068-1327	1
CASE-ASSY-METER GEAR (Ref # 41078)	41078-1082	1
BUSHING,METER GEAR CASE (Ref # 92028)	92028-1634	1
RING-SNAP,47MM (Ref # 92033)	92033-1042	2
PIN,SPRING,3X18 (Ref # 92043)	92043-1454	1
SEAL-OIL,BJN 32 47 5 (Ref # 92049)	92049-1377	1
SEAL-OIL,BJN-C2 35 52 5 (Ref # 92049A)	92049-1378	1
COLLAR,FR HUB,L=94 (Ref # 92143)	92143-1476	1
COLLAR,FR AXLE,RH,L=17.5 (Ref # 92143A)	92143-1477	1
COLLAR,FR AXLE,LH,L=44.5 (Ref # 92143B)	92143-1478	1
WHEEL-ASSY,FR,BLACK (Ref # 41073)	41073-1618-R2	1
WHEEL-ASSY,FR,SILVER (Ref # 41073A)	41073-1618-V5	1
WHEEL-ASSY,FR,C.GOLD (Ref # 41073B)	41073-1618-457	1