
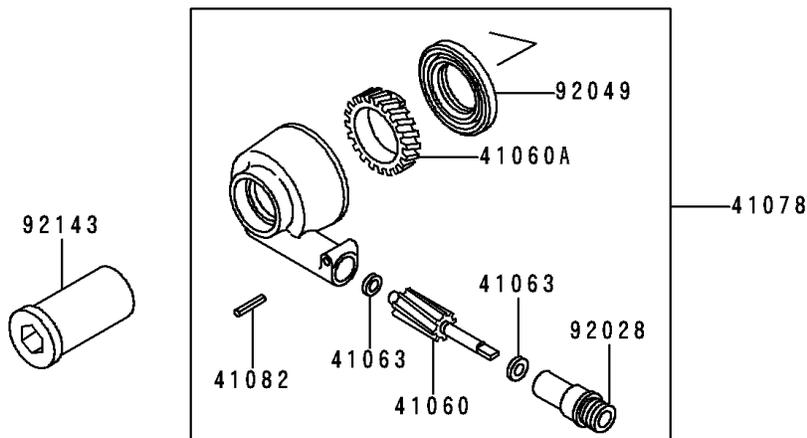


1998 Ninja[®] ZX[™]-6

PARTS DIAGRAM

Front Wheel

F2230

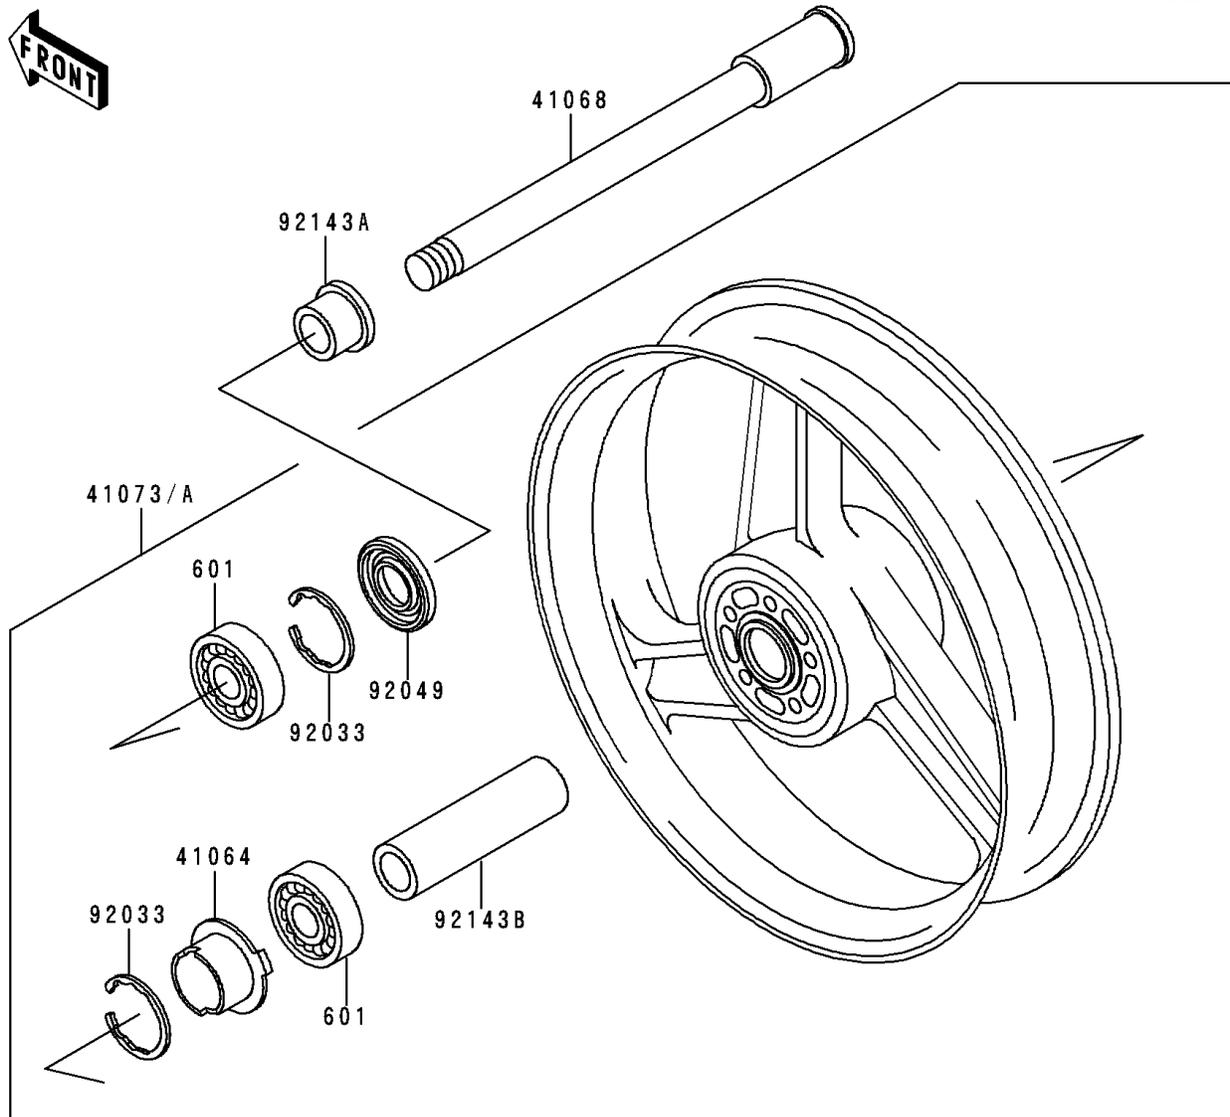

1998 Ninja® ZX™-6

PARTS LIST

Front Wheel

ITEM NAME	PART NUMBER	QUANTITY
BEARING-BALL,#6004UUC3 (Ref # 601)	601B6004UU	2
GEAR-METER SCREW,9T (Ref # 41060)	41060-1123	1
GEAR-METER SCREW,23T (Ref # 41060A)	41060-1138	1
WASHER,5.1X9X0.4 (Ref # 41063)	41063-001	2
RECEIVER-SPEEDOMETER (Ref # 41064)	41064-1006	1
AXLE,FR (Ref # 41068)	41068-1311	1
WHEEL-ASSY,FR,G.GRAY (Ref # 41073A)	41073-1518-GE	1
CASE-ASSY-METER GEAR (Ref # 41078)	41078-1076	1
PIN,SPRING (Ref # 41082)	41082-001	1
BUSHING,SPEEDOMETER (Ref # 92028)	92028-1066	1
RING-SNAP,42MM (Ref # 92033)	92033-1041	2
SEAL-OIL,BJN30427-C3 (Ref # 92049)	92049-1057	2
COLLAR,FR AXLE,L=43.5 (Ref # 92143)	92143-1301	1
COLLAR,FR AXLE,L=25.5 (Ref # 92143A)	92143-1359	1
COLLAR,FR HUB,L=86.5 (Ref # 92143B)	92143-1479	1