


1998 Ninja® ZX™-6R

PARTS DIAGRAM

Air Duct

E1131

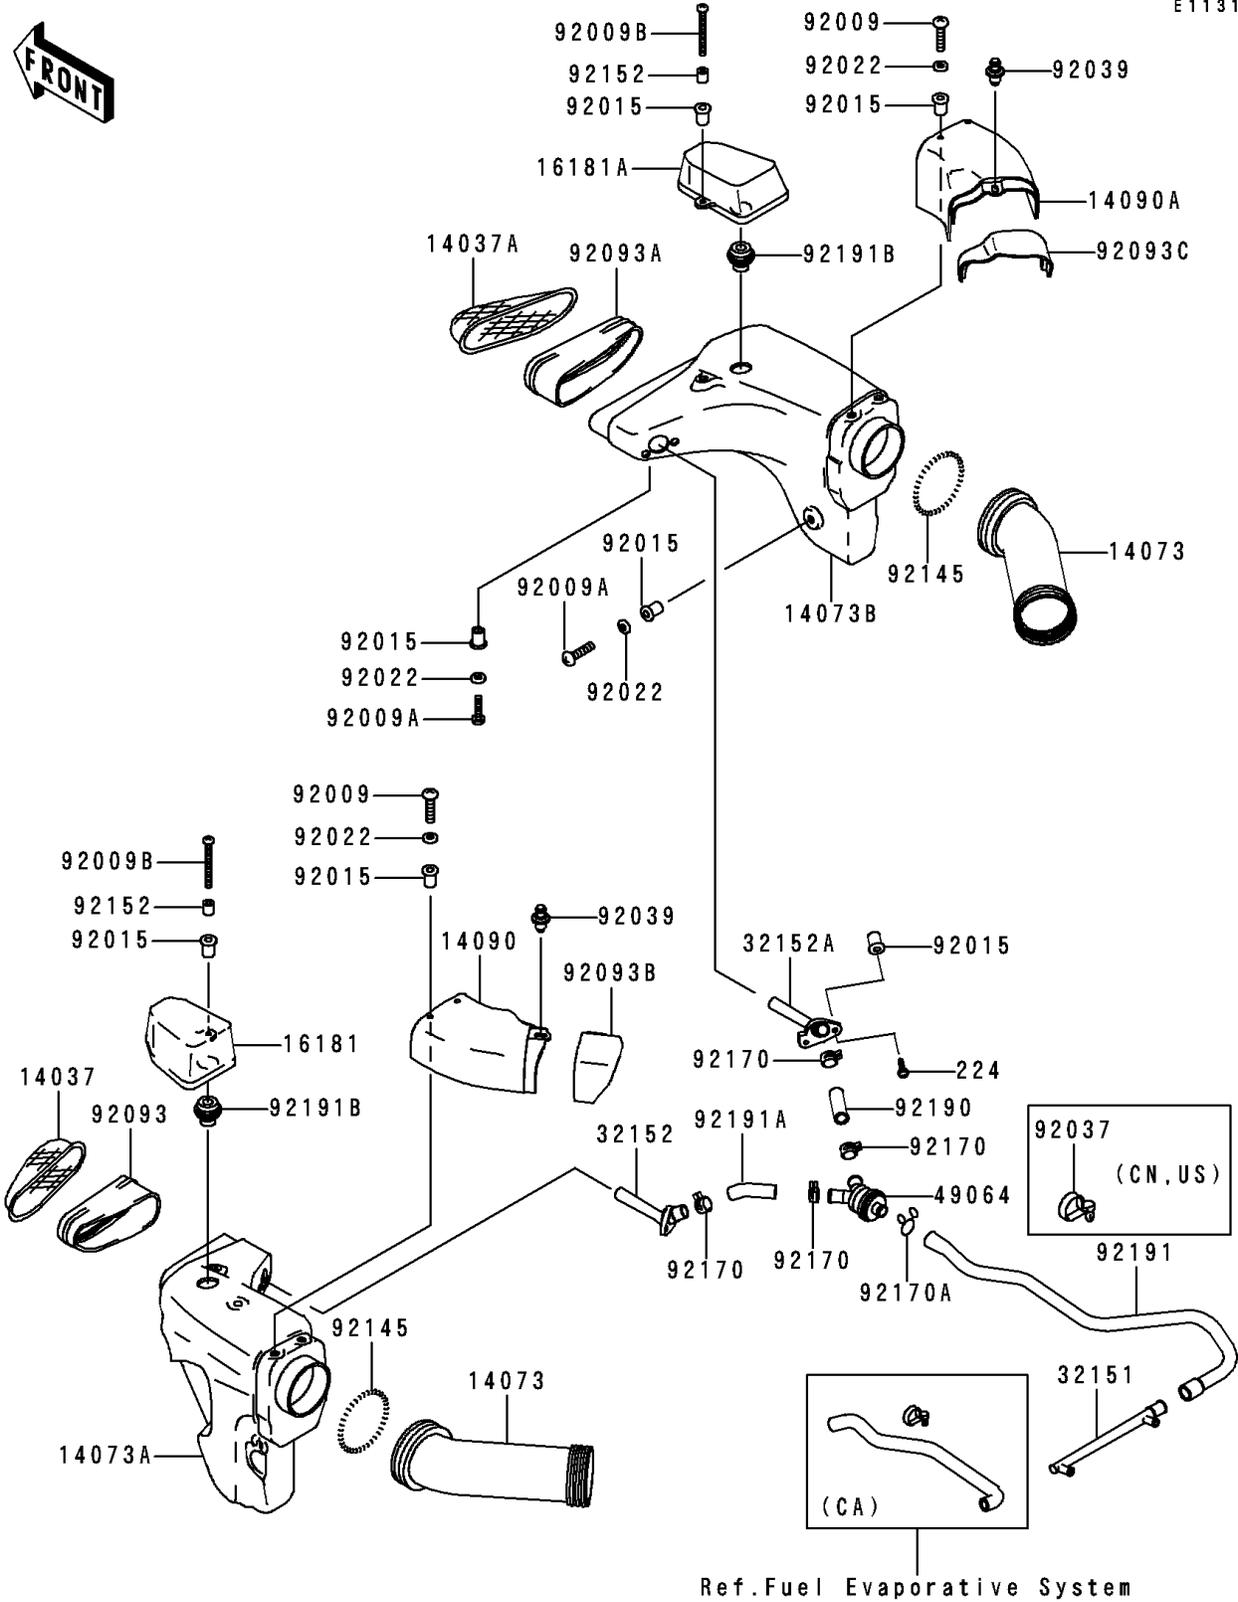

1998 Ninja® ZX™-6R

PARTS LIST

Air Duct

ITEM NAME	PART NUMBER	QUANTITY
SCREW-PAN-WP-CROS (Ref # 224)	224C0520	4
SCREEN,DUCT,LH (Ref # 14037)	14037-1254	1
SCREEN (Ref # 14037A)	14037-1255	1
DUCT,INNER (Ref # 14073)	14073-1720	2
DUCT,RAM,LH,M.F.C.GRAY (Ref # 14073A)	14073-1732-E4	1
DUCT,RAM,RH,M.F.C.GRAY (Ref # 14073B)	14073-1733-E4	1
COVER,RAM DUCT,LH,M.F.C.GRAY (Ref # 14090)	14090-1918-E4	1
COVER,RAM DUCT,RH,M.F.C.GRAY (Ref # 14090A)	14090-1919-E4	1
TANK-RESONATOR,LH,M.F.C.GRAY (Ref # 16181)	16181-1091-E4	1
TANK-RESONATOR,RH,M.F.C.GRAY (Ref # 16181A)	16181-1092-E4	1
PIPE (Ref # 32151)	32151-1317	1
PIPE,LH (Ref # 32152)	32152-1628	1
PIPE,RH (Ref # 32152A)	32152-1629	1
FILTER-AIR (Ref # 49064)	49064-1061	1
SCREW,5X16 (Ref # 92009)	92009-1654	4
SCREW,5X20 (Ref # 92009A)	92009-1656	4
SCREW,5X35 (Ref # 92009B)	92009-1847	2
NUT,WELL,5MM (Ref # 92015)	92015-1757	14
WASHER,NYLON,5.3X11.5X1.5 (Ref # 92022)	92022-1521	8
RIVET (Ref # 92039)	92039-1227	2
SEAL,DUCT,LH (Ref # 92093)	92093-1466	1
SEAL,DUCT,RH (Ref # 92093A)	92093-1467	1
SEAL,COVER,LH (Ref # 92093B)	92093-1478	1
SEAL,COVER,RH (Ref # 92093C)	92093-1479	1
SPRING,BOOT (Ref # 92145)	92145-1162	2
COLLAR (Ref # 92152)	92152-1103	2
CLAMP (Ref # 92170)	92170-1909	4
CLAMP (Ref # 92170A)	92170-1997	1
TUBE,RH (Ref # 92190)	92190-1502	1

1998 Ninja® ZX™-6R

PARTS LIST

Air Duct

ITEM NAME	PART NUMBER	QUANTITY
TUBE,LH (Ref # 92191A)	92191-1273	1
TUBE (Ref # 92191B)	92191-1285	2
CLAMP,SPEED,L=80.5 (Ref # 92037)	92037-1903	1
TUBE (Ref # 92191)	92191-1227	1