

Oil Pump

Let the Good Times Roll®

Exploded view diagram of the crankcase assembly. The diagram shows the main crankcase body (Ref. Crankcase) and various components that attach to it. A 'FRONT' arrow indicates the orientation. The components and their assembly order are as follows:

- 16082**: Gear component.
- 220**: Screws for the gear component.
- 220A**: Screws for the gear component.
- 670**: O-rings.
- 92043**: Pin component.
- 16097**: Bolt component.
- 11012**: Gear component.
- 92055**: O-ring.
- 92144**: Spring component.
- 52010**: Gear component.
- 2154**: Bolt component.

The diagram also shows the 'Ref. Crankcase' (Reference Crankcase) and the 'FRONT' orientation.

2024 KLX[®]110R L

PARTS LIST

Oil Pump



ITEM NAME	PART NUMBER	QUANTITY
CAP (Ref # 11012)	11012-1980	1
PUMP-ASSY-OIL (Ref # 16082)	16082-0010	1
FILTER-ASSY-OIL (Ref # 16097)	16097-1071	1
ELEMENT-OIL FILTER (Ref # 52010)	52010-0552	1
PIN,6.2X8X14 (Ref # 92043)	92043-1741	1
RING-O,59.6X2.4 (Ref # 92055)	92055-3018	1
SPRING (Ref # 92144)	92144-1892	1
BOLT,FLANGED,6X20 (Ref # 92154)	92154-7209	2
SCREW-PAN-CROS,6X25 (Ref # 220)	220AA0625	2
SCREW-PAN-CROS,6X30 (Ref # 220A)	220AA0630	1
O RING,9.8X1.9 (Ref # 670)	670B1510	2