
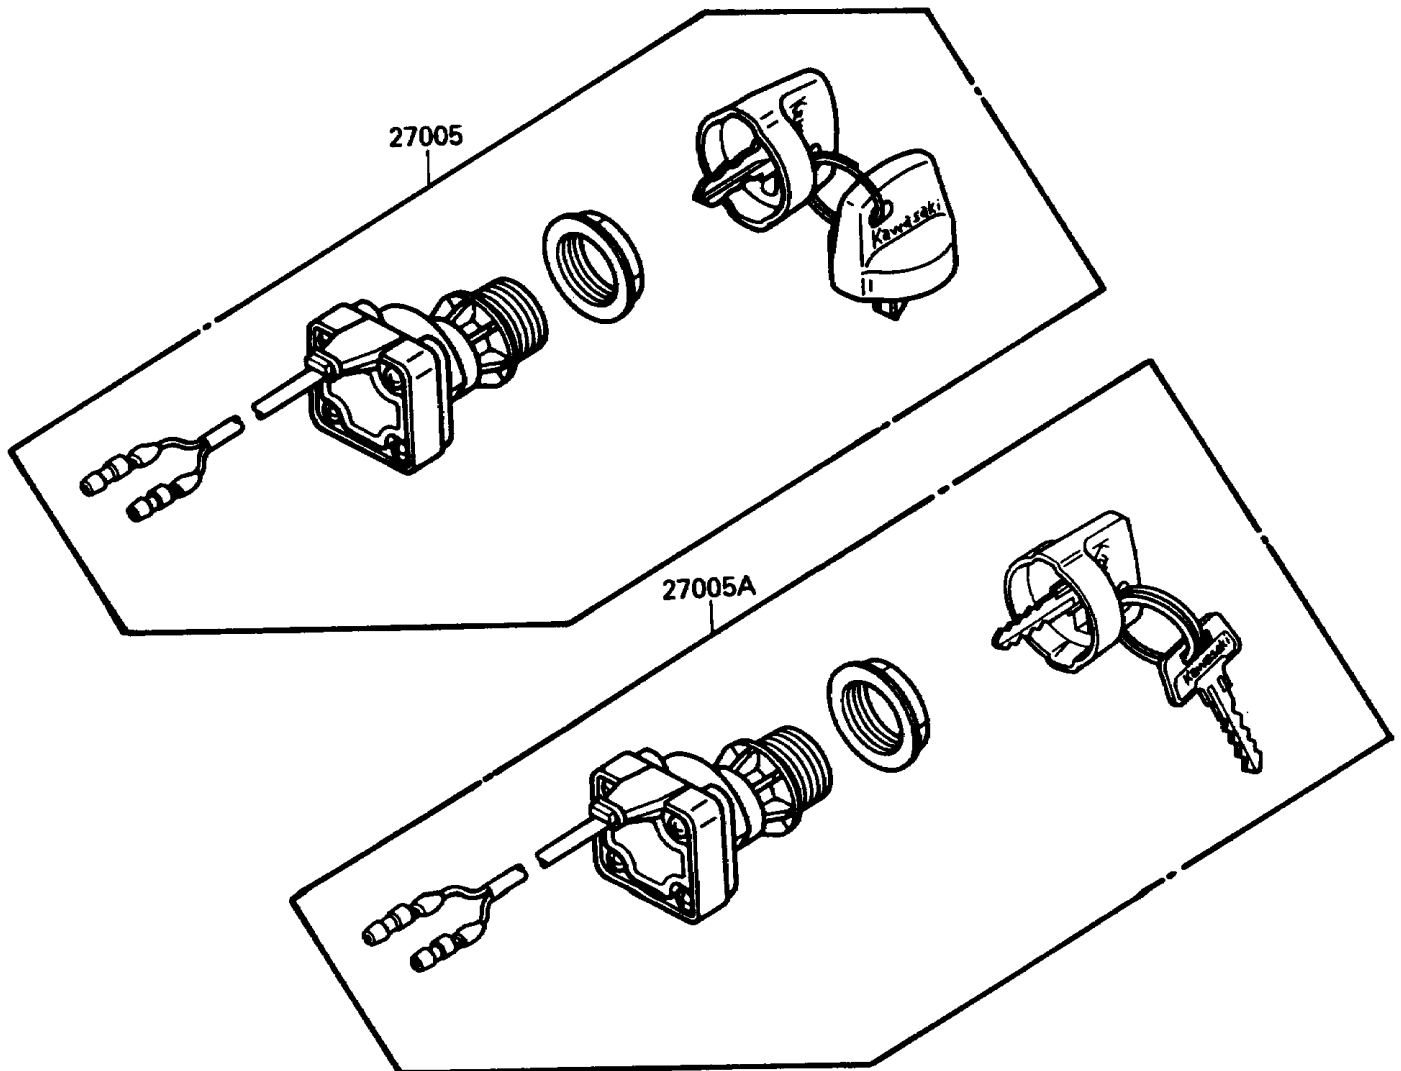


1988 Tecate 4 PARTS DIAGRAM

Ignition Switch

F2770-0331

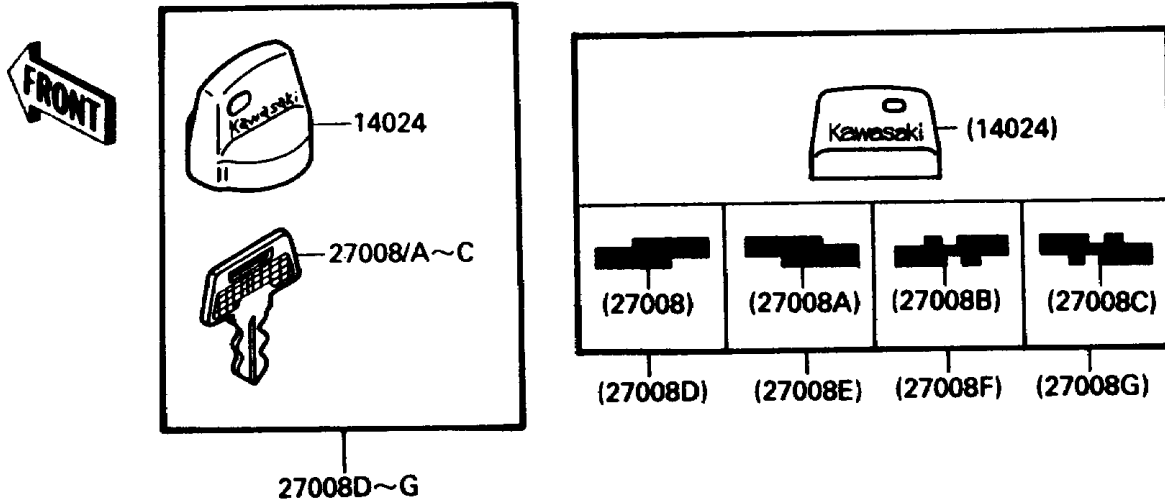

1988 Tecate 4 PARTS LIST

Ignition Switch

| ITEM NAME | PART NUMBER | QUANTITY |
|-------------------------------------|-------------|----------|
| COVER,KEY (Ref # 14024) | 14024-1551 | 1 |
| SWITCH-ASSY-IGNITION (Ref # 27005A) | 27005-1136 | 1 |
| KEY-LOCK,BLANK (Ref # 27008) | 27008-1041 | 1 |
| KEY-LOCK,BLANK (Ref # 27008A) | 27008-1042 | 1 |
| KEY-LOCK,BLANK (Ref # 27008B) | 27008-1043 | 1 |
| KEY-LOCK,BLANK (Ref # 27008C) | 27008-1044 | 1 |
| KEY-LOCK,BLANK (Ref # 27008D) | 27008-1132 | 1 |
| KEY-LOCK,BLANK (Ref # 27008E) | 27008-1133 | 1 |
| KEY-LOCK,BLANK (Ref # 27008F) | 27008-1134 | 1 |
| KEY-LOCK,BLANK (Ref # 27008G) | 27008-1135 | 1 |