


2005 Vulcan 1600 Nomad

PARTS DIAGRAM

Turn Signals

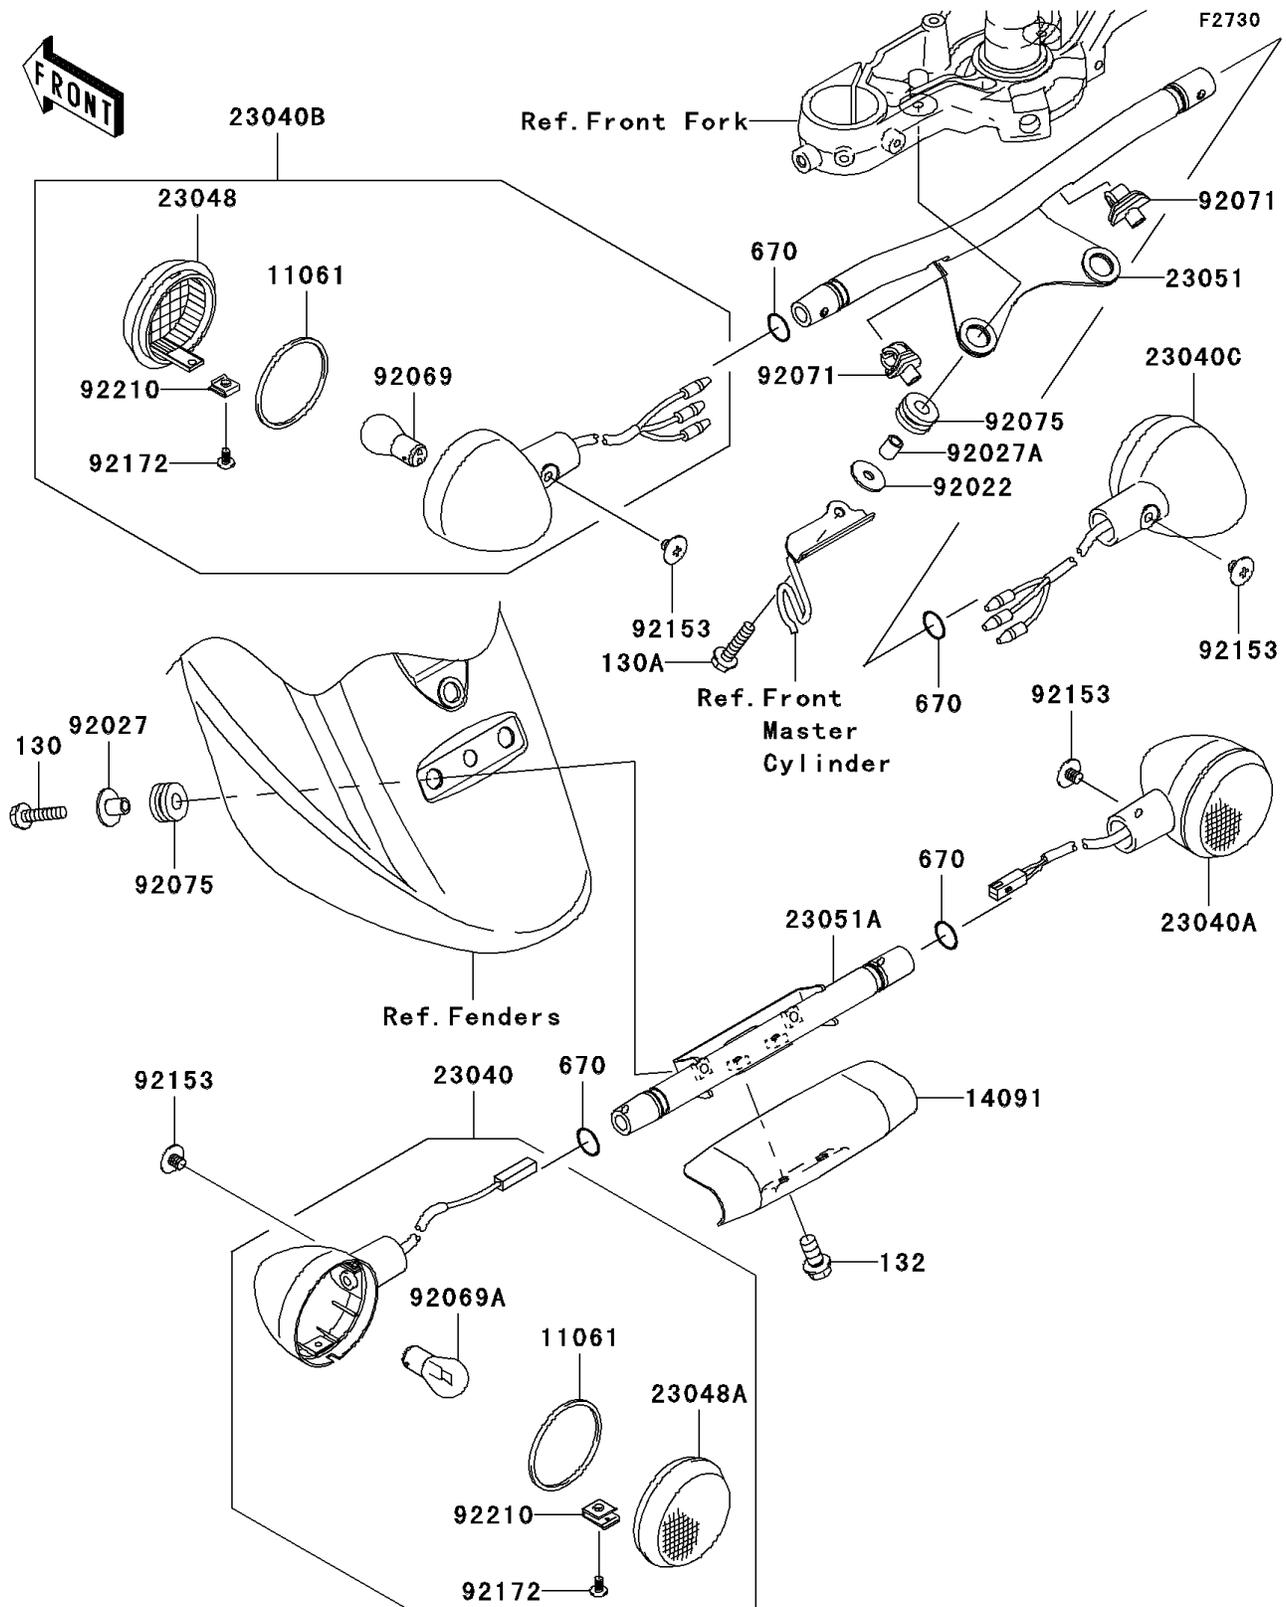

2005 Vulcan 1600 Nomad

PARTS LIST

Turn Signals

ITEM NAME	PART NUMBER	QUANTITY
BOLT-FLANGED,6X25 (Ref # 130)	130J0625	2
BOLT-FLANGED (Ref # 130A)	130L0625	2
BOLT-FLANGED-SMALL (Ref # 132)	132J0612	2
O RING,16MM (Ref # 670)	670B2016	4
GASKET,SIGNAL LAMP (Ref # 11061)	11061-0005	4
COVER,REAR SIGNAL LAMP (Ref # 14091)	14091-1572	1
LAMP-SIGNAL,RR,LH (Ref # 23040)	23040-0036	1
LAMP-SIGNAL,RR,RH (Ref # 23040A)	23040-0037	1
LAMP-SIGNAL,FR,LH (Ref # 23040B)	23040-0042	1
LAMP-SIGNAL,FR,RH (Ref # 23040C)	23040-0043	1
LENS-SIGNAL LAMP (Ref # 23048)	23048-0001	2
LENS-SIGNAL LAMP (Ref # 23048A)	23048-0002	2
BRACKET-SIGNAL LAMP,FR (Ref # 23051)	23051-0001	1
BRACKET-SIGNAL LAMP,RR (Ref # 23051A)	23051-0002	1
WASHER,7X24X1.6 (Ref # 92022)	92022-1160	2
COLLAR,L=13.1,BLACK (Ref # 92027)	92027-1450	2
COLLAR,6.8X10X12 (Ref # 92027A)	92027-162	2
BULB,12V 21/5W (Ref # 92069)	92069-063	2
BULB,12V 21W (Ref # 92069A)		2
GROMMET,SIGNAL LAMP (Ref # 92071)	92071-0007	2
DAMPER (Ref # 92075)	92075-1690	4
BOLT,6MM (Ref # 92153)	92153-0396	4
SCREW,4X8 (Ref # 92172)	92172-0146	4
NUT,4MM (Ref # 92210)	92210-0155	4