


Mule 500

PARTS DIAGRAM

Front Hub

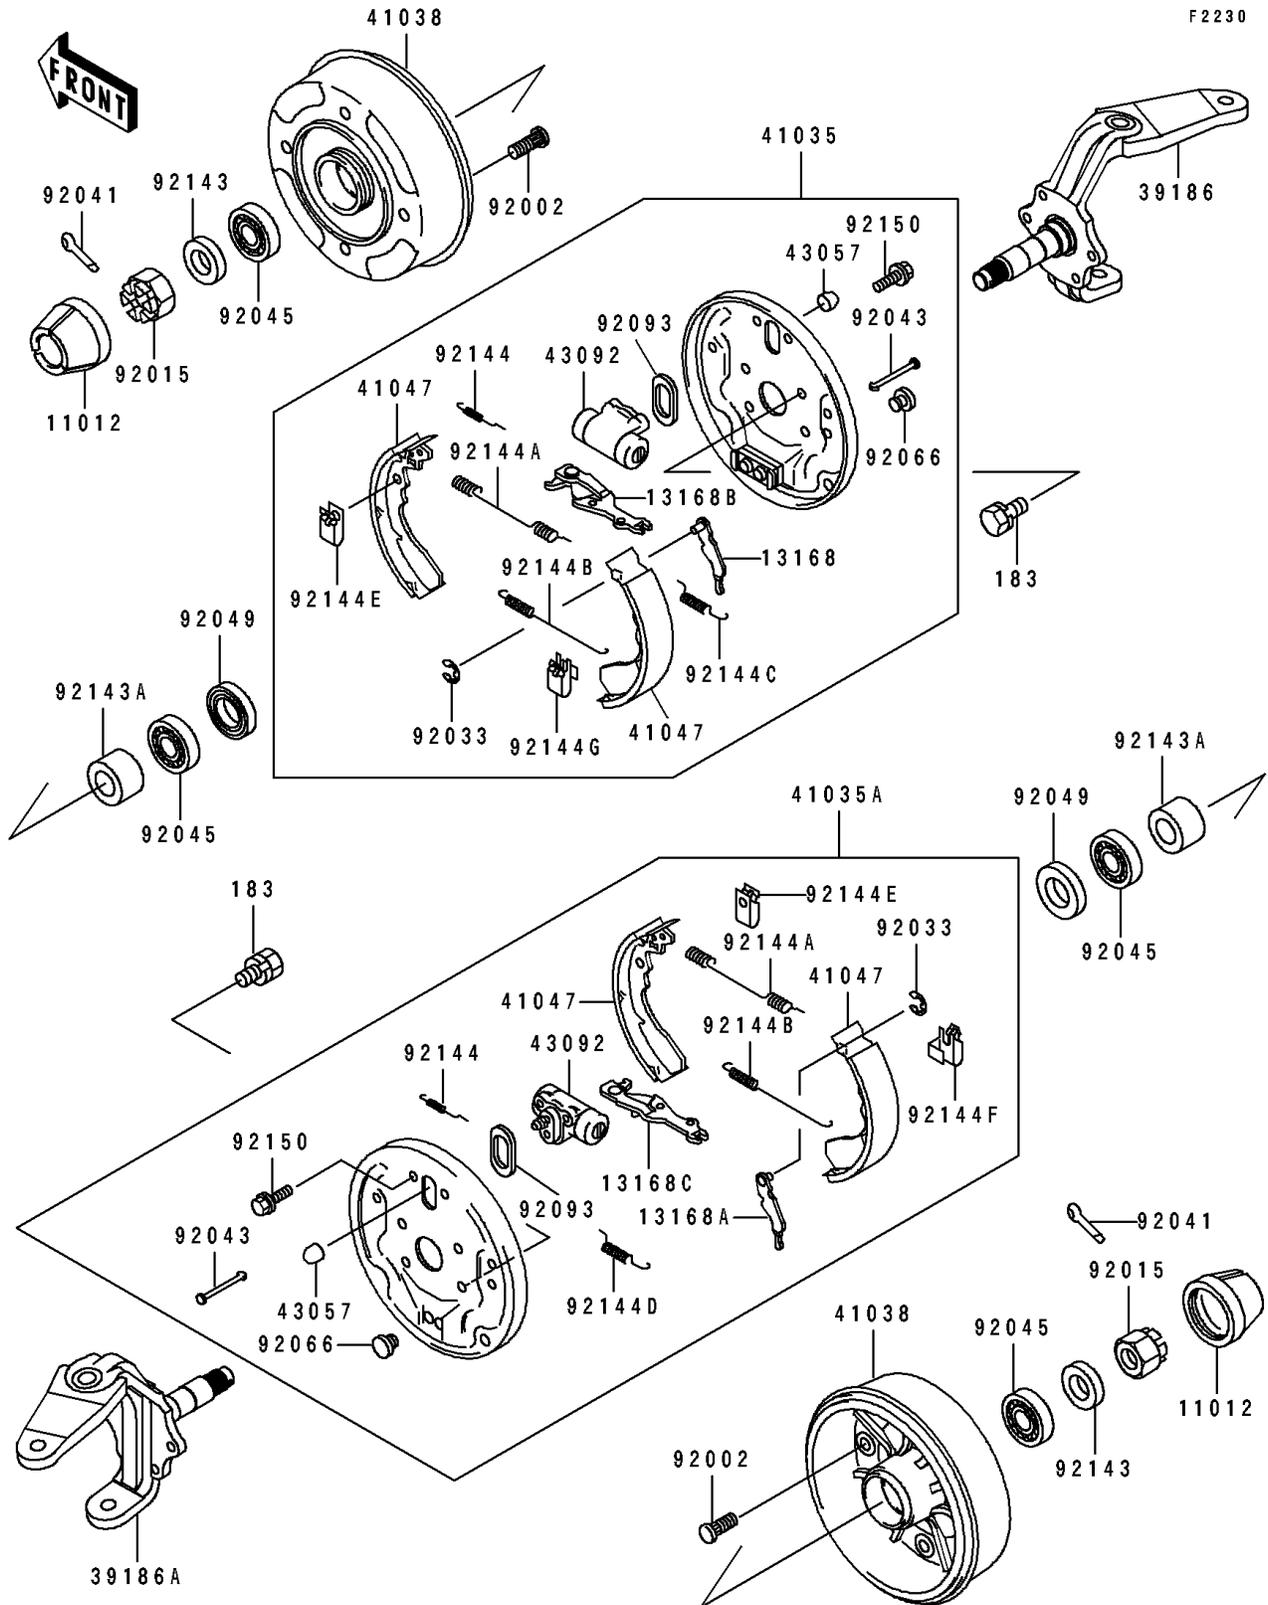

Mule 500

PARTS LIST

Front Hub

ITEM NAME	PART NUMBER	QUANTITY
CAP,WHEEL (Ref # 11012)	11012-1519	2
LEVER,STOPPER,LH (Ref # 13168)	13168-1477	1
LEVER,STOPPER,RH (Ref # 13168A)	13168-1478	1
LEVER,LH (Ref # 13168B)	13168-1479	1
LEVER,RH (Ref # 13168C)	13168-1480	1
KNUCKLE,LH (Ref # 39186)	39186-1094	1
KNUCKLE,RH (Ref # 39186A)	39186-1095	1
PANEL-ASSY-BRAKE,FR,LH (Ref # 41035)	41035-1280	1
PANEL-ASSY-BRAKE,FR,RH (Ref # 41035A)	41035-1281	1
DRUM,FRONT BRAKE (Ref # 41038)	41038-1238	2
SHOE-ASSY-BRAKE,FR (Ref # 41047)	41047-1051	4
CAP-BREATHER (Ref # 43057)	43057-1053	2
CYLINDER (Ref # 43092)	43092-1057	2
BOLT,10X30 (Ref # 92002)	92002-1388	8
NUT,CASTLE,18MM (Ref # 92015)	42045-018	2
RING-SNAP (Ref # 92033)	92033-1279	2
COTTER,4.0X35 (Ref # 92041)	92041-1053	2
PIN,SHOE HOLD (Ref # 92043)	92043-1460	4
BEARING-BALL,60/222RS (Ref # 92045)	92045-1170	4
SEAL-OIL (Ref # 92049)	92049-1284	2
PLUG (Ref # 92066)	92066-1365	2
SEAL (Ref # 92093)	92093-1332	2
COLLAR,22.2X28.6X9 (Ref # 92143)	92143-1454	2
COLLAR,22.2X28.6X25 (Ref # 92143A)	92143-1455	2
SPRING (Ref # 92144)	92144-1604	2
SPRING,RETURN,UPP (Ref # 92144A)	92144-1605	2
SPRING,RETURN,LWR (Ref # 92144B)	92144-1606	2
SPRING,LH (Ref # 92144C)	92144-1607	1
SPRING,RH (Ref # 92144D)	92144-1608	1

Mule 500

PARTS LIST

Front Hub

ITEM NAME	PART NUMBER	QUANTITY
SPRING,SHOE HOLD (Ref # 92144E)	92144-1609	2
SPRING,SHOE HOLD (Ref # 92144F)	92144-1610	1
SPRING,SHOE HOLD (Ref # 92144G)	92144-1611	1
BOLT (Ref # 92150)	92150-1540	4
BOLT-UPSET-WS-SMALL (Ref # 183)	183H0814	8