


Mule 2500

PARTS DIAGRAM

Starter Motor

E1840

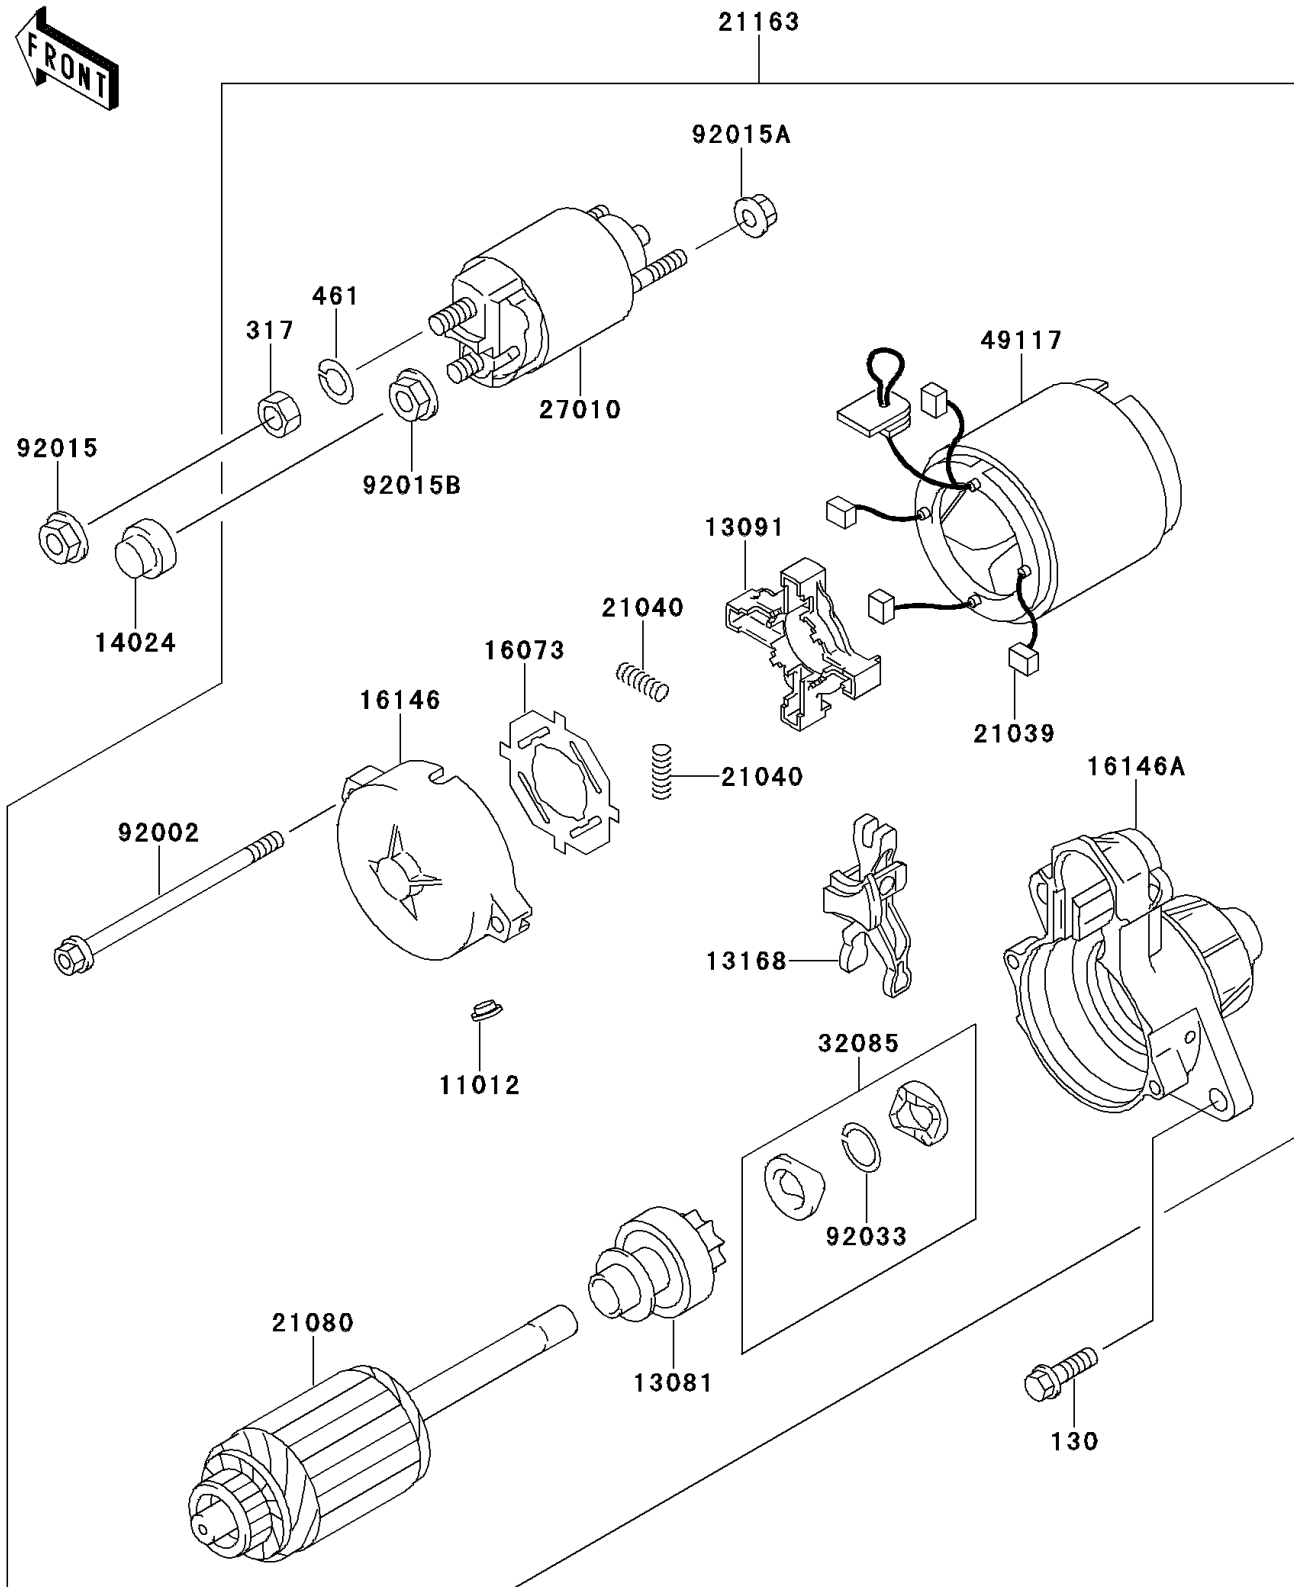

Mule 2500

PARTS LIST

Starter Motor

ITEM NAME	PART NUMBER	QUANTITY
BOLT-FLANGED,8X30 (Ref # 130)	130B0830	2
NUT-HEX-SMALL,8MM (Ref # 317)	317B0800	1
WASHER-SPRING,8MM (Ref # 461)	461F0800	1
CAP (Ref # 11012)	11012-2226	1
CLUTCH-ASSY (Ref # 13081)	13081-2108	1
HOLDER,BRUSH (Ref # 13091)	13091-2068	1
LEVER (Ref # 13168)	13168-2131	1
COVER (Ref # 14024)	14024-2205	1
INSULATOR (Ref # 16073)	16073-2098	1
COVER-ASSY (Ref # 16146)	16146-2187	1
COVER-ASSY (Ref # 16146A)	16146-2204	1
BRUSH (Ref # 21039)	21039-2059	4
SPRING-BRUSH (Ref # 21040)	21040-2052	4
ARMATURE (Ref # 21080)	21080-2054	1
STARTER-ELECTRIC (Ref # 21163)	21163-2118	1
SWITCH (Ref # 27010)	27010-2122	1
STOPPER (Ref # 32085)	32085-2097	1
YOKE (Ref # 49117)	49117-2053	1
BOLT (Ref # 92002)	92002-2277	2
NUT,8MM (Ref # 92015)	92015-1143	1
NUT (Ref # 92015A)	92015-2146	2
NUT (Ref # 92015B)	92015-2147	1
RING-SNAP (Ref # 92033)	92033-2081	1