


Mule 2510 Diesel PARTS DIAGRAM

Starter Motor

E1840

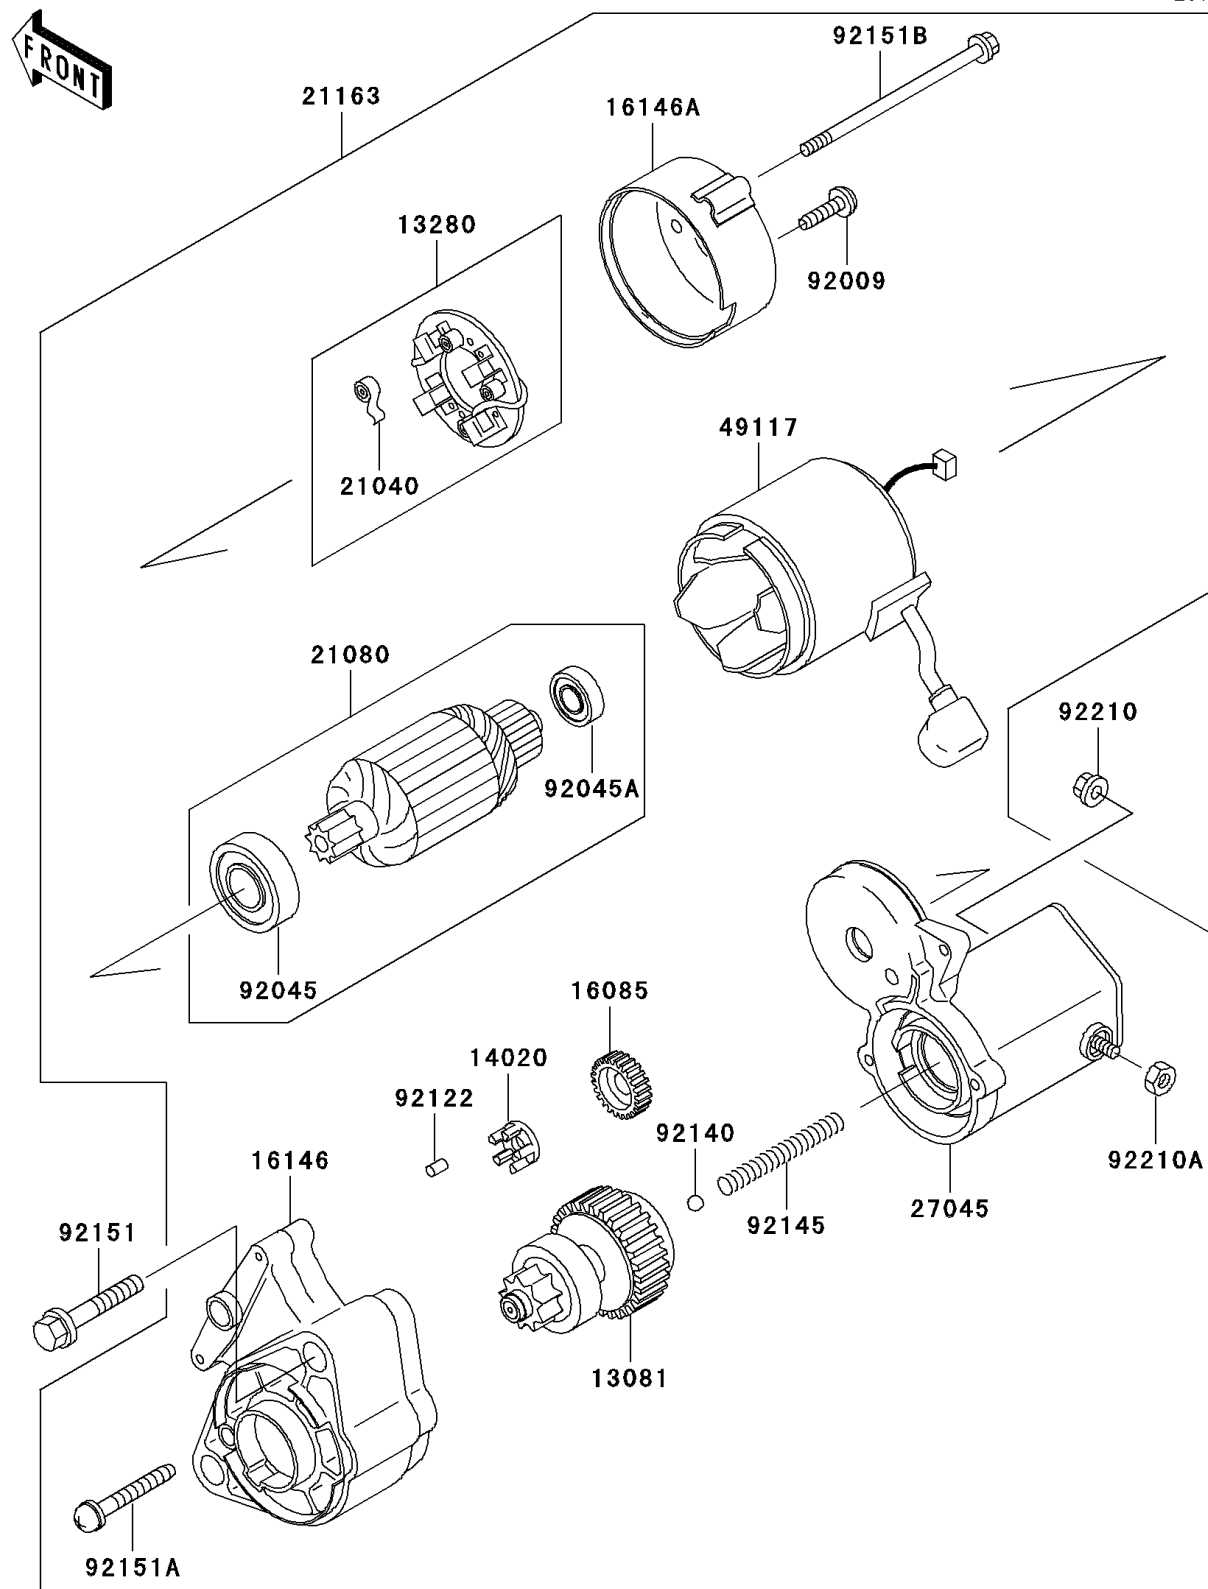

Mule 2510 Diesel PARTS LIST

Starter Motor

ITEM NAME	PART NUMBER	QUANTITY
CLUTCH-ASSY,STARTER (Ref # 13081)	13081-1584	1
HOLDER,STARTER BRUSH (Ref # 13280)	13280-1172	1
RETAINER (Ref # 14020)	14020-1108	1
GEAR,STARTER IDLE (Ref # 16085)	16085-1341	1
COVER-ASSY,STARTER DRIVE (Ref # 16146)	16146-1212	1
COVER-ASSY,STARTER END (Ref # 16146A)	16146-1213	1
SPRING-BRUSH (Ref # 21040)	21040-1058	4
ARMATURE,STARTER (Ref # 21080)	21080-1051	1
STARTER-ELECTRIC (Ref # 21163)	21163-1299	1
SWITCH-ASSY,MAGNETIC (Ref # 27045)	27045-1075	1
YOKE,STARTER (Ref # 49117)	49117-1094	1
SCREW (Ref # 92009)	92009-1920	2
BEARING-BALL,6002T1XZCE (Ref # 92045)	92045-1396	1
BEARING-BALL,608ZMC3E (Ref # 92045A)	92045-1397	1
ROLLER,IDLE GEAR (Ref # 92122)	92122-1210	5
BALL (Ref # 92140)	92140-1065	1
SPRING (Ref # 92145)	92145-1311	1
BOLT,10X28 (Ref # 92151)	92151-1696	2
BOLT (Ref # 92151A)	92151-1713	2
BOLT (Ref # 92151B)	92151-1714	2
NUT,8MM (Ref # 92210)	92210-1219	1
NUT (Ref # 92210A)	92210-1231	1