

Oil Pump

Let the Good Times Roll®

Exploded view diagram of a crankcase assembly. The diagram shows the crankcase (labeled "Ref. Crankcase") and various components being installed or removed. A "FRONT" arrow points to the left. Components are labeled with numbers:

- 16082: Gear assembly
- 220: Bolt
- 220A: Bolt
- 670: Washer
- 92043: Pin
- 16097: Bolt
- 11012: Gear assembly
- 92055: O-ring
- 92144: Spring
- 52010: Gear assembly
- 92153: Bolt

2011 AN112

PARTS LIST

Oil Pump

ITEM NAME	PART NUMBER	QUANTITY
SCREW-PAN-CROSS,6X25 (Ref # 220)	220AA0625	2
SCREW-PAN-CROSS,6X30 (Ref # 220A)	220AA0630	1
O RING,9.8X1.9 (Ref # 670)	670B1510	2
CAP,OIL FILTER (Ref # 11012)	11012-1867	1
PUMP-ASSY-OIL (Ref # 16082)	16082-1052	1
FILTER-ASSY-OIL (Ref # 16097)	16097-1071	1
ELEMENT-OIL FILTER (Ref # 52010)	52010-1053	1
PIN,6.2X8X14 (Ref # 92043)	92043-0099	1
RING-O,59.6X2.4 (Ref # 92055)	92055-3018	1
SPRING (Ref # 92144)	92144-1892	1
BOLT,6X20 (Ref # 92153)	92153-1184	2