


1998 Ninja[®] 500R

PARTS DIAGRAM

Valve(s)

E1210

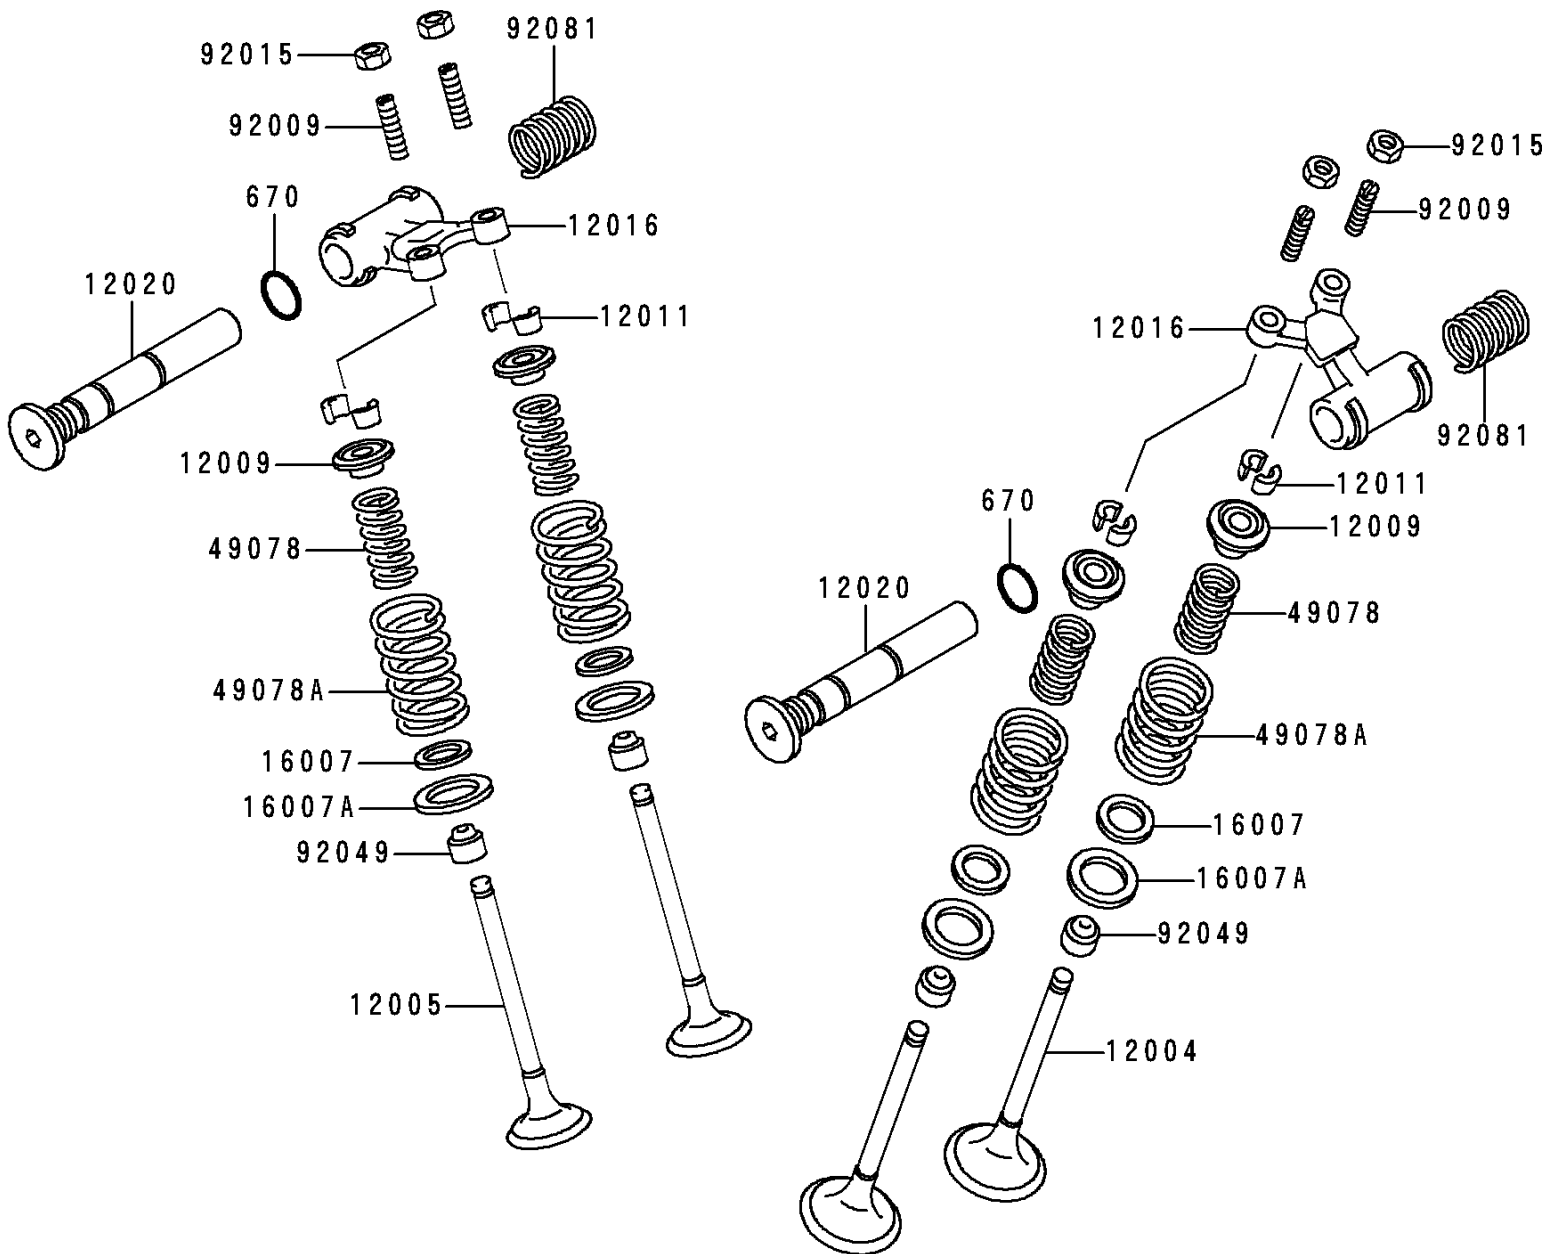

1998 Ninja[®] 500R

PARTS LIST

Valve(s)

| ITEM NAME | PART NUMBER | QUANTITY |
|--|-------------|----------|
| O RING,16MM (Ref # 670) | 670D2016 | 4 |
| VALVE-INTAKE (Ref # 12004) | 12004-1119 | 4 |
| VALVE-EXHAUST (Ref # 12005) | 12005-1052 | 4 |
| RETAINER-VALVE SPRING (Ref # 12009) | 12009-1054 | 8 |
| COLLET (Ref # 12011) | 12011-1003 | 16 |
| ARM-ROCKER (Ref # 12016) | 12016-1051 | 4 |
| SHAFT-ROCKER (Ref # 12020) | 12020-1057 | 4 |
| SEAT-SPRING,12.1X16.2X0.5 (Ref # 16007) | 16007-1177 | 8 |
| SEAT-SPRING,17.5X23.8X0.5 (Ref # 16007A) | 16007-1178 | 8 |
| SPRING-ENGINE VALVE,INNER (Ref # 49078) | 49078-1051 | 8 |
| SPRING-ENGINE VALVE,OUTER (Ref # 49078A) | 49078-1052 | 8 |
| SCREW,7MM (Ref # 92009) | 92009-1279 | 8 |
| NUT,7MM (Ref # 92015) | 92015-1325 | 8 |
| SEAL-OIL,RVC2-5.5X8.5X8.3 (Ref # 92049) | 92049-1062 | 8 |
| SPRING,ROCKER ARM (Ref # 92081) | 92081-1636 | 4 |