


1975 F9-C

PARTS DIAGRAM

FOOTRESTS/STAND/BRAKE PEDAL ('74-'75 F9-

Kawasaki
Let the Good Times Roll®

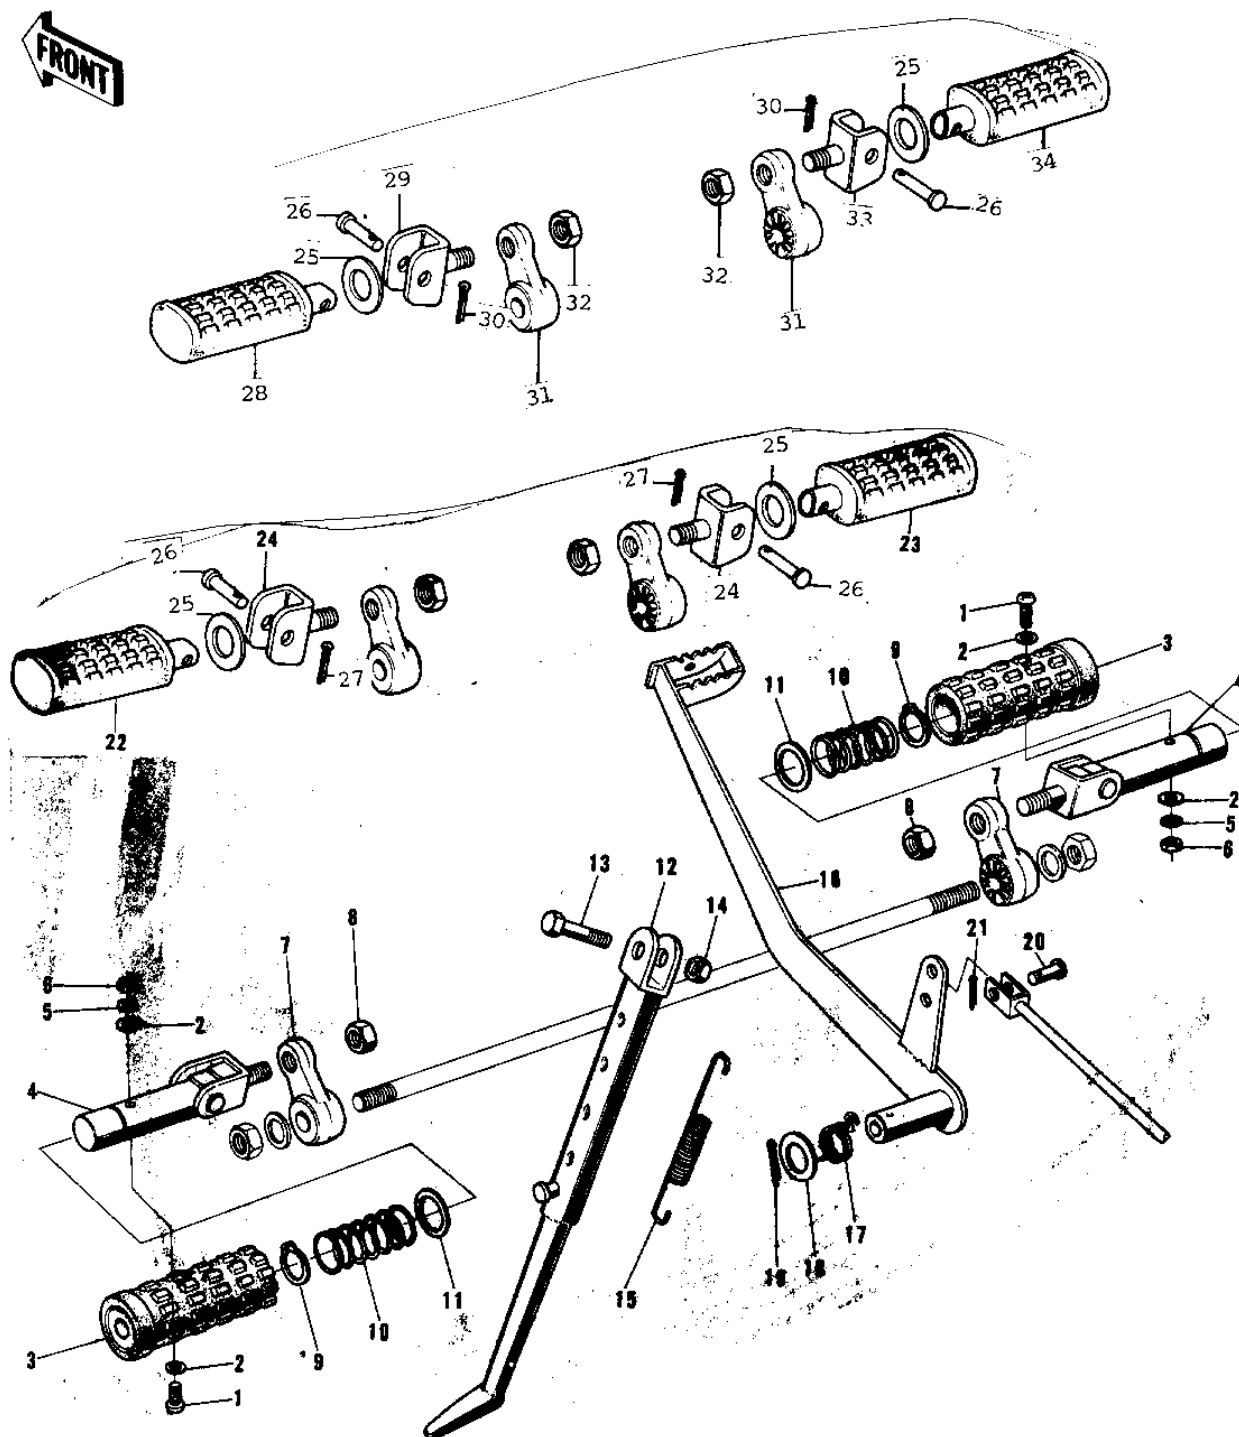

1975 F9-C

PARTS LIST

FOOTRESTS/STAND/BRAKE PEDAL ('74-'75 F9-

ITEM NAME	PART NUMBER	QUANTITY
SCREW-PAN-CROS (Ref # 1)	220B0540	
WASHER PLAIN 5MM (Ref # 2)	410B0500	
RUBBER-FOOTREST (Ref # 3)	92076-023	
BAR-FOOTREST (Ref # 4)	34003-032	
WASHER SPRING 5MM (Ref # 5)	461F0500	
NUT,5MM (Ref # 6)	311B0500	
BRACKET-FOOTREST BAR (Ref # 7)	34007-009	
NUT-LOCK,12MM (Ref # 8)	92019-009	
CIRCLIP 16MM (Ref # 9)	480J1600	
SPRING FOOTREST PEG (Ref # 10)	34006-002	
WASHER FOLDING PEG (Ref # 11)	92022-049	
STAND-SIDE (Ref # 12)	34024-025	
BOLT,HEX HEAD 10X35 (Ref # 13)	92001-1252	
NUT 10MM (Ref # 14)	315B1000	
SPRING MAIN STAND (Ref # 15)	34023-005	
PEDAL-BRAKE,BLACK (Ref # 16)	43001-036-10	
SPRING-BRAKE PEDAL (Ref # 17)	43005-013	
WASHER BRAKE PEDAL (Ref # 18)	92022-085	
PIN COTTER 3.0X30 (Ref # 19)	550D3030	
PIN R BRK CABLE JOIN (Ref # 20)	92043-034	
PIN COTTER 2.0X15 (Ref # 21)	550D2015	
STEP-ASSY,FR,LH (Ref # 22)	34027-1114	
STEP-ASSY,FR,RH (Ref # 23)	34027-1115	
HOLDER,FOTRST BAR,LH (Ref # 24)	34021-001-10	
WASHER PL 22.5X36X2. (Ref # 25)	92022-204	
PIN-FOOTREST BAR FIT (Ref # 26)	92043-080	
PIN,COTTER,2.5X15 (Ref # 27)	550D2515	
STEP-ASSY,FR,LH (Ref # 28)	34027-1114	
HOLDER,FOTRST BAR,LH (Ref # 29)	34021-001-10	