


1987 300 SX

PARTS DIAGRAM

Starter Motor(JS300-A1)

Kawasaki
Let the Good Times Roll®

E1810-0086

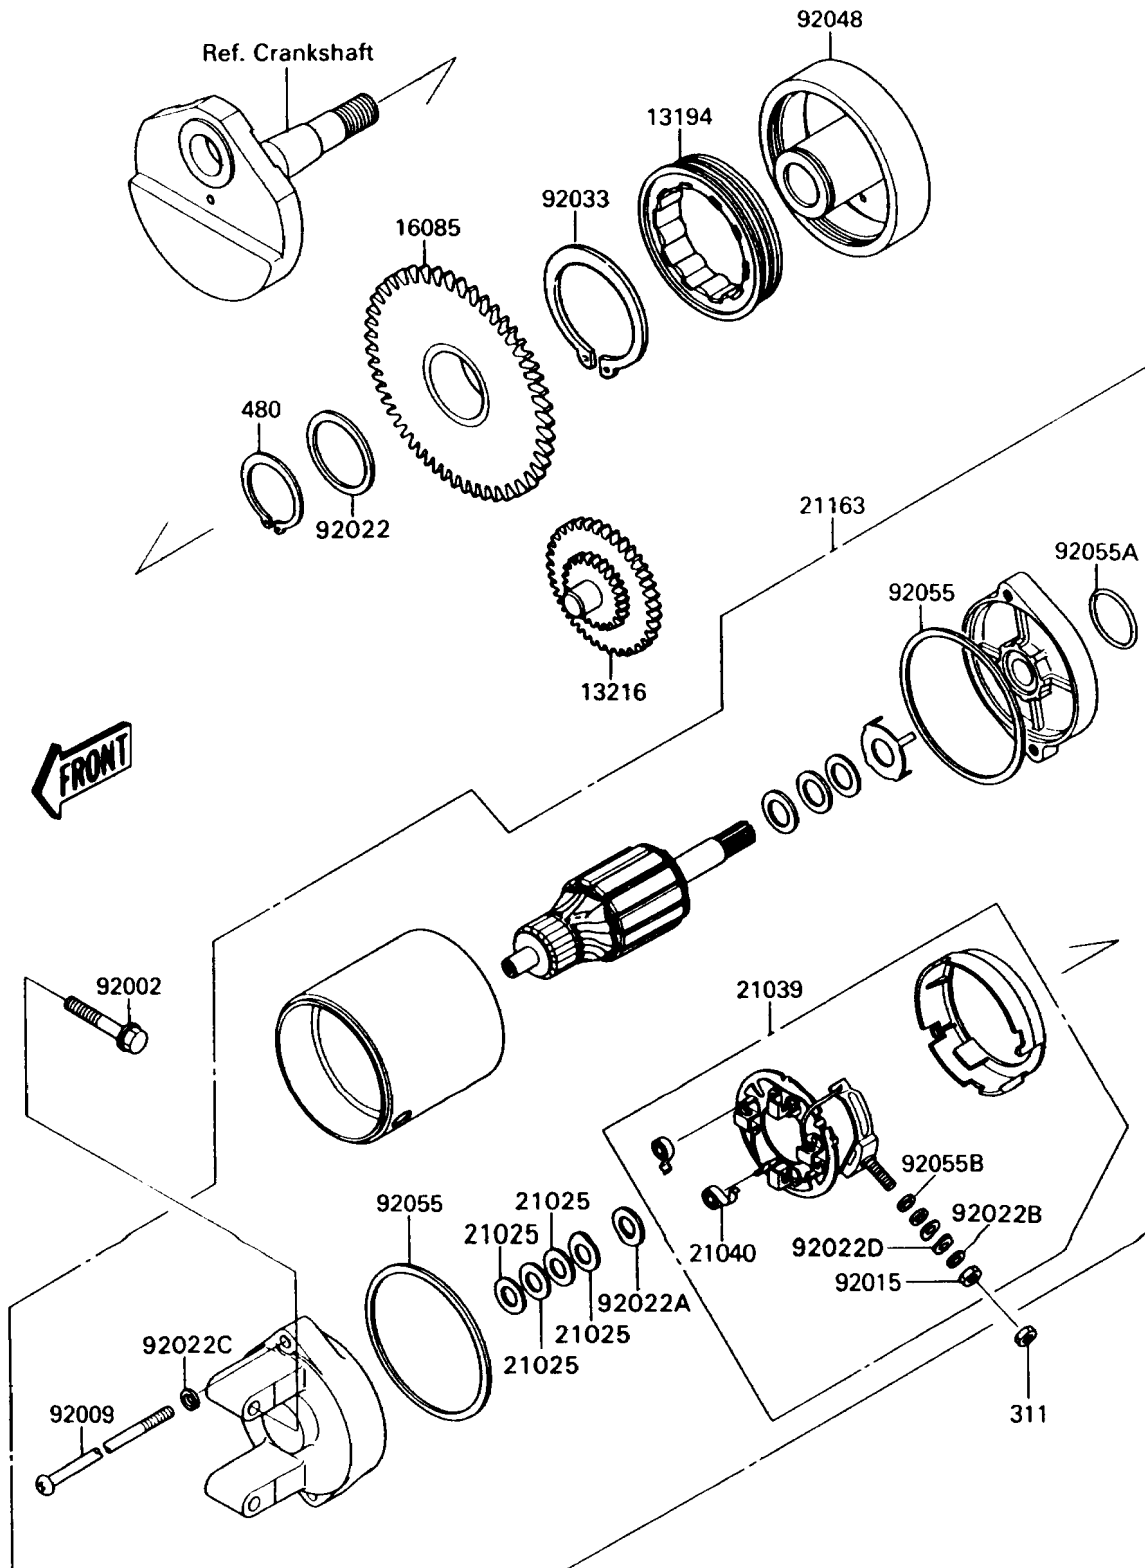

1987 300 SX

PARTS LIST

Starter Motor(JS300-A1)

ITEM NAME	PART NUMBER	QUANTITY
CLUTCH-ONEWAY (Ref # 13194)	13194-3703	1
GEAR-COMP,STARTER IDLE (Ref # 13216)	13216-1009	1
GEAR,STARTER,59T (Ref # 16085)	16085-3701	1
WASHER,9.1X18X0.2 (Ref # 21025)	21025-011	4
BRUSH,CARBON (Ref # 21039)	21039-3702	1
SPRING-BRUSH (Ref # 21040)	21040-1003	4
STARTER-ELECTRIC (Ref # 21163)	21163-3703	1
BOLT,6X35 (Ref # 92002)	92002-3715	2
SCREW,STARTER MOTOR (Ref # 92009)	92009-3702	2
NUT,6MM (Ref # 92015)	92015-3710	1
WASHER,36.3X46X2 (Ref # 92022)	92022-1102	1
WASHER,9.1X18X0.8 (Ref # 92022A)	92022-1132	1
WASHER,6MM (Ref # 92022B)	92022-3711	2
WASHER,SPRING,5MM (Ref # 92022C)	92022-3712	2
WASHER,6MM (Ref # 92022D)	92022-3713	1
RING-SNAP (Ref # 92033)	92033-3706	1
RACE,CLUTCH (Ref # 92048)	92048-3706	1
RING-O,64MM (Ref # 92055)	92055-1086	2
RING-O (Ref # 92055A)	92055-1276	1
RING-O,4.5X2.0 (Ref # 92055B)	92055-1370	1
NUT-HEX,6MM (Ref # 311)	311R0600	1
CIRCLIP-TYPE-C,36MM (Ref # 480)	480J3600	1