


1987 KX250

PARTS DIAGRAM

KICKSTARTER MECHANISM

Kawasaki
Let the Good Times Roll®

E1340-0062

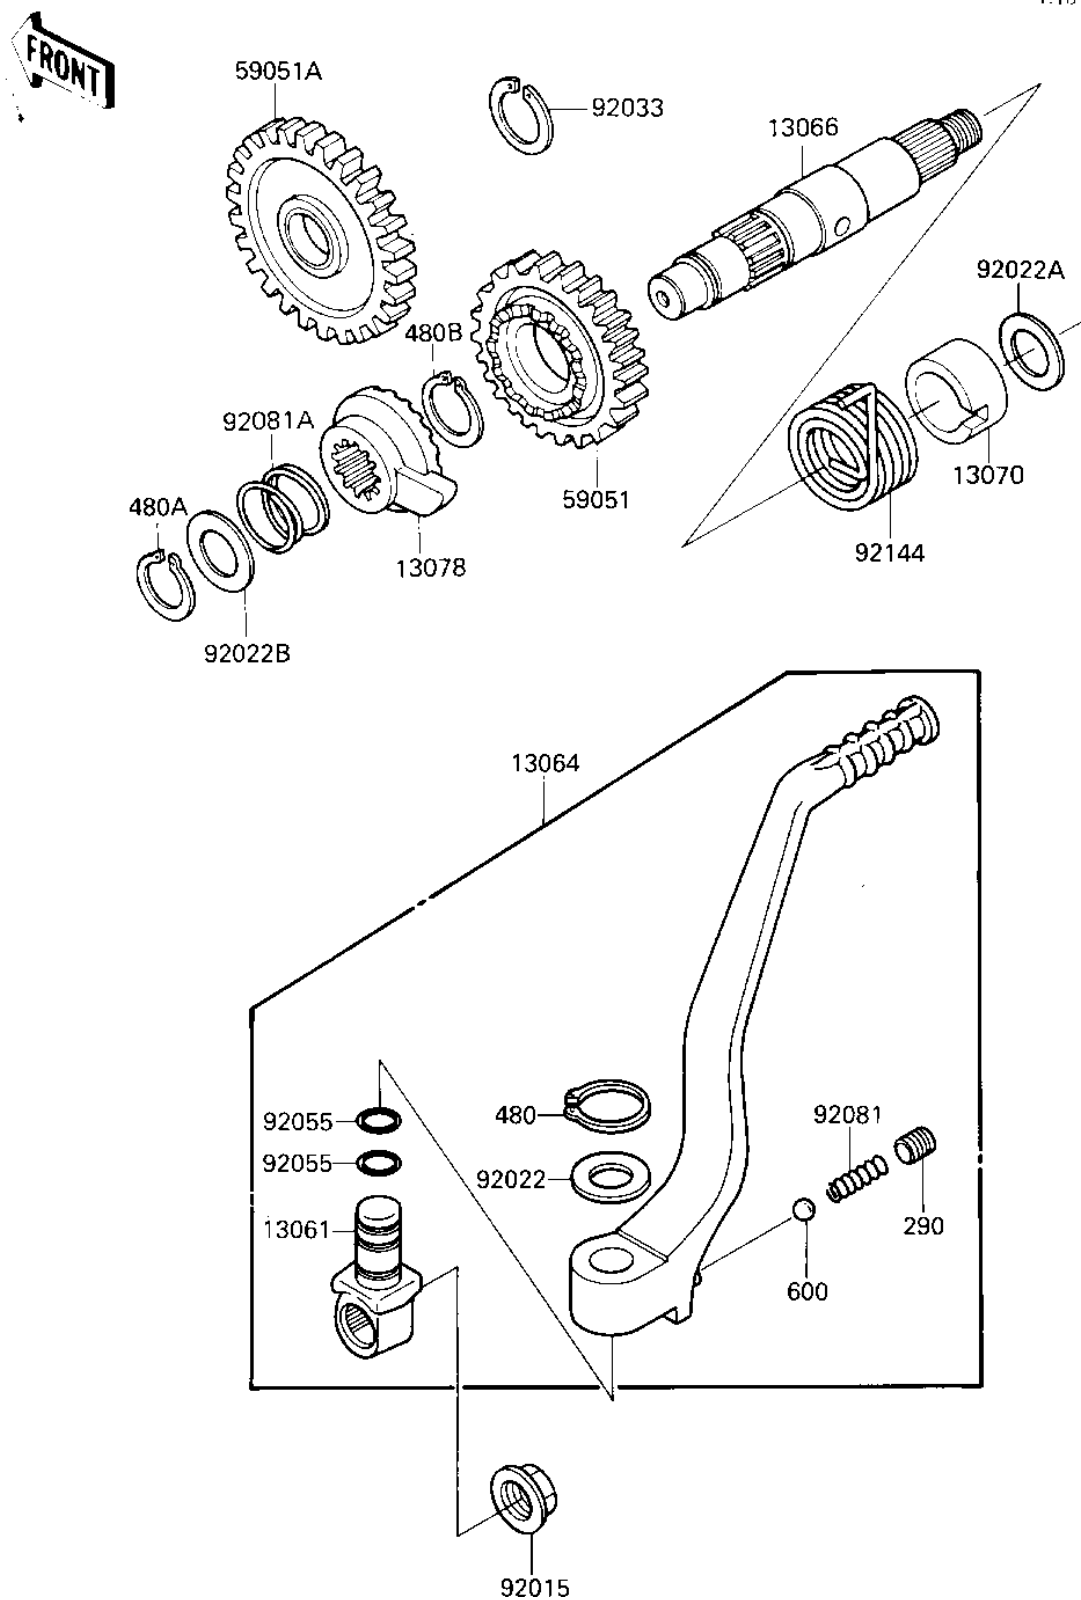

1987 KX250

PARTS LIST

KICKSTARTER MECHANISM

ITEM NAME	PART NUMBER	QUANTITY
BOSS,KICKSTARTER PEDA (Ref # 13061)	13061-1211	1
LEVER-ASSY-KICK,PEDAL (Ref # 13064)	13064-1131	1
SHAFT-KICK (Ref # 13066)	13066-1064	1
GUIDE,KICK SPRING (Ref # 13070)	13070-1063	1
RATCHET (Ref # 13078)	13078-1061	1
GEAR-SPUR (Ref # 59051)	59051-1230	1
GEAR,KICKSTARTER IDLE (Ref # 59051A)	59051-1271	1
NUT,FLANGED,10MM (Ref # 92015)	92015-1428	1
WASHER,16.3X24X1 (Ref # 92022)	92022-1205	1
WASHER,PLAIN (Ref # 92022A)	92022-271	1
WASHER,PLAIN (Ref # 92022B)	92022-271	1
CIRCLIP,18MM (Ref # 92033)	92033-029	1
"O" RING (Ref # 92055)	92055-061	2
SPRING KICK PEDAL (Ref # 92081)	92081-020	1
SPRING,RATCHET (Ref # 92081A)	92081-122	1
SPRING,KICKSTARTER (Ref # 92144)	92144-1076	1
SCREW-SET-SOCKET (Ref # 290)	290P0816	1
CIRCLIP 15MM (Ref # 480)	480J1500	1
CIRCLIP 16MM (Ref # 480A)	480J1600	1
CIRCLIP 18MM (Ref # 480B)	480J1800	1
BALL STEEL 1/4' (Ref # 600)	600A0800	1