

# 1973 G3SS-C


## PARTS DIAGRAM

### CHASSIS ELECTRICAL EQUIPMENT (EXCEPT G3S)

**Kawasaki**

Let the Good Times Roll®

Ref.No. Part No.

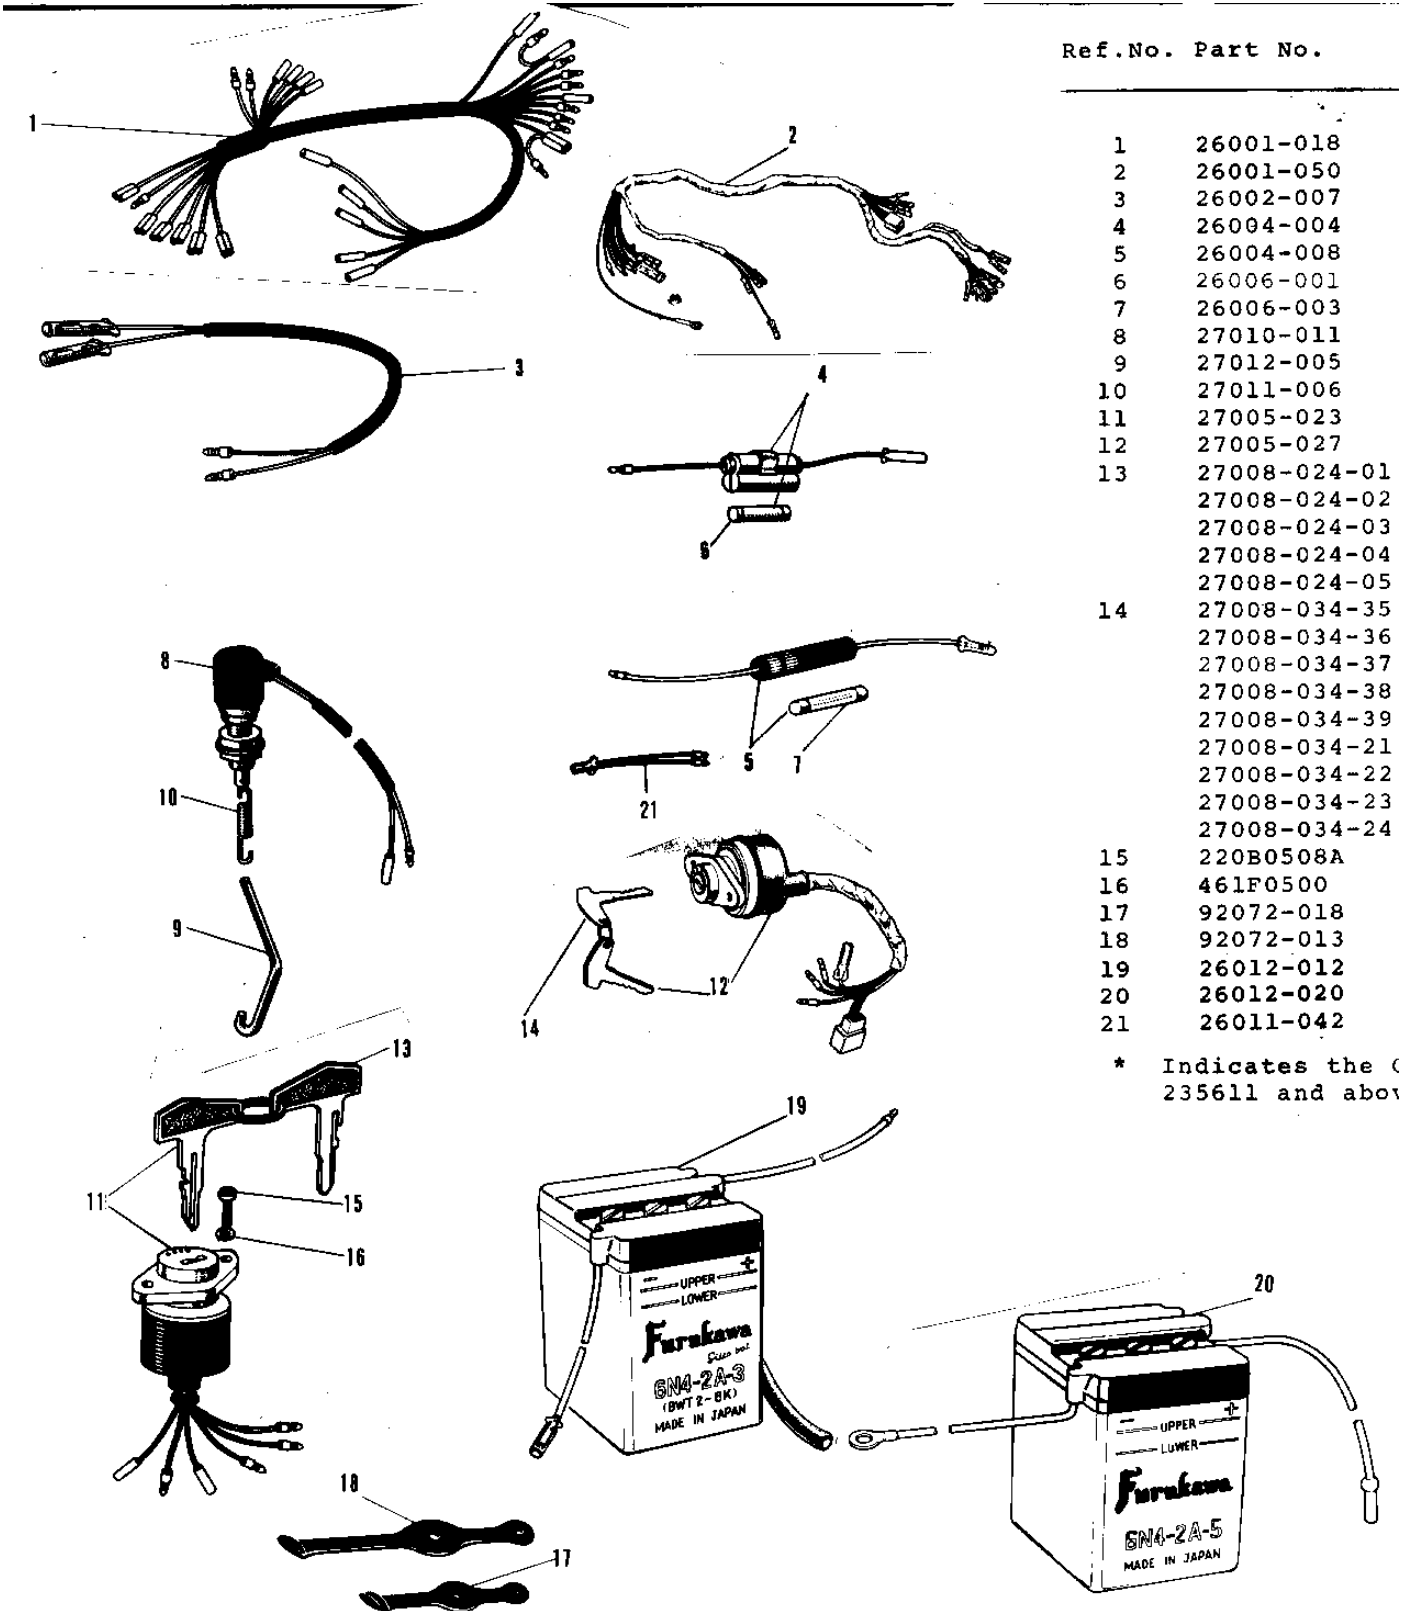

1	26001-018
2	26001-050
3	26002-007
4	26004-004
5	26004-008
6	26006-001
7	26006-003
8	27010-011
9	27012-005
10	27011-006
11	27005-023
12	27005-027
13	27008-024-01
	27008-024-02
	27008-024-03
	27008-024-04
	27008-024-05
14	27008-034-35
	27008-034-36
	27008-034-37
	27008-034-38
	27008-034-39
	27008-034-21
	27008-034-22
	27008-034-23
	27008-034-24
15	220B0508A
16	461F0500
17	92072-018
18	92072-013
19	26012-012
20	26012-020
21	26011-042

\* Indicates the (C 235611 and above

# 1973 G3SS-C

## PARTS LIST

### CHASSIS ELECTRICAL EQUIPMENT (EXCEPT G3S

**ITEM NAME**

**PART NUMBER**

**QUANTITY**

---