


1971 G3SS-A

PARTS DIAGRAM

HANDLEBAR (G3SS-E) ('74-'75)

Kawasaki
Let the Good Times Roll®

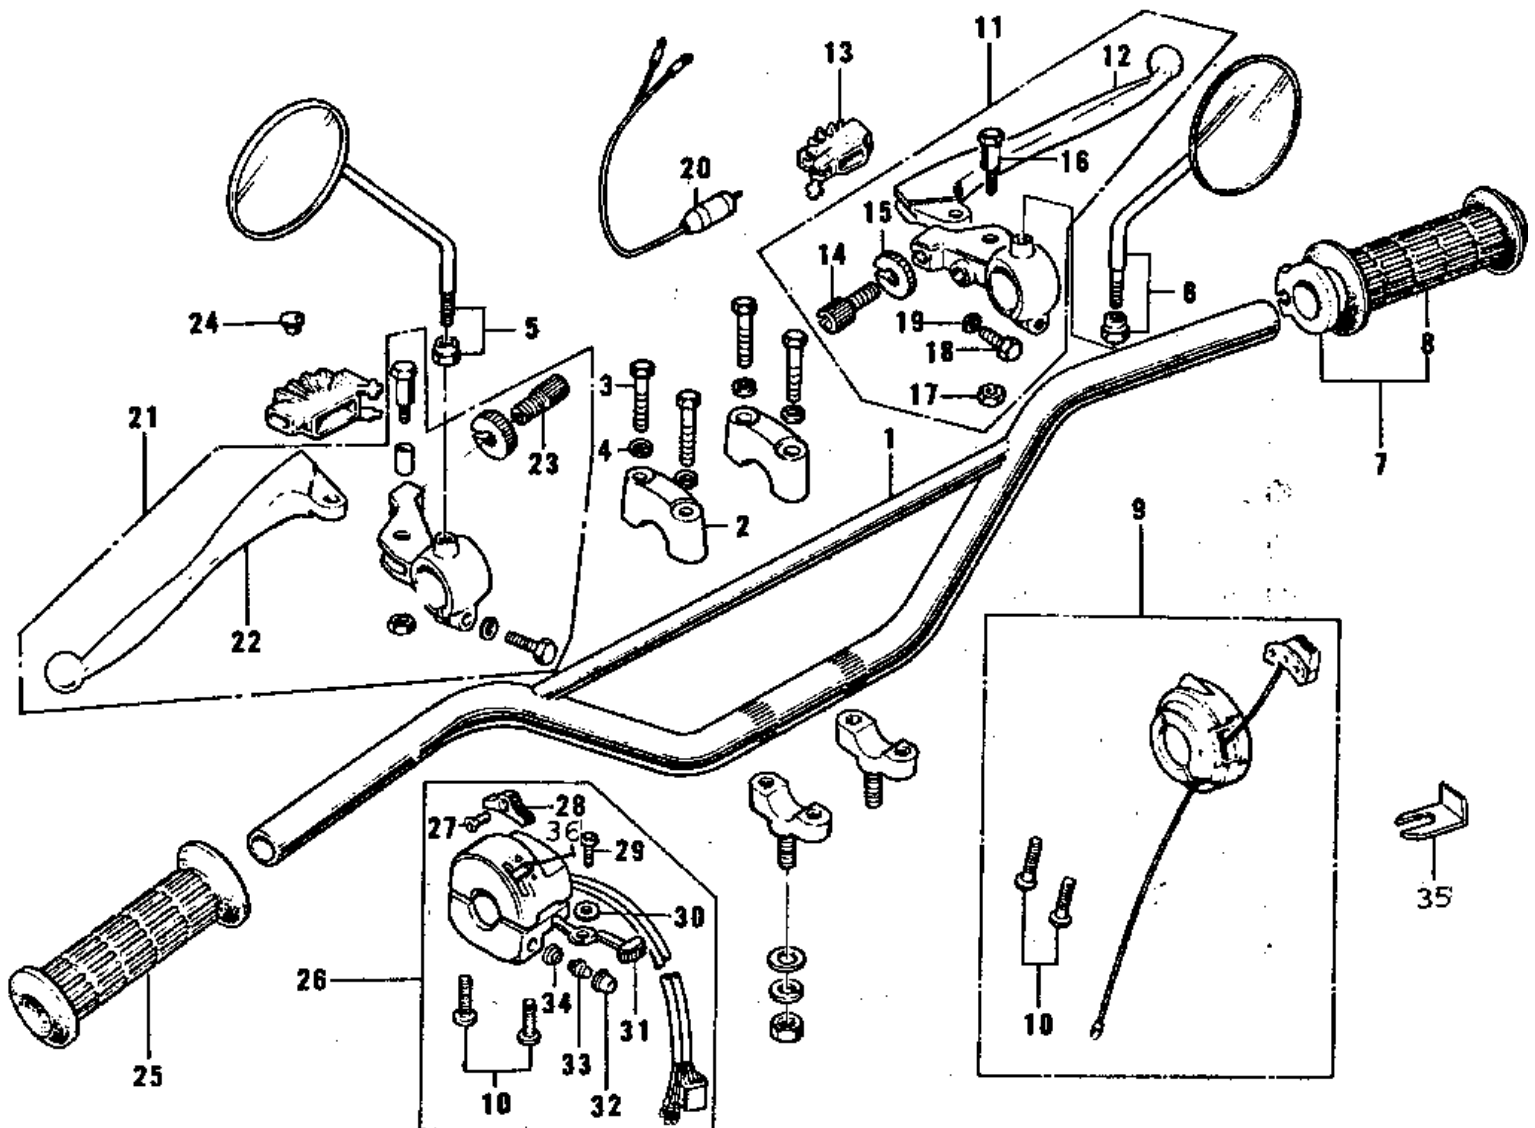

1971 G3SS-A

PARTS LIST

HANDLEBAR (G3SS-E) ('74-'75)

ITEM NAME	PART NUMBER	QUANTITY
HANDLEBAR (Ref # 1)	46003-035	1
HOLDER UPPER HANDLBAR (Ref # 2)	46012-004	2
BOLT 8X38 (Ref # 3)	92001-1405	4
WASHER SPRING 8MM (Ref # 4)	461F0800	4
REAR VIEW MIRROR,L.H (Ref # 5)	56003-009	1
REAR VIEW MIRROR,R.H (Ref # 6)	56002-020	1
GRIP ASSY,THROTTLE (Ref # 7)	46019-034	1
RUBBER-R.H. GRIP (Ref # 8)	46061-013	1
CASE ASSY,R.H (Ref # 9)	46018-036	1
SCREW-PAN-CROS,5X25 (Ref # 10)	220B0525	4
LEVER ASSY,FRONT BRK (Ref # 11)	46021-029	1
LEVER FRONT BRAKE (Ref # 12)	46058-004	1
DUST COVER (Ref # 13)	46071-002	2
SCREW,CABLE ADJUST (Ref # 14)	46055-010	1
NUT-LOCK (Ref # 15)	46056-005	2
BOLT,HEX HEAD,5X22 (Ref # 16)	92007-046	2
NUT-LOCK,5MM (Ref # 17)	92019-014	2
BOLT-UPSET (Ref # 18)	112G0625	2
WASHER PLAIN 6MM (Ref # 19)	410B0600	2
SWITCH-FR. BRAKE LAMP (Ref # 20)	27021-004	1
LEVER ASSY,CLUTCH (Ref # 21)	46076-044	1
LEVER-CLUTCH (Ref # 22)	46092-015	1
SCREW,CABLE ADJUST (Ref # 23)	46055-009	1
CAP-RR VIEW MIRROR (Ref # 24)	92102-009	1
RUBBER-L.H GRIP (Ref # 25)	46075-019	1
CASE ASSY,L.H (Ref # 26)	46091-048	1
L.H GRIP SWITCH KIT (Ref # 27,28,)	99990-531	1
SCREW CNTSNK HD 3X8 (Ref # 27)	221B0308A	1
KNOB-L.H SWITCH (Ref # 28)	46044-011	1

1971 G3SS-A

PARTS LIST

HANDLEBAR (G3SS-E) ('74-'75)

ITEM NAME	PART NUMBER	QUANTITY
SCREW PAN HEAD 3X5 (Ref # 29)	220B0305A	1
WASHER (Ref # 30)	92095-010	1
KNOB-SWITCH (Ref # 31)	46044-010	1
SWITCH ASSY,HORN BUTN (Ref # 32)	27010-1009	1
SWITCH ASSY,HORN BUTN (Ref # 33)	27010-1009	1
SWITCH ASSY,HORN BUTN (Ref # 34)	27010-1009	1
SWITCH ASSY,L.H (Ref # 35)	46089-015	1
HOLDER,CONTROL CABLE (Ref # 36)	46037-023	1