


1973 G4TR-C

PARTS DIAGRAM

FOOTRESTS/STAND/BRAKE PEDAL G4TR-C ('70-

Kawasaki

Let the Good Times Roll®

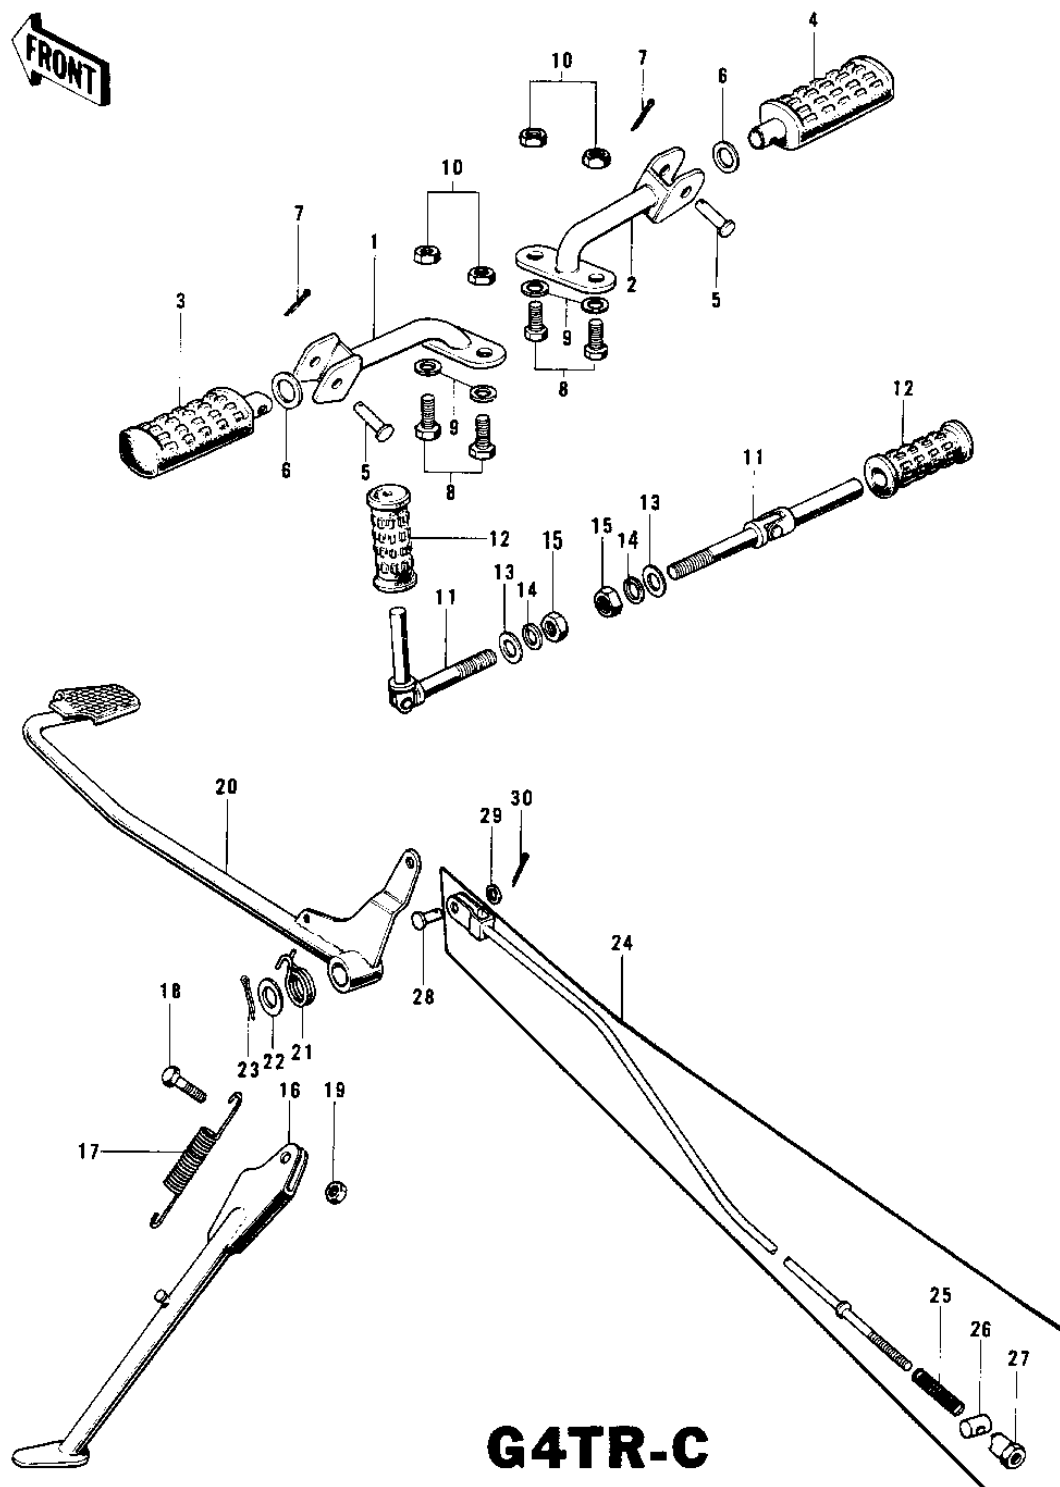

1C

G4TR-C

1973 G4TR-C

PARTS LIST

FOOTRESTS/STAND/BRAKE PEDAL G4TR-C ('70-

ITEM NAME	PART NUMBER	QUANTITY
BAR,L.H FOOTREST (Ref # 1)	34003-047	
BAR,L.H FOOTREST (Ref # 1)	34003-047	
BAR,R.H FOOTREST (Ref # 2)	34003-048	
BAR,R.H FOOTREST (Ref # 2)	34003-048	
STEP-ASSY,FR,LH (Ref # 3)	34027-1114	
STEP-ASSY,FR,LH (Ref # 3)	34027-1114	
STEP-ASSY,FR,RH (Ref # 4)	34027-1115	
STEP-ASSY,FR,RH (Ref # 4)	34027-1115	
PIN-FOOTREST BAR FIT (Ref # 5)	92043-080	
WASHER PL 22.5X36X2.3 (Ref # 6)	92022-204	
PIN,COTTER,2.5X15 (Ref # 7)	550D2515	
BOLT-UPSET,10X20 (Ref # 8)	112B1020	
WASHER PLAIN 10MM (Ref # 9)	410B1000	
NUT 10MM (Ref # 10)	315B1000	
BAR-RR FOOTREST (OPT) (Ref # 11)	34028-009	
RUBBER,REAR FOOTREST (Ref # 12)	92076-024	
WASHER-PLAIN (OPT) (Ref # 13)	92022-199	
WASHER SPRING 10MM (Ref # 14)	461F1000	
NUT,10MM (Ref # 15)	314B1000	
STAND-SIDE (Ref # 16)	34024-035	
SPRING,SIDE STAND (Ref # 17)	34025-001	
BOLT,HEX HEAD,10X25 (Ref # 18)	113G1025	
NUT 10MM (Ref # 19)	315B1000	
PEDAL-BRAKE (Ref # 20)	43001-045	
SPRING BRAKE PEDAL (Ref # 21)	43005-007	
WASHER BRAKE PEDAL (Ref # 22)	92022-085	
PIN COTTER 3.0X30 (Ref # 23)	550D3030	
ROD ASSY,BRAKE (Ref # 24)	43010-016	
ROD ASSY,BRAKE (Ref # 24)	43010-016	