


1973 G4TR-C

PARTS DIAGRAM

FOOTRESTS/STAND/BRAKE PEDAL ('74-'75)

Kawasaki
Let the Good Times Roll®

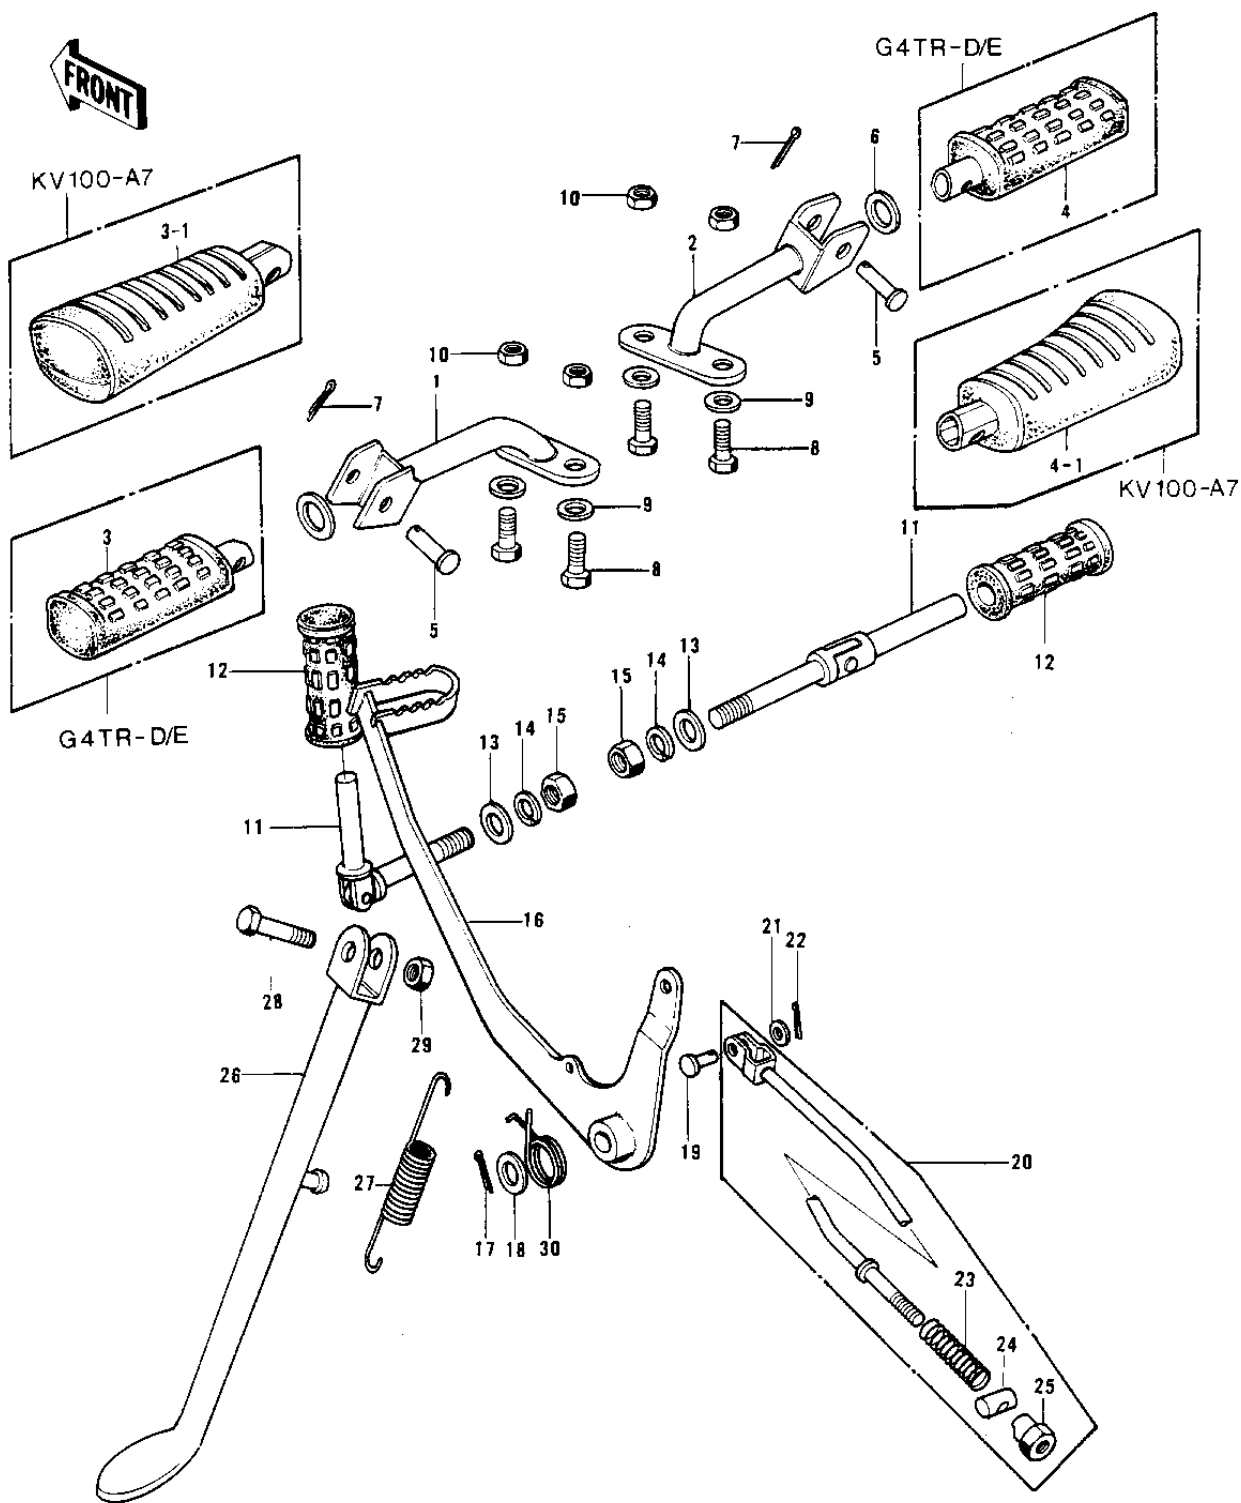

1973 G4TR-C

PARTS LIST

FOOTRESTS/STAND/BRAKE PEDAL ('74-'75)

ITEM NAME	PART NUMBER	QUANTITY
BAR,L.H FOOTREST (Ref # 1)	34003-047	
BAR,R.H FOOTREST (Ref # 2)	34003-048	
STEP-ASSY,FR,LH (Ref # 3)	34027-1114	
STEP-ASSY,FR,LH (Ref # 3-1)	34027-1114	
STEP-ASSY,FR,RH (Ref # 4)	34027-1115	
STEP-ASSY,FR,RH (Ref # 4-1)	34027-1115	
PIN-FOOTREST BAR FIT (Ref # 5)	92043-080	
WASHER PL 22.5X36X2.3 (Ref # 6)	92022-204	
PIN COTTER 2.5X16 (Ref # 7)	550D2516	
BOLT-UPSET,10X20 (Ref # 8)	112B1020	
WASHER PLAIN 10MM (Ref # 9)	410B1000	
NUT 10MM (Ref # 10)	315B1000	
BAR SET-REAR FOOTREST (Ref # 11)	34030-001	
RUBBER REAR FOOTREST (Ref # 12)	92076-008	
WASHER PLAIN 10MM (Ref # 13)	410B1000	
WASHER SPRING 10MM (Ref # 14)	461F1000	
NUT,10MM (Ref # 15)	314B1000	
PEDAL,BRAKE (Ref # 16)	43001-055	
PIN COTTER 3.0X30 (Ref # 17)	550D3030	
WASHER BRAKE PEDAL (Ref # 18)	92022-085	
PIN-BRAKE ROD FITTING (Ref # 19)	92043-064	
ROD ASSY,BRAKE (Ref # 20)	43010-016	
WASHER PLAIN 6MM (Ref # 21)	410B0600	
PIN COTTER 2.0X15 (Ref # 22)	550D2015	
SPRING,BRAKE ROD (Ref # 23)	43012-001	
PIN BRAKE (Ref # 24)	92043-039	
NUT-BRAKE ROD ADJUST (Ref # 25)	92015-042	
STAND-SIDE (Ref # 26)	34024-028	
SPRING MAIN STAND (Ref # 27)	34023-005	