


1973 F7-B

PARTS DIAGRAM

FOOTRESTS/STAND/BRAKE/PEDAL

Kawasaki
Let the Good Times Roll®

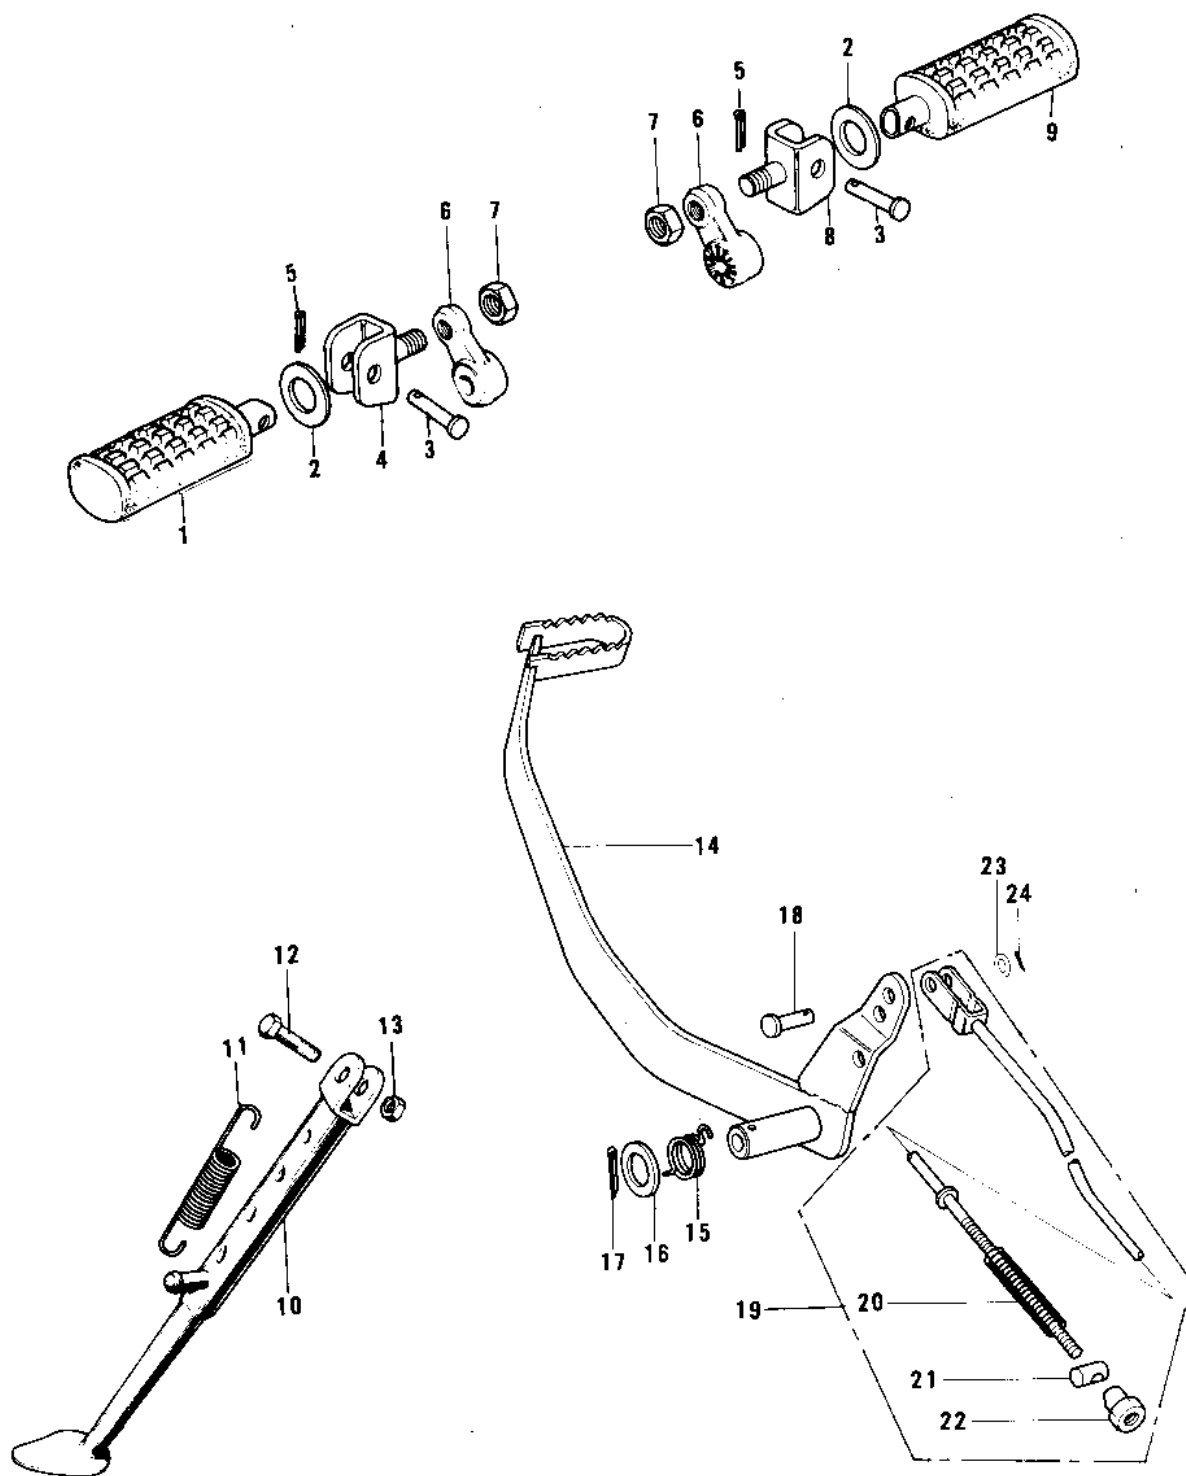

1973 F7-B

PARTS LIST

FOOTRESTS/STAND/BRAKE/PEDAL

ITEM NAME	PART NUMBER	QUANTITY
STEP-ASSY,FR,LH (Ref # 1)	34027-1114	
WASHER PL 22.5X36X2.3 (Ref # 2)	92022-204	
PIN-FOOTREST BAR FIT (Ref # 3)	92043-080	
HOLDER,FOTRST BAR,LH (Ref # 4)	34021-001-10	
PIN,COTTER,2.5X15 (Ref # 5)	550D2515	
BRACKET-FOOTREST BAR (Ref # 6)	34007-009	
NUT-LOCK,12MM (Ref # 7)	92019-009	
HOLDER-FOTRST BAR,RH (Ref # 8)	34021-003-10	
STEP-ASSY,FR,RH (Ref # 9)	34027-1115	
STAND-SIDE (Ref # 10)	34024-028	
SPRING MAIN STAND (Ref # 11)	34023-005	
BOLT,10X28 (Ref # 12)	113G1028	
NUT 10MM (Ref # 13)	315B1000	
PEDAL-BRAKE (Ref # 14)	43001-046	
SPRING,BRAKE PEDAL (Ref # 15)	43005-033	
WASHER BRAKE PEDAL (Ref # 16)	92022-085	
PIN COTTER 3.0X30 (Ref # 17)	550D3030	
PIN-BRAKE ROD FITTING (Ref # 18)	92043-064	
ROD ASSY-BRAKE (Ref # 19)	43010-013	
SPRING,BRAKE ROD (Ref # 20)	43012-001	
PIN BRAKE (Ref # 21)	92043-039	
NUT-BRAKE ROD ADJUST (Ref # 22)	92015-042	
WASHER PLAIN 6MM (Ref # 23)	410B0600	
PIN COTTER 2.0X15 (Ref # 24)	550D2015	