






1976 KX250-A3

PARTS DIAGRAM

KICKSTARTER MECHANISM (74-76)


Kawasaki

Let the Good Times Roll®

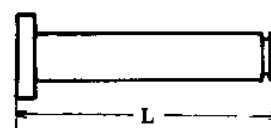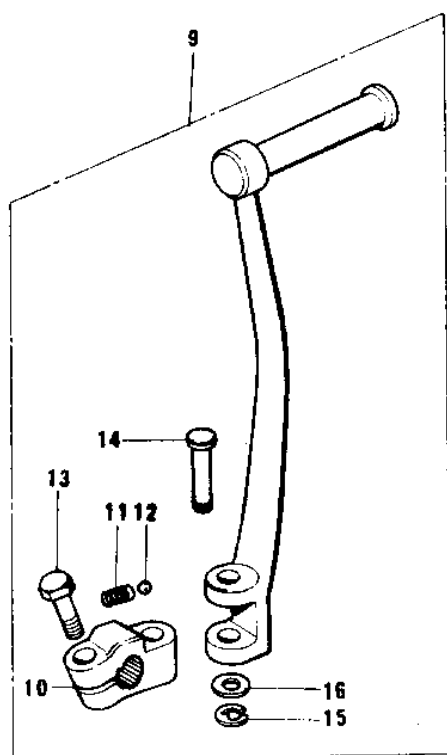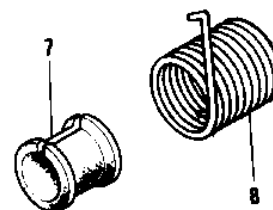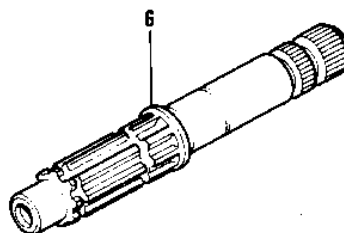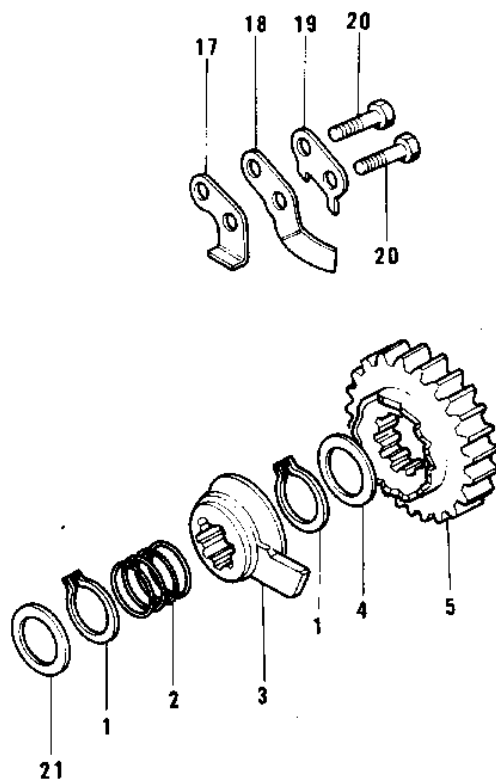


L=47.5 m/m P/N 92043-075

L=51.5 m/m P/N 92043-081

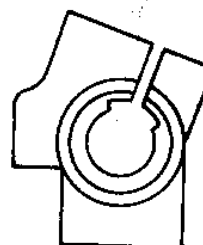

P/N 13061-019

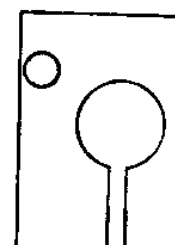

P/N 13061-020

1976 KX250-A3

PARTS LIST

KICKSTARTER MECHANISM (74-76)

ITEM NAME	PART NUMBER	QUANTITY
CIRCLIP (Ref # 1)	92033-026	
SPRING (Ref # 2)	92081-097	
RATCHET (Ref # 3)	13078-007	
WASHER-PLAIN 25MM (Ref # 4)	92022-159	
GEAR-KICKSTARTER (Ref # 5)	13068-025	
SHAFT,KICKSTARTER (Ref # 6)	13066-034	
GUIDE,KICKSTARTER (Ref # 7)	13070-007	
SPRING-KICKSTARTER (Ref # 8)	92082-003	
PEDAL ASSY, KICK (Ref # 9)	13058-056	
PEDAL ASSY, KICK (Ref # 9)	13058-056	
BOSS,KICK PEDAL (Ref # 10)	13061-019	
BOSS,KICK PEDAL (Ref # 10)	13061-023	
SPRING KICK PEDAL (Ref # 11)	92081-020	
BALL STEEL 1/4" (Ref # 12)	600A0800	
BOLT-SMALL-UPSET,8X30 (Ref # 13)	115G0830	
BOLT,HEX HEAD,8X30 (Ref # 13)	92001-144	
PIN-KICKSTARTER (Ref # 14)	92043-075	
PIN-KICK PEDAL (Ref # 14)	92043-081	
CIRCLIP 5MM (Ref # 15)	482K5000	
WASHER PLAIN 8MM (Ref # 16)	410B0800	
STOPPER,KICKSHAFT (Ref # 17)	13072-016	
GUIDE,KICK STOPPER (Ref # 18)	13206-011	
WASHER,KICKSTOP GUIDE (Ref # 19)	92031-010	
BOLT-UPSET (Ref # 20)	112G0618	
BOLT-UPSET (Ref # 20)	112G0618	
WASHER (Ref # 21)	92022-252	