

PARTS DIAGRAM FRONT HUB/BRAKE

Let the Good Times Roll®

Exploded view diagram of a vehicle axle assembly. The diagram shows the following components and their part numbers:

- 41068**: Axle shaft
- 41034**: Axle housing (upper)
- 92027A**: Axle nut
- 411**: Axle washer
- 601**: Axle seal
- 92049A**: Axle seal
- 601A**: Axle seal
- 92027**: Axle seal
- 41035**: Axle housing (lower)
- 41048**: Axle bracket
- 92049**: Axle bracket
- 92081**: Axle spring
- 41050**: Axle nut
- 41064**: Axle nut
- 41060**: Axle gear
- 41060A**: Axle gear
- 92022**: Axle nut
- 92028**: Axle nut
- 92015**: Axle nut
- 92043**: Axle nut
- 41085**: Axle bracket
- 92055**: Axle bracket
- 110**: Axle nut
- 41053**: Axle bracket

1985 KE100 (Canada Only)

PARTS LIST

FRONT HUB/BRAKE



ITEM NAME	PART NUMBER	QUANTITY
-----------	-------------	----------