

PARTS DIAGRAM FRONT HUB/BRAKE

Let the Good Times Roll®

Exploded view diagram of a vehicle axle assembly. The diagram shows the following components and their part numbers:

- 41068**: Axle shaft
- 41034**: Axle housing (upper)
- 92027A**: Axle nut
- 411**: Axle washer
- 601**: Axle seal
- 92049A**: Axle seal
- 601A**: Axle seal
- 92027**: Axle seal
- 41035**: Axle housing (lower)
- 41048**: Axle bracket
- 92049**: Axle bracket
- 92081**: Axle spring
- 41050**: Axle nut
- 41064**: Axle nut
- 41060**: Axle gear
- 41060A**: Axle gear
- 92022**: Axle nut
- 92028**: Axle nut
- 92015**: Axle nut
- 92043**: Axle nut
- 41085**: Axle bracket
- 92055**: Axle bracket
- 110**: Axle nut
- 41053**: Axle bracket

1985 KE100 (Canada Only)

PARTS LIST

FRONT HUB/BRAKE

ITEM NAME	PART NUMBER	QUANTITY
DRUM-ASSY,FR BRK (Ref # 41034)	41034-1047	1
PANEL-ASSY-BRAKE,FR (Ref # 41035)	41035-1291	1
SHOE-BRAKE (Ref # 41048)	41048-1085	2
CAM SHAFT-FRONT BRAKE (Ref # 41050)	41050-018	1
LEVER FRONT BRAKE CAM (Ref # 41053)	41053-005	1
GEAR,SPEEDOMETER (Ref # 41060)	41059-022	1
PINION SPEEDOMETER (Ref # 41060A)	41060-004	1
RECEIVER,SPEED GEAR (Ref # 41064)	41064-010	1
AXLE-FRONT (Ref # 41068)	41068-039	1
INDICATOR,BK SHOE (Ref # 41085)	41085-008	1
NUT,6MM (Ref # 92015)	41072-007	1
NUT 10MM (Ref # 92015A)	42045-005	1
WASHER THRST SPD PINI (Ref # 92022)	41063-001	2
SPACER FRONT HUB (Ref # 92027)	41039-002	1
COLLAR,FRONT AXLE (Ref # 92027A)	41069-026	1
BUSH,SPEEDMETER CABLE (Ref # 92028)	41062-005	1
PIN,SPRING (Ref # 92043)	41082-001	1
OIL SEAL BRAKE PANEL (Ref # 92049)	92050-002	1
OIL SEAL,TC17317 (Ref # 92049A)	92050-063	1
"O" RING,11MM (Ref # 92055)	92055-004	1
SPRING,BRAKE SHOE (Ref # 92081)	92081-1766	2
BOLT-UPSET (Ref # 110)	112G0630	1
WASHER PLAIN 10MM (Ref # 411)	411B1000	2
BEARING BALL #6200 (Ref # 601)	601B6200	1
BEARING BALL #6300Z (Ref # 601A)	601B6300Z	1